
# **SERVICE MANUAL**


# RG-1 CHASSIS

MODEL	COMMANDER DEST.	CHASSIS NO.
KP-E41MH11	RM-901 ME	SCC-K61A-A
KP-E41MH11	RM-901 Hong Kong	SCC-K62A-A
KP-E41MN11	RM-901 GE	SCC-K63A-A
KP-E41SN11	RM-901 Austrarian	SCC-K64B-A

MODEL	COMMAN	DER DEST.	CHASSIS NO.
KP-E53MH11	RM-901	ME	SCC-K61B-A
KP-E53MH11	RM-901	Hong Kong	SCC-K62B-A
KP-E53MN11	RM-901	GE	SCC-K63B-A
KP-E53SN11	RM-901	Austrarian	SCC-K64A-A



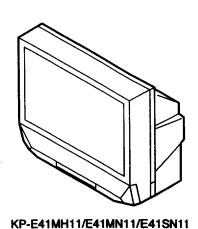

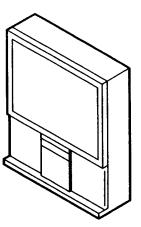

KP-E53MH11/E53MN11/E53SN11







#### **SPECIFICATIONS**

Projection system

3 picture tubes, 3 lenses, horizontal in-

line system

**Picture tube** 

7 inch high-brightness monochrome tubes (6.3 raster size), with optical

coupling and liquid cooling system

Projection lenses High performance, large-diameter

hybrid lens F1.0

Screen size 41 inches (KP-E41)

53 inches (KP-E53)

**Television system** 

B/G, I, D/K, M

**Color system** 

PAL, PAL 60, SECAM, NTSC4.43,

NTSC3.58 Channel coverage

See "Channel coverage" at the bottom

Antenna

75 ohm external antenna terminal

**Audio output (Speaker)** 15 W × 2

**Number of terminals** 

**Video Audio**  Input: 4, Output: 1 Input: 4, Output: 1

S1 Video/S Video

Input: 4, Output: 1

Y: 1 Vp-p, 75 ohms, unbalanced, sync

negative,

C: 0.286 Vp-p, 75 ohms

**Power requirement** 

110-240 V AC, 50/ 0 Hz

**Power consumption** 

175 W

Dimensions (w/h/d)

951×991×588 mm (KP-E41)

1164×1335 × 650 mm (KP-E53)

Mass

Approx. 56 kg (KP-E41) Approx. 89 kg (KP-E53)

Supplied accessories

Remote commander RM-901(1)

Size R6 (AA) battery (1)

Optional accessory

AV rack SU-E41 (KP-E41) AV rack SU-E53 (KP-E53)

Design and specifications are subject to change without notice. AMERICA/CATV AMERICA

#### HK/UK

Receivable channel	Channel display
Hong Kong, United	Kingdom
B-21 to B-68	C21 to C68
Ireland	
A to J	C01 to C09
South Africa	
4 to 13	C04 to C13
21 to 68	C21 to C68

#### **AUSTRALIA**

Receivable channel	Channel display
Australia	
AS-0 to AS-12	C00 to C12
AS-5A, AS-9A	C13, C14
AS-28 to AS-69	C28 to C69
New Zealand	
1	C00
2 to 3	C01 to C02
4 to 7	C06 to C09
8	C14
9 to 11	C10 to C12

#### **CHINA/E EURO**

Receivable channel	Channel display
China	
C-1 to C-2	C01 to C02
C-3	C13
C-4	C03
C-5	C04
C-6	C14
C-7 to C-12	C06 to C11
C-13 to C-24	C21 to C32
C-25 to C-47	C38 to C60
C-48 to C-57	C61 to C70
Z-1 to Z-39	S01 to S39
Eastern Europe	
R-1 to R-12	C01 to C12
R-21 to R-60	C21 to C60

Receivable channel	Channel display
2 to 79	C02 to C79
A-1	S99
A-2	S98
A-3	S97
A-4	S96
A-5	S95
A-6	S06
A-7	S05
A-8	S01
A to W	S14 to S36
AA to CCC	S37 to S65

## **JAPAN**

Receivable channel	Channel display
J-1 to J-62	C01 to C62
C-13 to C-32	C80 to C99

## Channel coverage

## **M E/ASIA/CATV W EURO**

Receivable channel	Channel display
E-2 to E-12	C02 to C12
E-21 to E-69	C21 to C69
S-01 to S-03	S42 to S44
S-1 to S-41	S01 to S41
Indonesia	
1A	C01
2 to 11	C03 to C12
Morocco	
M-4 to M-7	C70 to C73
M-8 to M-10	C08 to C10
New Zealand	
1	C01
2 to 11	C03 to C12
27 to 62	C27 to C62

## SECTION 1 GENERAL

The operation instruction mentioned here are partial abstracts from the Operating Instruction Manual. The page numbers of the Operating Instruction Manual remain as in the manual.

#### **Getting Started**

# Installing the projection TV

For the best picture quality, install the projection TV within the areas shown below.

Optimum viewing area (Horizontal)


KP-E41

KP-E53





Optimum viewing area (Vertical)

KP-E41

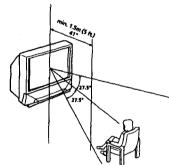


**KP-E53** 

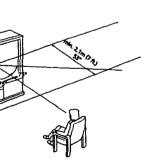

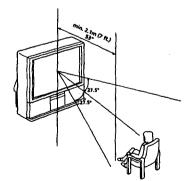

Changing the menu language


If you prefer Chinese to English, you can change the menu language. You can use the buttons on both the remote commander and the projection TV.

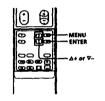

1 Press POWER on the projection TV.

KP-E41

KP-E53

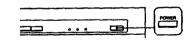

2 Press MENU.



PYIDEO CONTROL AUDIO CONTROL FEATURES PRESET LANGUAGE

3 Press  $\triangle$  + or  $\nabla$  – to move the cursor (>) to



VIDEO CONTROL AUDIO CONTROL FEATURES PRESET PLANGUAGE

4 Press ENTER.



LANGUAGE⊃ ▶ENGLISH CHINESE/中文

**5** Press  $\triangle$  + or  $\nabla$  - to select CHINESE.



LANGUAGEコ ENGLISH > CHINESE/中文

6 Press ENTER.



程言 化ANQUAGE 英文/ENGL 18H 中文

7 Press MENU to return to the normal screen.



# Adjusting the convergence (CONVERGENCE)

Before you use the projection TV, adjust convergence. The projection tube image appears on the screen in three layers (red, green and blue). If they do not converge, the color is poor and the picture blurs. To correct this, adjust convergence.


After 20-30 minutes of turning on the power, adjust convergence.

1 Press MENU.

G

- 2 Press △ + or ∇ to move the cursor (►) to FEATURES and press ENTER.
- 3 Press △ + or ▽ to move the cursor (►) to CONVERGENCE and press ENTER.

  The CONVERGENCE adjustment screen appears.

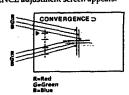


4 Press △+ or ∇ – to move the cursor (►) to the symbol showing the line you want to adjust, and press ENTER.



- +: Red vertical line (left/right adjustment)
- +: Red horizontal line (up/down adjustment)
- +: Blue vertical line (left/right adjustment)
- +: Blue horizontal line (up/down adjustment)

5 Press △ + or ▽ - to move the line until it converges with the center green line, and press ENTER.

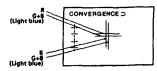

To move up/right, press  $\Delta$  +. To move down/left, press  $\nabla$  -.

6 Repeat step 4 and 5 to adjust the other lines until all three lines converge and are seen as a white cross.



7 Press MENU to return to the normal screen.

## **Presetting channels**

You can preset TV channels easily by storing all the receivable channels automatically. You can also preset channels manually or skip program positions (page 23). You can preset channels using the buttons on the projection TV as well as those on the remote commander.

#### Presetting channels automatically

You can preset up to 100 TV channels in numerical sequence from program position 1.



1 Press MENU.



PVIDEO CONTROL AUDIO CONTROL FEATURES PRESET LANGUAGE

2 Press △ + or ▽ - to move the cursor (►) to PRESET.



VIDEO CONTROL AUDIO CONTROL FEATURES PRESET LANGUAGE

3 Press ENTER.



PRESET ⊃. ►AUTO PROGR MANUAL PROGR 4 Press △ + or ▽ - to select AUTO PROGR.



PRESET⊃ ►AUTO PROGR MANUAL PROGR

5 Press ENTER.



AUTO PROGRO

METASIA/CATV W EURO
AUSTRALIA
HK/UK
CHINA/E EURO
AMERICA/CATV AMERICA
JAPAN

6 Press △ + or ∇ ~ to select your area (channel system).


For the areas allocated in each channel system, see "Channel allocation" on page 27.



AUTO PROGR D
M E/ASIA/CATV W EURO
AUSTRALIA
HK/UK
P CHIMA/E EURO
AMERICA/CATV AMERICA
JAPAN


7 Press ENTER.

Presetting starts from program 1.

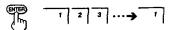

## Introducing the menu

You can preset channels and set picture quality, sound, and other settings using the on-screen menus. You can use the buttons on both remote commander and the projection TV to operate the menus.

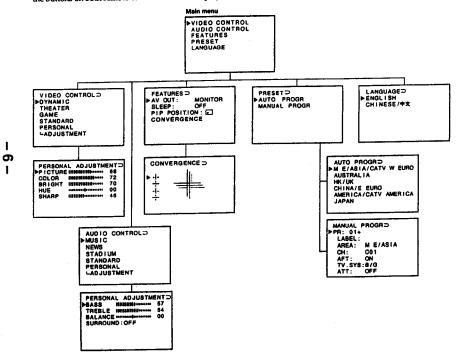

#### Getting back to the previous menu

Press  $\triangle$  + or  $\nabla$  – to move the cursor (>) to the first line ( ) of each menu (except for the main menu), and press ENTER.

#### Cancelling the menu screen

#### Press MENU.

. If more than 60 seconds elapse after you press a button, the menu screen disappears automatically.


#### Operations

## Watching the TV


1 Select the TV program you want to watch. Press the number buttons or PROGR +/-. The projection TV turns on automatically and the selected program appears.

When the STANDBY indicator on the front of the projection TV is not lit, press POWER on the projection TV, and select the program position.

#### KP-E41

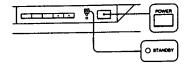

#### KP-E53

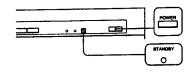

#### To select a program position directly

Press the number buttons.



To select a two-digit program position, press "-/--" before the number buttons.

For example, to select program position 25, press "-/-" and then "2" and "5."



#### To scan through program positions

Press PROGR +/- until the program position you



#### To select a channel directly

Press C (once for VHF/UHF channels, twice for cable TV channels), then press the number buttons (two-digit number for VHF/UHF channels, threedigit number for cable TV channels). For example, to select the VHF/UHF channel 4, press C, 0 then 4.

2 Press VOL +/- to adjust the volume.



#### Switching off the projection TV


To switch off the projection TV temporarily, press POWER on the remote commander. The STANDBY indicator lights.



To switch off the projection TV completely, press POWER on the TV.

#### Watching the video input

#### Press VIDEO/HOLD.

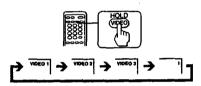


To watch projection TV, press TV, the number buttons or PROGR +/-.




#### Muting the sound

#### Press MUTING.

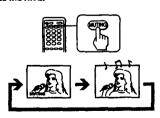

#### Displaying on-screen information

#### Press DISP.

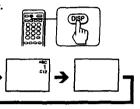


· When you press DISP, the on-screen display shows the picture and sound settings as well, all of which disappear after three

#### **Setting the Sleep Timer**

You can set the projection TV to turn off automatically after the period of time you set.

- 1 Press MENU.
- 2 Press ∆ + or ∇ to move the cursor (>) to FEATURES, and press ENTER.
- 3 Press △ + or ▽ to move the cursor (>) to SLEEP, and press ENTER.
- 4 Press  $\triangle + \text{ or } \nabla$  until the time (in minutes) you want appears.

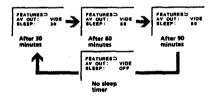


#### 5 Press ENTER.

To cancel the Sleep Timer, select OFF, or turn the projection TV off.


## **Using the Picture-in-**Picture features

You can display a Picture-in-Picture (PIP) screen (small picture) within the main picture of a TV program or a video input.

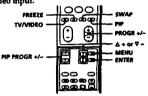

#### **Displaying PIP**

#### Press PIP.

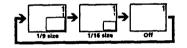

## Selecting a TV program or video input in the

To select a TV program, press PIP PROGR +/- (yellow

To select a video input, press TV/VIDEO.

#### Swapping pictures between the main and PIP screens

#### Press SWAP.




#### Changing the position of the PIP screen


1 Press MENU.



2 Press  $\triangle$  + or  $\nabla$  - to move the cursor (>) to FEATURES, and press ENTER.

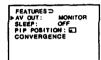


3 Press △ + or ▽ - to move the cursor (►) to PIP POSITION, and press ENTER.

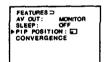

4 Press △ + or ∇ - to select the position you

Pressing  $\Delta$  + changes the position as shown below. Pressing ∇ - changes the position in reverse order.

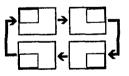

#### Freezing the PIP screen


#### Press FREEZE.

To restore the normal picture, press FREEZE again.

## Selecting the picture mode

You can select the picture mode using the menu as well as the PICTURE MODE button on the remote commander. Select VIDEO CONTROL from the main menu, then select the desired mode.

#### Press PICTURE MODE until the mode you want appears on the screen.

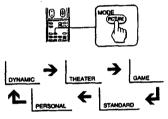

Select	To
DYNAMIC	Display more contrast picture
THEATER	Display darker and finely detailed picture suitable for movies
GAME	Display softer picture suitable for the video games
STANDARD	
PERSONAL	Display the picture that is adjusted using ADJUSTMENT in the VIDEO CONTROL menu

#### Viewing a video game screen

#### Press PICTURE MODE until the GAME mode appears on the screen.

The screen changes to the optimum mode for video games with soft picture.

#### If the fixed (non-moving) pattern is on the screen for long periods of time

Keep the picture functions at low settings (see "Adjusting the picture setting" on page 14). If not, the image may be permanently imprinted on the screen.

 To prevent imprints on the screen, the picture shifts horizontally and vertically about 5 mm every 2 hours. This is not a malfunction of the TV.

#### Adjusting the picture setting (ADJUSTMENT)

You can adjust the picture quality to suit your taste with the ADIUSTMENT option. The adjusted settings are stored in the PERSONAL option.



1 Press MENU.

PVIDEO CONTROL AUDIO CONTROL FEATURES PRESET

2 Press △ + or ▽ - to move the cursor (►) to VIDEO CONTROL, and press ENTER.

VIDED CONTROLD
DYNAMIC
THEATER
GAME
STANDARD
PERSONAL
LADJUSTMENT

3 Press  $\triangle$  + or  $\nabla$  - to move the cursor (>) to ADJUSTMENT, and press ENTER.

PERSONA PICTURE COLOR BRIGHT HUE SHARP		68 72 70 00 48
---	--	----------------------------

4 Press  $\triangle$  + or  $\nabla$  – to move the cursor (>) to the item you want to adjust, and press ENTER.

#### 5 Press $\triangle$ + or $\nabla$ - to adjust the item, and press ENTER.

Item	Press △ + to	Press ∇ - to
PICTURE	Increase picture contrast	Decrease picture contrast
COLOR	Increase color intensity	Decrease color intensity
BRIGHT	Brighten the picture	Darken the picture
HUE	Make skin tones become greenish	Make skin tones become reddish
SHARP	Sharpen the picture	Soften the picture

- 6 To adjust other items, repeat steps 4 and 5.
- 7 Press MENU to return to the normal screen.

You can adjust HUE for NTSC color system only.

#### If the color of the picture is abnormal when receiving programs through the **¥** (antenna) terminal

Press COLOR SYSTEM on the projection TV or change the TV system setting from the menu as described below until the color becomes normal.


- 1 Press MENU.
- 2 Press △ + or ▽ to move the cursor (►) to PRESET, and press ENTER.
- 3 Press △ + or ▽ to move the cursor (▶) to MANUAL PROGR, and press ENTER.
- 4 Press △ + or ▽ to move the cursor (>) to TV SYS, and press ENTER.
- 5 Press △ + or ▽ to change the TV system until the color becomes normal.

. Normally set COLOR SYSTEM to AUTO.

## Selecting the sound mode

You can select the sound mode using the menu as wellas the SOUND MODE button on the remote commander. Select AUDIO CONTROL from the main menu, then select the desired mode.

Press SOUND MODE until the mode you want appears on the screen.

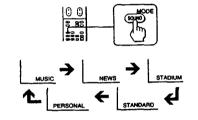

Select	То
MUSIC	Listen to music programs. It gives sound with a live concert effect.
NEWS	Listen to news program. A person's voice can be heard clearly.
STADIUM	Listen to sports program. It gives sound with a sports stadium effect.
STANDARD	Listen to sound other than music, news or sports program.
PERSONAL	Listen to the sound that is adjusted using ADJUSTMENT in the AUDIO CONTROL menu.

#### Adjusting the sound setting (ADJUSTMENT)

You can adjust the sound quality to suit your taste with the ADJUSTMENT option. The adjusted settings are stored in the PERSONAL option.



1 Press MENU.

▶VIDEO CONTROL LANGUAGE

2 Press △ + or ▽ - to move the cursor (►) to AUDIO CONTROL, and press ENTER.

> AUDIO CONTROLD ►MUS I C NEWS STADIUM LADJUSTMENT

3 Press △ + or ∇ - to move the cursor (►) to ADJUSTMENT, and press ENTER.

> PERSONAL ADJUSTMENTO PBASS MARKETON 57 TREBLE MARKETON 64

- 4 Press  $\triangle$  + or  $\nabla$  to move the cursor (>) to the item you want to adjust, and press
- 5 Press A + or ∇ to adjust the item, and press ENTER.


Item	Press ∆ + to	Press ∇ - to
BASS	Increase the bass sound	Decrease the bass sound
TREBLE	Increase the trebie sound	Decrease the treble sound
BALANCE	Increase the volume of right speaker	Increase the volume of left speaker

- 6 To adjust other items, repeat steps 4 and 5.
- 7 Press MENU to return to the normal screen.

#### Listening to surround sound

You can enjoy a surround sound effect that is like being in a movie theater or a concert hall when receiving stereo signals.

- 1 Press MENU.
- 2 Press △ + or ▽ to move the cursor (►) to **AUDIO CONTROL, and press ENTER.**
- 3 Press  $\triangle$  + or  $\nabla$  to move the cursor ( $\triangleright$ ) to ADJUSTMENT, and press ENTER.

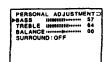

- 4 Press △ + or  $\nabla$  to move the cursor (>) to SURROUND, and press ENTER.
- **5** Press  $\triangle$  + or  $\nabla$  to select ON, and press ENTER.

#### If the sound is distorted or noisy when receiving programs through the T (antenna)

Press COLOR SYSTEM on the projection TV or change the TV system setting as follows until the sound becomes clear.

- 1 Press MENU.
- 2 Press △ + or ∇ to move the cursor (►) to PRESET, and press ENTER.
- Press  $\triangle$  + or  $\nabla$  to move the cursor (>) to MANUAL PROGR, and press ENTER.
- 4 Press △ + or ∇ to move the cursor (▶) to TV SYS, and press ENTER.
- 5 Press  $\triangle$  + or  $\nabla$  to change the TV system until the sound becomes clear.

#### Note

. Normally set COLOR SYSTEM to AUTO.

## Selecting a stereo or bilingual program


You can enjoy stereo sound or bilingual program of NICAM and A2 (German) stereo systems. The initial setting is stereo sound.


#### Press A/B/ENLARGE repeatedly until you receive the sound you want.

The sound changes and the corresponding indicator lights up as follows:



KP-E41

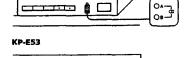

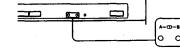

#### When receiving a NICAM program:

Broadcasting	On-screen Display	Selected sound (Indicator lit)
NICAM stereo	NICAM	Stereo → Regular (A and B)
NICAM bilingual	NICAM	$A \rightarrow B \rightarrow Regular-$ (A) (B)
NICAM monaural	NICAM	NICAM monaural- (A) Regular←

When receiving an A2 (German) stereo program:

Broadcasting	On-screen display	Selected sound (Indicator lit)		
A2 (German) stereo	STEREO	→ Stereo → Monaural (A and B)		
A2 (German) bilingual	-	A → B ——————————————————————————————————		

#### Receiving area for NICAM and A2 (German) stereo programs

244.4- P 3	
System	Receiving area
NICAM	Hong Kong, Singapore, New Zealand, etc.
A2 (German) stereo	Australia, Malaysia, Thailand, etc.

- · If the signal is very weak, the sound becomes monaural
- If the stereo sound is noisy, select "regular" or "mono." The sound becomes monaural, however, the noise will be

You cannot receive stereo broadcasts in mainland China.

## Setting the speaker switch


If you connect a Dolby Pro Logic-compatible amplifier to the CENTER SPEAKER IN terminals, you can use the projection TV speakers as center speakers. To use the projection TV speakers as center speakers, set the CENTER SPEAKER IN switch located at the rear of the projection TV to CENTER. To listen to the sound from the projection TV, set to MAIN. See page 25 for connection.



# Viewing Teletext

TV stations broadcast an information service called Teletext via a local TV channel.

Teletext service allows you to receive various information such as weather forecasts or news at any time. Some of the features, however, may not be available depending on the Teletext service.

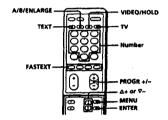

#### Note on Teletext

· Teletext service is not available in Chinese.

#### **Displaying Teletext**

- Select a TV channel which carries the Teletext broadcast you want to watch.
- 2 Press TEXT to display the Teletext. A Teletext page (normally the index page) is displayed on the left. If there is no Teletext broadcast, P100 appears in the top left corner of the screen.

To switch Teletext off, press TV.

## Superimposing a Teletext page on the TV picture

#### Press TEXT.

Each time you press TEXT, the screen changes as follows:

→ Teletext → Teletext and TV → TV --

## Checking the contents of a Teletext service (INDEX)

When Teletext is switched on, you can display the Teletext menu.

1 Press MENU.

DINDEX
TEXT CLEAR
SUBTITLES
REVEAL :OFF
TIME PAGE
SUBPAGE

2 Press △ + or ∇ - to move the cursor (►) to INDEX, and press ENTER.

#### Selecting a Teletext page

Press the number buttons to enter the threedigit page number of the Teletext number you want.

If you make a mistake, re-enter the correct page number.

To access the next or previous page, press PROGR +/-.

#### Note

 When you request another Teletext page while viewing one Teletext page, the page scrolling may pause on a different page depending on the Teletext service, but the search will continue till the requested page is displayed.

## Preventing a Teletext page from being updated (HOLD)

A Teletext page may consist of several subpages. You can stop the page scrolling in order to read the text at your own pace.

#### Press VIDEO/HOLD.

HOLD appears in the top left corner of the screen.

To resume normal Teletext operation, press TEXT.

#### **Using FASTEXT**

This feature allows you to quickly access a Teletext page that uses FASTEXT. When a FASTEXT page is broadcast, a color-coded menu appears at the bottom of the screen. The colors of the menu correspond to the red (TV/VIDEO), green (FREEZE), yellow (SWAP) and blue (PIP) buttons on the remote commander. These colored buttons function as the FASTEXT buttons in Teletext mode.

Press the colored button which corresponds to the color-coded menu.

The page is displayed after a few seconds.

## Enlarging the Teletext display (ENLARGE)

Each time you press A/B/ENLARGE, the Teletext display changes as follows:

Enlarge upper half→Enlarge lower half→Normal size-

## Revealing concealed information (REVEAL)

Sometimes pages contain concealed information, such as answers to a quiz. The reveal option discloses the information.

- 1 Press MENU.
- 2 Press △ + or ∇ to move the cursor (►) to REVEAL, and press ENTER.
- 3 Press △ + or ∇ to select ON, and press ENTER.

To conceal the information again, select OFF.

#### Watching a TV program while waiting for a requested Teletext page (TEXT CLEAR)

- 1 Select the Teletext page to which you want to refer.
- 2 Press MENU.
- 3 Press △ + or ∇ to move the cursor (>) to TEXT CLEAR, and press ENTER.
- 4 When the page number is displayed on the screen, press TEXT to switch the Teletext on.

To restore the normal Teletext reception, press TEXT.

#### Displaying subtitles (SUBTITLES)

Your Teletext service informs you if a TV program is subtitled.

- 1 Press MENU.
- 2 Press △ + or ∇ to move the cursor (>) to SUBTITLES, and press ENTER.

#### lote

 If the subtitles are not broadcast on page 888, select the subtitle page using the number buttons.

## Displaying a Teletext page at the requested time (TIME PAGE)

You can display a time-coded page (e.g. an alarm page) at the time you preset.

- 1 Press MENU.
- 2 Press △ + or ∇ to move the cursor (►) to TIME PAGE, and press ENTER.
- 3 Press the number buttons to enter four digits for the desired time. For example, to enter 7:30, press 0,7,3 and 0.



At the requested time, the page appears on the screen.

To restore the normal Teletext reception, press TEXT.

## Displaying a particular page among several subpages (SUBPAGE)

- 1 Press MENU.
- 2 Press △ + or ∇ to move the cursor (►) to SUBPAGE, and press ENTER.
- 3 Press the number buttons or PROGR +/- to enter four digits for the desired subpage. For example, to display the second page of a sequence, press 0, 0, 0 and 2.

exxxx			
	810000	SXXXX	SICOOK

## **Using headphones**


You can use headphones to enjoy the sound of the TV. This feature also allows you to enjoy the sound of PIP screens.

#### Listening to the sound of the projection TV with headphones


Insert the headphones into the  $\Omega$  (headphones) jack located on the front panel of the projection TV.

The sound from the speaker is shut off. To adjust the headphones volume, press VOL +/~.

#### KP-E41

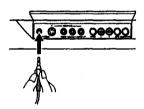

#### KP-E53

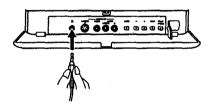

## **Customizing the** projection TV

#### Using the AV OUT (advance rec-out) terminal

You can select the output signal from the VIDEO jacks at the rear of the projection TV. The S Video output can be used only when MONITOR is selected.

- 1 Press MENU.
- 2 Press △ + or ∇ to select FEATURES, and press ENTER.

FEATURES D AV OUT: MONITOR SLEEP: OFF PIP POSITION: D CONVERGENCE

- 3 Press ∆ + or ∇ to select AV OUT, and press
- 4 Press △ + or ∇ to select the output signal. and press ENTER.

Select	To
TV	Output the TV signal.
MONTTOR	Output the signal of the picture you are watching as a main picture.

Do not change the channel while recording with a VCR through the MONITOR/TV OUT jacks. If you change the channel, it also changes the channel you are recording.

#### Presetting channels manually

To change the program position for a channel or to receive a channel with a weak signal, preset the channel manually.

For example, preset a channel in program position 8.

- 1 Press MENU.
- 2 Press  $\triangle$  + or  $\nabla$  to move the cursor (>) to PRESET, and press ENTER.

PRESET D AUTO PROGR MANUAL PROGR

3 Press △ + or ∇ - to select MANUAL PROGR. and press ENTER.

> MANUAL PROGRO LABEL: LABEL:
> AREA: M E/ASIA
> CH: CO1
> AFT: ON
> TV.SYS:B/G
> ATT: OFF

- 4 Select the program position to which you want to preset a channel.
  - (1) Press △ + or V to select PR, and press ENTER.
  - (2) Press ∆ + or ∇ to select 8. You can also select the program position with PROGR +/- or the number buttons (e.g., for program 24, press -/--, 2 and 4).
  - (3) Press ENTER.
- 5 Select your area (channel system). For the areas allocated in each channel system, see "Channel allocation" on page 27.
  - (1) Press △ + or ∇ to select AREA, and press
  - (2) Press  $\Delta$  + or  $\nabla$  to select your area, and press ENTER.
- 6 Select a channel which you want to preset.
  - (1) Press ∆ + or ∇ to select CH, and press
  - (2) Press △ + or V until the channel you want appears on the screen. You can also select the channel directly using the number buttons. Press C (once for VHF/ UHF channels, twice for cable TV channels), then the number buttons (e.g., for channel 5, press 0 and 5).
  - (3) Press ENTER.

## To preset other channels

Repeat steps 4 to 6.

#### Disabling program positions

By disabling unused or unwanted program positions, you can skip those positions when you press PROGR

For example, disable program position 8.

- 1 Display the MANUAL PROGR menu. (Follow steps 1 to 3 in "Presetting channels manually" on this page.)
- 2 Press  $\triangle$  + or  $\nabla$  to move the cursor ( $\triangleright$ ) to PR, and press ENTER.
- 3 Press PROGR + or until 8 appears.
- 4 Press △ + or ▽ to select "-", and press

To skip other program positions, repeat steps 3 and

To restore the skipped program positions In step 4 above, press  $\Delta$  + or  $\nabla$  - to select "+," and press ENTER.

#### **Customizing channel names**

You can caption each channel number using up to five letters to be displayed on the screen.

- 1 Display the MANUAL PROGR menu. (Follow steps 1 to 3 in "Presetting channels manually" on page 21.)
- 2 Press △ + or ▽ to move the cursor (►) to PR. and press ENTER.
- 3 Press ∆ + or ∀ to select the program position you want to caption and press ENTER.
- 4 Press △ + or ∇ to move the cursor (►) to LABEL and press ENTER.
- 5 Press △ + or ∇ to select a letter or number, and press ENTER for each caption space (up to five.)
  Each time you press △ + or ∇ the letter (number)

Each time you press  $\Delta$  + or  $\nabla$  –, the letter (number) changes as shown below.

A→B→...→Z→0→1→...→9→ - →:→/→. →

— (space)

For the caption space you want to leave blank,

select "-."

6 Repeat steps 2 to 5 to caption other channels.

To erase a caption
In step 5 above, select "... (space)."

#### Manual fine-tuning

Normally, the automatic fine-tuning (AFT) is operating. However, if the picture of a channel is distorted, you can use the manual fine-tuning function for the channel to obtain better picture reception.

- 1 Display the MANUAL PROGR menu. (Follow steps 1 to 3 in "Presetting channels manually" on page 21.)
- 2 Press △ + or ▽ to move the cursor (►) to PR. and press ENTER.
- 3 Press △ + or ∇ to select the program position corresponding to the channel which you want to manually fine-tune, and press ENTER.
- 4 Press △ + or ∇ to move the cursor (►) to AFT, and press ENTER.
- 5 Press △ + or ∇ to select OFF, and press ENTER.
- 6 Press △ + or ∇ to fine-tune the channel so that you get the best TV reception.
  As you press these buttons, the frequency changes from -128 to +128.
- 7 After fine-tuning, press ENTER.
  The fine-tuned level is stored.


#### Improving TV signal

If the reception signal is very strong, you can attenuate it to obtain better picture reception.

- 1 Display the MANUAL PROGR menu. (Follow steps 1 to 3 in "Presetting channels manually" on page 21.)
- 2 Press △ + or ▽ to move the cursor (►) to PR. and press ENTER.
- 3 Press △ + or ∇ to select the program position corresponding to the channel whose signal is very strong, and press ENTER.
- 4 Press △ + or ∇ to move the cursor (►) to ATT, and press ENTER.
- 5 Press  $\triangle$  + or  $\nabla$  to select ON, and press ENTER.

# Setting the remote command mode


You can use the supplied remote commander to operate the TV and Sony video equipment, such as a VCR or multi-disc player. To operate Sony video equipment, first set the remote command mode for the video equipment you want to use.

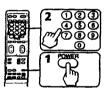


- 1 Press and hold the POWER button in the VCR control area.
- 2 Press the number buttons that correspond to the remote command mode.

Mode number buttons	Remote command mode
0 and then 1	VTR1 (e.g., Beta format VCR)
0 and then 2	VTR2 (e.g., 8 mm format VCR)
0 and then 3	VTR3 (e.g., VHS format VCR)
0 and then 4	MDP (multi-disc player)

After setting the remote command mode, you can use the following buttons to operate the video equipment.

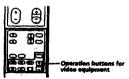



Attach an optional IEC antenna connector to the 75-ohm coaxial cable. Plug the connector into the \( \) (antenna) terminal at the rear of the projection TV.

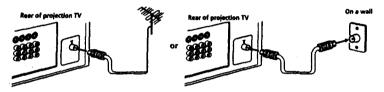

#### Connecting optional equipment

You can connect optional audio/video equipment to this projection TV such as a VCR, multi-disc player, camcorder, headphones, or stereo system.

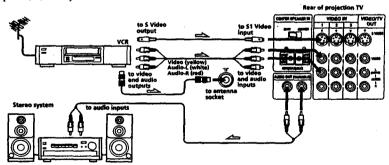

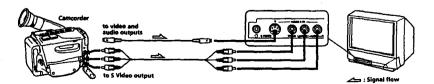

#### When connecting a monaural VCR

Connect the yellow plug to VIDEO and the white plug to AUDIO-L (mono).

#### If both 5 Video and video signals are input The 5 Video input signal is selected. To view a video signal, disconnect the S Video connection.

#### Note on the video input

When no signal is input, the screen becomes black and on-screen-

#### When connecting a VCR to the VIDEO 3 IN jacks


This projection TV is equipped with two sets of the VIDEO 3 IN jacks on the front and rear panels. Front and rear jacks are not available to be used at the same time. When using equipment connected, turn off other equipment not in use.

#### Connecting an amplifier with Dolby Pro Logic decoder

If you use an amplifier with Dolby Pro Logic decoder instead of the projection TV's audio system, you can still use the projection TV's center speaker.

\*Manufactured under license from Dolby Laboratories Licensing Corporation.

DOLBY, the double-D symbol DO and "PRO LOGIC" are trademarks of Dolby Laboratories Licensing Corporation.

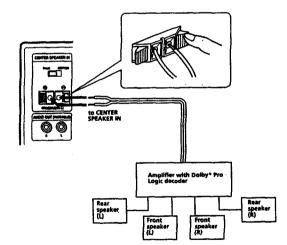

## **Troubleshooting**

If you have any problems, read this manual again and check the countermeasure for each of the symptoms listed below.

If the problem persists, contact your nearest authorized service center or dealer.

#### Snowy picture **Noisy sound**





- -Check the antenna connection on the projection TV and on the wall.

#### **Dotted lines or stripes**




This may be caused by local interference (e.g. cars, neon signs, hair dryers, etc.) Adjust the antenna for minimum

#### Double images or "ghosts"



This may be caused by reflections from nearby mountains or buildings. A highly directional antenna may improve the

## **Good picture**

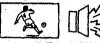

→ Check the TV SYSTEM setting.

#### No picture No sound



- Press POWER.
- → Press POWER to turn the projection TV off for 5 to 6 seconds, then turn it on again by pressing POWER.
- → Check the antenna connection.
- ➡ Check the VCR connections.

#### **Good picture** No sound





- Press VOL+
- → Press MUTING.

#### No color



- → Adjust COLOR in the VIDEO CONTROL menu's ADJUSTMENT option.
- → Check the COLOR SYSTEM setting.

#### TV cabinet creaks

Even if the picture or the sound is normal, changes in the room temperature sometimes make the TV cabinet expand or contract, making a noise. This does not indicate a malfunction.

## Channel allocation

#### Areas allocated in each channel system

#### M E/ASIA/CATV W EURO

Afghanistan, Albania, Algeria, Austria, Bahrain, Bangladesh, Belgium, Brunei, Canary Islands, Cyprus. Denmark, Egypt, Finland, Germany, Ghana, Gibraltar, Greece, Iceland, India, Indonesia, Iran, Iraq, Italy, lordan, Kenya, Republic of Korea, Kuwait, Lebanon. Liberia, Libya, Luxemburg, Malaysia, Malta, Mauritania, Mauritius, Maldives Rep., Morocco, Mozambique, Nepal, Netherlands, New Zealand. Nicaragua, Nigeria, Norway, Oman, Pakistan, Portugal, Oatar, Sarawak, Saudi Arabia, Seychelles, Sierra Leone, Singapore, Spain, Srilanka, Sudan, Swaziland, Sweden, Switzerland, Syrian Arab Rep., Tanzania, Thailand, Tunisia, Turkey, Uganda, United Arab Emirates, Western Sahara, Yemen Arab Republic, People's Dem. Rep. of Yemen, Yugoslavia, Zambia. Zimbabwe

#### **AUSTRALIA**

Australia, New Zealand

Hong kong, Ireland, Lesotho, South Atrica, United

#### CHINA/E EURO

Benin, Bulgaria, China, Congo, Czechoslovakia. Diibouti Republic, Gabon, Guadeloupe, Guiana, Guinea (P.P.R.), Hungary, Ivory Coast, Dem. People's Rep. of Korea, Madagascar, Mongolia, New Caledonia. Niger, Poland, Reunion, Rumania, Senegal, Tahiti, Togo, Former U.S.S.R., Vietnam, Zaire

#### AMERICA/CATV AMERICA

Bahama Islands, Barbados, Belize, Bermuda, Bolivia, Burma (UHF), Canada, Chile, Colombia, Costa Rica, Cuba, Dominica Republic, Ecuador, El Salvador, Guam. Guatemala, Haiti, Hawaii, Honduras, Jamaica, Laos, Mexico, Panama, Peru, Philippines, Puerto Rico. Surinam, Taiwan, Trinidad & Tobago, U.S.A., U.S.A. (CATV), Venezuela

Burma (Myanmar) (VHF), Japan (VHF, UHF)


#### TV and color systems of each channel system

The TV system and color system are automatically set according to the channel system.


Channel system	TV system	Color system	
M E/ASIA/ CATV W EURO	B/G, H: West European TV standard	OTUA	
AUSTRALIA	B/G, H: Australian TV standard	AUTO	
HK/UK	I: British TV standard	AUTO	
CHINA/E EURO	D/K; East European TV standard	AUTO	
AMERICA/CATV AMERICA	M: American TV standard	AUTO	
JAPAN	M: Japan TV standard	AUTO	

## **SECTION 2 DISASSEMBLY**


2-1-1. (1) REAR PLATE REMOVAL (KP-E41MH11/E41MN11/E41SN11)

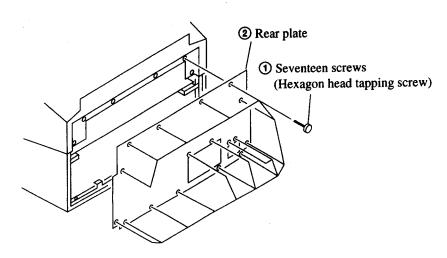


2-1-1. (2) BACK COVER REMOVAL (KP-E53MH11/E53MN11/E53SN11)

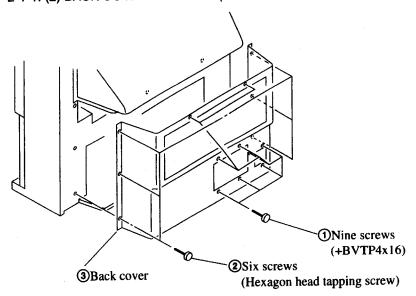


2-1-2. CHASSIS ASSY REMOVAL

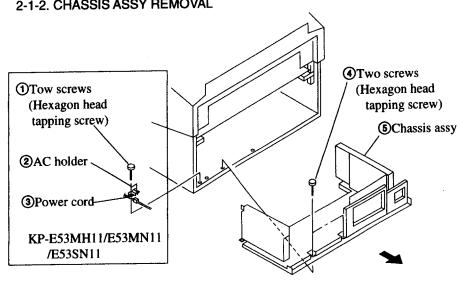


2-1-3. SERVICE POSITION

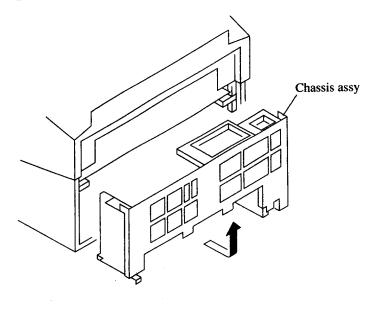

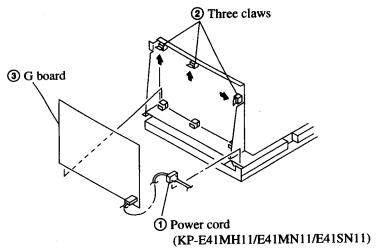


2-1-5. U BOARD REMOVAL


6

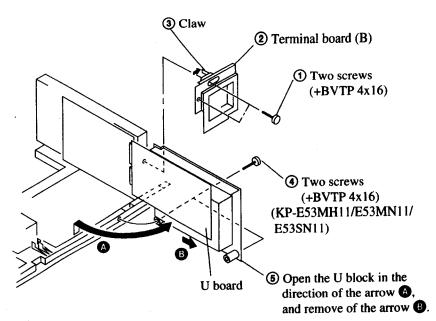


2-1-6. B BOARD REMOVAL

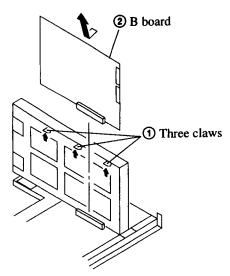


2-1-7. (1) D BOARD REMOVAL (KP-E41MH11/E41MN11/E41SN11)

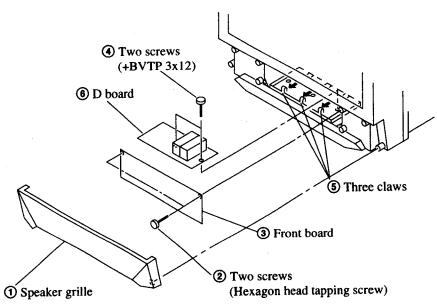


## 2-1-7. (2) D BOARD REMOVAL (KP-E53MH11/E53MN11/E53SN11)

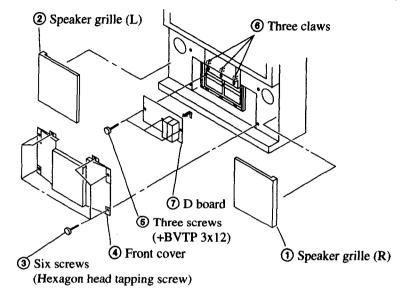


## 2-1-8. (1) BEZNET, HA AND HB BOARDS REMOVAL

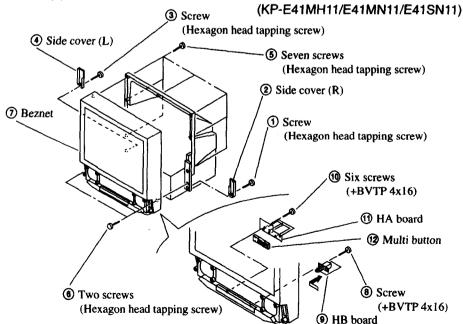


## 2-1-8. (2)HA AND HB BOARDS REMOVAL (KP-E53MH11/E53MN11/E53SN11)

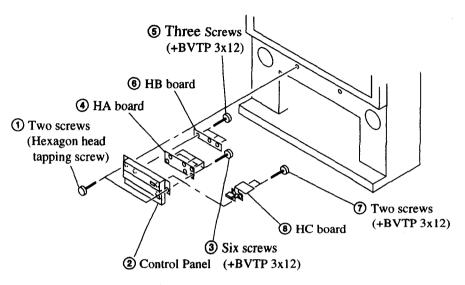


## 2-1-8. (3) SCREEN FRAME REMOVAL (KP-E53MH11/E53MN11/E53SN11)

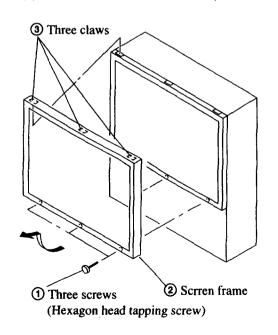


## 2-1-9. (1) MIRROR COVER REMOVAL (KP-E41MH11/E41MN11/E41SN11)

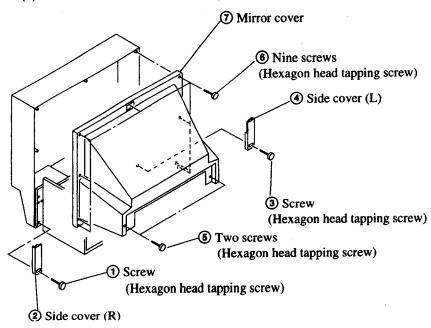


## 2-1-9. (2) MIRROR COVER REMOVAL (KP-E53MH11/E53MN11/E53SN11)

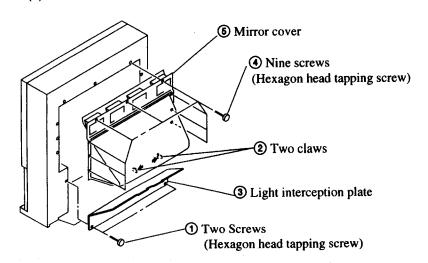


## 2-1-10. HIGH-VOLTAGE CABLE INSTALLATION AND REMOVAL

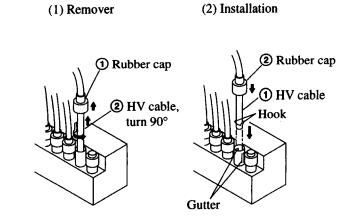

2-1-11. PICTURE TUBE REMOVAL

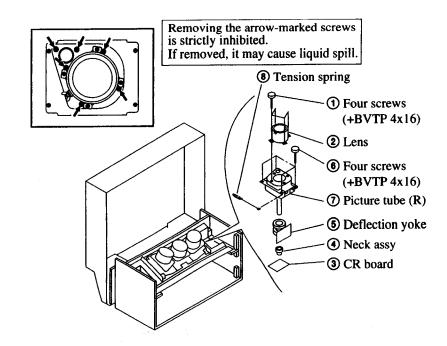


#### 2-2-1.SERVICE STAY ASSY (X-4034-033-1)

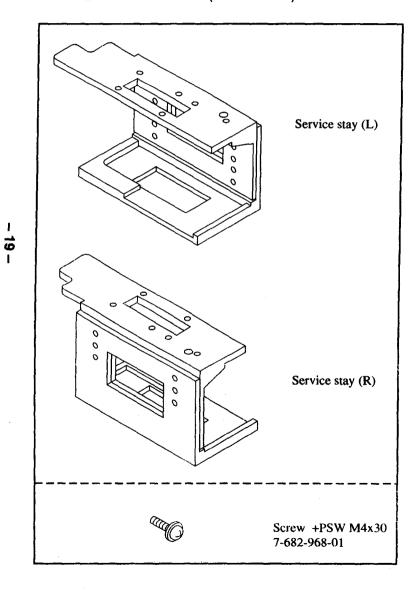


#### PREPARATION

- 1) Remove the rear plate and chassis assy while referring to the instructions.
- 2) Remove the HA and HB boards while referring to the instructions.
- 3) Remove the mirror cover while referring to the instructions.
- 4) Remove the harnesses from the purse lock.
- 5) Remove the connector from the speaker. (U board: CN2004)


## 2-2-2. (1) D BLOCK ASSY REMOVEL (KP-E41MH11/E41MN11/E41SN11)

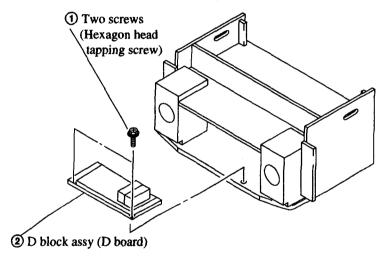


## 2-2-2. (2) D BLOCK ASSY REMOVEL (KP-E53MH11/E53MN11/E53SN11)

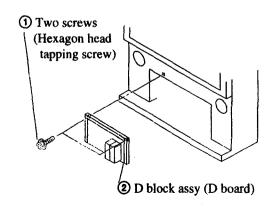


## 2-2-3. PICTURE TUBE BRACKET ASSY REMOVAL AND INSTALL A CHASSIS ASSY

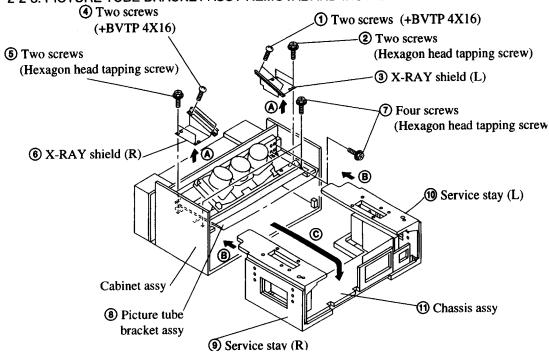

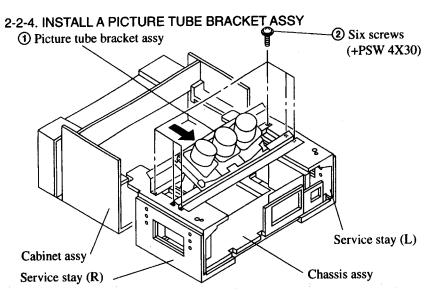

#### 2-2-5, CARRY BACK SERVICE STAY ASSY

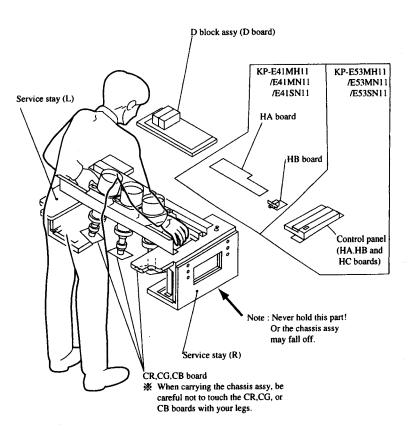

- Even with 2 servicemen, be sure to put your hands in to the grooves on the top of service stays (L) and (R) to carry the chassis assy.
- ★ To hold the chassis assy, put your hands into the grooves on the top of service stays (L) and (R).

# SECTION 3 SET-UP ADJUSTMENTS

ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
SCREEN VOLTAGE ADJUSTMENT		į		
(ROUGH ALIGNMENT)				
<ol> <li>Turn the red VR on the FOCUS block all the way to the left and then gradually turn it to the right until the point where you can see the retrace line.</li> <li>Next gradually turn it to the left to the position where the retrace line disappears.</li> </ol>	Monoscope Pattern		PICTUREminimum BRIGHTNESS50% SCREEN (G2)	B B B FOCUS
FOCUS LENS ADJUSTMENT				FOCUS block
<ol> <li>Loose the lens screw.</li> <li>Set in service mode.</li> <li>Use VSP on the service mode menu to shown only the green color.</li> <li>Press the Commander Menu button and select FEATURES and CONVERGENCE to display the test signal on the screen.</li> <li>Rotate the green lens and align with the optimal focus point from the test signal.</li> <li>Use RRH from the service mode menu to set to green and red.</li> <li>Output the test signal and rotate the red lens to obtain the optimum focus at the point where the red and green spots overlap.</li> <li>Use RBH from the service mode menu to set to red and blue.</li> <li>Output the test signal and rotate the blue lens to obtain the optimum focus at the point where the blue and red spots overlap.</li> </ol>				CONVERGENCE
10. Tighten the lens screw.	}			
<ol> <li>SCREEN (G2) ADJUSTMENT</li> <li>Select VIDEO mode without signals.</li> <li>Connect an oscilloscope to the TP701(KR), TP731(KG) and TP761(KB) of CR board, CG board and CB board.</li> <li>Adjust R, G and B screen voltage to 175 ± 2VDC with screen VR on the focusblock.</li> </ol>			·	175 ± 2VDC pedestal

ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
<ol> <li>FOCUS VR ADJUSTMENT</li> <li>Set in service mode.</li> <li>Use VSP on the service mode menu to shown only the green color.</li> <li>Press the Commander Menu button (convergence) and output the test signal.</li> <li>Rotate the green VR on the FOCUS block and align to obtain the optimal focus point.</li> <li>Use RRH from the service mode menu to set to green and red.</li> <li>Output the test signal and rotate the red VR to obtain the optimum focus at the point where the red and green spots overlap.</li> <li>Use RBH from the service mode menu to set to red and blue.</li> <li>Output the test signal and rotate the blue VR aligning to obtain the optimum focus at the point where the blue and green spots overlap.</li> </ol>				Lens Scanning line visible.  Minimize both A and B.
<ol> <li>DEFLECTION YOKE TILT ADJUSTMENT</li> <li>Set in service mode.</li> <li>Set to receive the monoscope signal.</li> <li>Use VSP on the service mode menu to shown only the green color.</li> <li>Loosen the deflection yoke setscrew and align the tilt of the Deflection Yoke so that the bars at the center of the monoscope pattern are horizontal.</li> <li>After aligning the deflection yoke, fasten it securely to the funnel-shaped portion (neck) of the CRT.</li> <li>The tilt of the deflection yoke for red is aligned with RRH on the service mode menu, and the tilt on the deflection yoke for green is aligned with RBH on the service menu, is aligned the same as was done for green.</li> </ol>	Monoscope pattern			2-pole magnet  Deflection yoke  Neck Assy  Anode cap

ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
2-POLE MAGNET ADJUSTMENT				
<ol> <li>Set in service mode.</li> <li>Set to receive the dot pattern signal.</li> <li>Place the caps on the red and blue lens so that only the green color is shown.</li> <li>Turn the green VR on the focus block to the right and set to overfocus to enlarge the spot.</li> <li>Now align the 2-Pole Magnet so that the enlarged spot is in the center of the Just Focus spot.</li> <li>Align the green focus VR and set for just (precise) focus.</li> <li>Perform the same alignment for red and blue.</li> </ol>	Dot pattern		2-pole magnet	Use the center dot
<ol> <li>4-POLE MAGNET ADJUSTMENT</li> <li>Set in service mode.</li> <li>Set to receive the dot pattern signal.</li> <li>Place the caps on the red and blue lens so that only the green color is shown.</li> <li>Turn the green VR on the focus block to the left and set to underfocus to enlarge the spot.</li> <li>Now align the 4-Pole Magnet so that the enlarged spot becomes a perfect circle.</li> </ol>	Dot pattern		4-pole magnet	Use the center dot $x: y = 1:2$
<ol> <li>DEFOCUS ADJUSTMENT</li> <li>Receive the crosshatch signal.</li> <li>Adjust the FOCUS knob so that the crosshatch pattern vertical line width is as in the figure on the right.</li> </ol>	Crosshatch pattern		FOCUS VR • RED • GREEN • BLUE	• Focus adjustment point  a: b=1:4  A: 41":9-11mm 53":11-14mm

## **ELECTRICAL ADJUSTMENT BY REMOTE COMMANDER**

Use of Remote Commander (RM-901) can be performed circuit adjustments about this model.

#### **NOTE: Test Equipment Required.**

- 1. Pattern Generator
- 2. Frequency counter
- 3. Digital multimeter
- 4. Audio oscillator


#### 1. METHOD OF SETTING THE SERVICE ADJUSTMENT MODE

#### SERVICE MODE PROCEDURE

- 1. Standby mode. (Power off)
- 2. DISPLAY → 5 → VOL (+) → POWER on the Remote Commander.


  (Press each button within a second.)

#### SERVICE ADJUSTMENT MODE IN

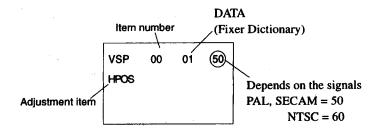

- 3. The CRT displays the item Being adjusted.
- 4. Press 1 or 4 on the Remote Commander to select the item.
- 5. Press 3 or 6 on the Remote Commander to change the data.
- 6. If you want to recover the latest values press 7 then 0 to read the memory.
- 7. Press 5 then 0 to write initial data into memory.
- 8. Press MUTING then 0 to write into memory.

#### SERVICE ADJUSTMENT MODE MEMORY

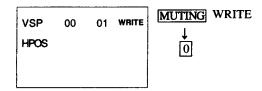


- 9. Press **8** then **0** on the Remote Commander to initialize. (Be sure not to use usually)
- 10. Turn set off and on to exit.

#### 2. MEMORY WRITE CONFIRMATION METHOD

- 1. After adjustment, pull out the plug from AC outlet, and next place, plug in AC outlet again.
- 2. Turn the power switch ON and set to Service Mode.
- 3. Call the adjusted items again, confirm they were adjusted.

- 24 -

## 3. ADJUST BUTTONS AND INDICATOR

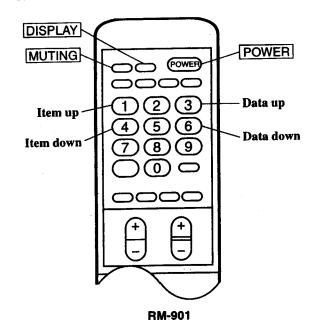

## 4. SERVICE MODE LIST

## VSP

- 25 -

	Item number	Adjustment item	Data range	Standard data	Initial data	Note	Device
VSP	00	HPOS	0~63	28	28	H-SHIFT	CXD2018Q
	01	VSIZ	0~63	02	15	V-SIZE	
	02	VPOS	0~63	35	35	V-SHIFT	
	03	vsco	0~15	07	07	S-CORRECTION	
	04	VLIN	0~15	08	08	V-LINEARITY	
	05	HSIZ	0~63	20	28	H-SIZE	
	06	HIPN	0~63	25	36	PIN-AMP	
	07	HKEY	0~31	15	15	TILT	
	08	UPCP	0~15	07	07	UPPER CORNER PIN	
	09	LOCP	0~15	06	06	LOWER CORNER PIN	
	10	нвом	0~15	09	09	V-BOW	
	11	HSKE	0 ~ 15	08	08	V-ANGLE	

DP

UP							
	Item number	Adjustment item	Data range	Standard data	Initial data	Note	Device
R GH	00	CENT	-127 ~ +128	07	00	GREEN. H CENTER	CXP85112B-613S
	01	SKEW	-127 ~ +128	00	00	GREEN. H SKEW	
	02	BOW	-127 ~ +128	-01	-01	GREEN. H BOW	
	03	4BOW	-127 ~ +128	00	00	GREEN. H 4th BOW	
	04	SIZE	-127 ~ +128	09	00	GREEN. H SIZE	
	05	LIN	-127 ~ +128	06	-20	GREEN. H LINEARITY	
	06	MSIZ	-127 ~ +128	16	16	GREEN. H MIDDLE SIZE	
	07	MLIN	-127 <b>~ +128</b>	06	06	GREEN, H MIDDLE LINEARITY	1
	08	KEY	-127 ~ +128	00	00	GREEN. H KEY	ì
İ	09	SSKW	-127 ~ +128	14	14	GREEN. H SUB SKEW	
	10	MPIN	-127~+128	04	47	GREEN. H MIDDLE PIN	
	11	PIN	-127 ~ +128	47	02	GREEN, H PIN	1
	12	SBOW	-127~+128	-16	-16	GREEN. H SUB BOW	
	13	MBOW	-127 ~ +128	04	04	GREEN. H MIDDLE BOW	
	14	4PIN	-127 ~ +128	-11	-03	GREEN. H 4th PIN	
	15	4SBOW	-127 ~ +128	00	00	GREEN. H 4th SUB BOW	
R GV	00	CENT	-127 ~ +128	00	00	GREEN. V CENTER	CXP85112B-613S
	01	SKEW	-127~+128	00	00	GREEN, V SKEW	
	02	BOW	-127~+128	16	16	GREEN. V BOW	
	03	SIZE	-127 ~ +128	-30	-06	GREEN. V SIZE	
	04	LIN	-127 ~ +128	22	22	GREEN, V LINEARITY	
	05	MSIZ	-127 ~ +128	-05	-05	GREEN. V MIDDLE SIZE	
	06	MKEY	-127~+128	-05	-05	GREEN. V MIDDLE KEY	
	07	KEY	-127~+128	-18	-18	GREEN. V KEY	
	08	SSKW	-127 ~ +128	01	01	GREEN. V SUB SKEW	
	09	MPIN	-127 ~ +128	-04	-04	GREEN, V MIDDLE PIN	
	10	PIN	-127 ~ +128	42	42	GREEN. V PIN	
	11	SBOW	-127 ~ +128	08	08	GREEN. V SUB BOW	
	12	WAVE	-127 ~ +128	-01	-01	GREEN, V WAVE	
	13	4PIN	-127 ~ +128	07	07	GREEN, V 4th PIN	
R RH	00	CENT	-127 ~ +128	-40	-04	RED. H CENTER	CXP85112B-613S
	01 .	SKEW	-127 ~ +128	00	00	RED. H SKEW	
	02	BOW	-127 ~+128	06	06	RED. H BOW	
	03	4BOW	-127 ~ +128	-01	-01	RED. H 4th BOW	i
	04	SIZE	-127 ~ +128	10	-02	RED. H SIZE	
	05	LIN	-127 ~ +128	31	16	RED. H LINEARITY	
	06	MSIZ	-127 ~ +128	12	12	RED. H MIDDLE SIZE	ļ l
	07	MLIN	-127 ~ +128	-09	-09	RED. H MIDDLE LINEARTTY	
	08	KEY	-127 ~ +128	-08	-08	1	
	09	SSKW	-127 ~ +128	04	04	RED. H SUB SKEW	
	10	MPIN	-127 ~ +128	54	54	RED. H MIDDLE PIN	
	11	PIN	-127 ~ +128	-01	-01	RED. H PIN	

ı
N
O.
i

	Item number	Adjustment item	Data range	Standard data	Initial data	Note	Device
RRH	12	SBOW	-127 ~ +128	07	07	RED. H SUB BOW	
	13	MBOW	-127 ~ +128	21	21	RED. H MID BOW	ļ
	14	4PIN	-127 ~ +128	-10	00	RED. H 4th PIN	
<u> </u>	15	4SBOW	-127~+128	-13	00	RED. H 4th SUB BOW	
R RV	00	CENT	-127~+128	00	-43	RED. V CENTER	CXP85112B-613S
1	01	SKEW	-127 ~ +128	00	00	RED. V SKEW	
	02	BOW	-127 ~ +128	17	17	RED, V BOW	1
) [	03	SIZE	-127 ~ +128	70	00	RED. V SIZE	
	04	LIN	-127 ~+128	24	24	RED. V LINEARITY	}
	05	MSIZ	-127~+128	-05	-05	RED. V MIDDLE SIZE	}
]	06	MKEY	-127 ~ +128	05	05	RED. V MIDDLE KEY	ļ
	07	KEY	-127 ~ +128	05	05	RED. V KEY	}
	08	SSKW	-127 ~ +128	01	01	RED. V SUB SKEW	)
	09	MPIN	-127 ~ +128	-07	-07	RED. V MIDDLE PIN	
	10	PIN	-127 ~ +128	09	09	RED. V PIN	ļ
	11	SBOW	-127~+128	10	10	RED. V SUB BOW	
1 (	12	WAVE	-127~+128	29	29	RED, V WAVE	l
ا ا	13	4PIN	-127 -+128	10	10	RED. V 4th PIN	
R BH	00	BSEL	0/1	01	00	RESISTRATION µ CON BSEL	CXP85112B-613S
1	01	CENT	-127~+128	-25	-08	BLUE, H CENTER	
{ }	02	SKEW	-127 ~ +128	00	00	BLUE. H SKEW	
	03	BOW	-127 ~ +128	-01	-01	BLUE. H BOW	
	04	4BOW	-127 ~ +128	-03	-03	BLUE. H 4th BOW	}
1 1	05	SIZE	-127~+128	-21	-21	BLUE. H SIZE	
	06	LIN	-i27~+128	-64	-64	BLUE, H LINEARITY	
	07	MStZ	-127 ~ +128	22	22	BLUE. H MID SIZE	
l j	08	MLIN	-127 ~ +128	55	55	BLUE. H MID LINEARTTY	
ŀ	09	KEY	-127 ~ +128	-08	-08	BLUE, H KEYSTONE	
	10	SSKW	-127 ~ +128	24	24	BLUE. H SUB SKEW	
	11	MPIN	127 +128	34	34	BLUE, H MID PIN	
	12	PIN	-127 ~ +128	10	10	BLUE, H'PIN	
1	13	SBOW	-127 ~ +128	-34	-34	BLUE. H SUB BOW	
	14	MBOW	-127~+128	-12	-12	BLUE. H MID BOW	
	15	4PIN	-127 ~ +128	-10	-01	BLUE. H 4th PIN	
	16	4SBOW	-127 ~ +128	05	05	BLUE. H 4th SUB BOW	
RBV	00	CENT	-127 ~ +128	00	-17	BLUE, V CENTER	CXP85112B-613S
	01	SKEW	-127~+128	00	00	BLUE. V SKEW	
	02	BOW	-127~+128	13	13	BLUE. V BOW	
	03	SIZE	-127~+128	45	-38	BLUE, V SIZE	
	04	LIN	-127 ~+128	20	20	BLUE, V LINEARITY	
	05	MSIZ	-127~+128	-07	-07	BLUE, V MIDDLE SIZE	ł
	06	MKEY	-127 ~+128	-21	-21	BLUE. V MIDDLE KEY	

	Item number	Adjustment item	Data range	Standard data	Initial data	Note	Device
R BV	07	KEY	-127 ~ +128	67	67	BLUE. V KEY	CXP85112B-613S
	08	SSKW	-127 - +128	04	04	BLUE, V SUB SKEW	
!	09	MPIN	~127 ~ +128	-07	-07	BLUE. V MIDDLE PIN	
	10	PIN	-127 ~ +128	29	-29	BLUE. V PIN	}
	11	SBOW	-127 ~ +128	10	10	BLUE. V SUB BOW	1
	12	WAVE	-127 ~ +128	-40	<b>-40</b>	BLUE. V WAVE	
	13	4PIN	-127 ~ +128	15	15	BLUE. V 4th PIN	

## MCD

	Item number	Adjustment item	Data range	Standard data	Initial data	Note	Device
MCD	00	MHUE	0-31	17	13	SUB HUE OF MAIN PICTURE	TDA9141

## SCD

	Item number	Adjustment item	Data range	Standard data	Initial data	Note	Device
SCD	01	YDLY	0~15	01	01	Y DELAY	TDA9143

#### RGB

	Item number	Adjustment item	Data range	Standard data	Initial data	Note	Device
RGB	00	SHUE	0~31	28	16	SUB HUE OF SUB	TDA4780
	[	Į.		}	ĺ	PICTURE	
	01	SCOL	0~15	10	11	SUB COLOR	
	02	SBRT	0~63	21	10	SUB BRIGHTNESS	
	03	RAMP	0~63	31	31	RED GAIN	
	04	GAMP	0~63	31	31	GREEN GAIN	
	05	BAMP	0~63	31	48	BLUE GAIN	
	06	RCUT	0~63	31	31	RED LEVEL REFERENCE	
	07	GCUT	0~63	45	31	GREEN LEVEL REFERENC	E
	08	BCUT	0~63	31	48	BLUE LEVEL REFERENCE	
	09	PDL	0~63	30	20	PEAK DRIVE LIMIT	
	10	GNMA	0~63	40	40	GAMMA	
	11	ADBL	0/1	00	00	ADAPITVE BLACK	
	12	RELC	0/1	10	01	RELATIVE TO CUT-OFF	
	13	TCPL	0/1	01	01	TIME CONSTANT PEAK	
	1	1		] ]		DRIVE LIMITER	

	ltem number	Adjustment item	Data range	Standard data	Initial data	Note	Device
PIP	00	AXIS	0/1	01	01	RGB AXIS	SDA9188-3X
-	01	RDV	0~15	08	08	V READ DELAY	
	02	RDH	0~63	16	16	H READ DELAY	
	03	FRY	0~15	04	04	BRIGHTNESS OF THE BORDER FRAME	
	04	9V50	0~7	03	03	MULTI PIN PV 50Hz	
	05	9H50	0-7	03	03	MULTI PIN PH 50Hz	
	06	9V60	0~7	03	03	MULTI P IN P V 60Hz	
	07	9H60	0~7	03	03	MULTI P IN P H 60Hz	

#### TXT

	Item number	Adjustment item	Data range	Standard data	Initial data	Note	Device
TXT	00	BOXP	0~15	00	00		TPU3040
	01	TXH	0~255	05	05	H START POSITION	
Ì	02	TXV	0~63	44	44	V START POSITION	
	03	VSP	0~255	59	59	V STOP POSITION	:
	04	BSP	0 ~ 255	61	61	BLANKING STOP	
1	05	BST	0 ~ 255	53	53	BLANKING START	
	06	QSF	0~31	01	01	ACQUSITION SOFT SLICER	
	07	A7F	0 ~ 255	- 10	10	VALUE OF ADRESS 007FH	
	08	QDT	0~63	13	- 13	ACQUSITION DATA SLICER	
1	09	CST	0~255	00	00	CLAMPING START	
	10	CSP	0~255	80	80	CLAMPING STOP	
Ì	11	LMT	0/1	00	00	LIMIT SLICER ADAPTION SWITCH	
	12	GMX	0~255	31	31	GAIN MAX	
	13	FMX	0~255	32	31,	FILTER MAX	

AP

	ltem number	Adjustment item	Data range	Standard data	Initial data	Note	Device
AP	00	TVER	0~3	0.3	03	TPU VERSION (TC20=3)	MSP3410
	01	FAW	0~255	10	10	NICAM FAW THRESHOLD	
	02	CTM	0~255	08	08	NICAM ERROR BIT THRESHOLD (MONO->NICAM)	
	03	CTN	0~255	80	80	NICAM ERROR BIT THRESHOLD (NICAM->MONO)	}
	04	WGO	0~255	10	- 10	WEST GERMAN STEREO LOW THRESHOLD	
	05	WGS	0~255	21	21	WEST GERMAN STEREO HIGH THRESHOLD	
	06	WGT	0~255	80	80	WEST GERMAN STEREO LOW 2 THRESHOLD	}
	07	WGB	0~255	234	234	WEST GERMAN STEREO HIGH 2 THRESH	
	08	ACG	0/1	01	01	AGC AUTO / CONSTANT SWITCH	
	09	CDB	0~63	40	40	AGC GAIN VALUE AT CONSTANT MODE	
	10	FMP	0~127	34	34	FM MONO PRESCALE	
	111	WGP	0 - 127	60	- 60	WEST GERMAN STEREO PRESCALE	
	12	INIP	0~127	127	127	I NICAM PRESCALE	
	13	CRM	0/1	00	00	CARRIER MUTE FUNCTION	
	14	ACO	0/1	01	01	AUDIO CLOCK OUT OFF/ON	

CPU

	ltem number	Adjustment item	Data range	Standard data	Initial data	Note	Device
CPU	00	WAC	0~15	01	01	WEST GERMAN STEREO JUDGE CONSTANT	CXP5400
	01	OSH	0~63	- 11	13	OSD H POSITION	
	02	ODL	0 ~ 256	15	15	POWER ON DELAY	
	03	WIDE	0/1	00	00	RELAY FOR WIDE MODEL	
	"				[	0:4:3 1:16:9	
	04	TWIN	0/1	00	00	0 : Sub V FIELD PROCESSING	
	"					1 : Sub V FRAM PROCESSING	
	05	DSPC	0/1	01	01	0 : ENABLE RECEIVE OF CHANNEL IDENTICAL TO TWIN PICTURE 1 : DISABLE RECEIVE OF CHANNEL IDENTICAL TO TWIN PICTURE	
	06	SFIE	0/1	*00	01	SIFT ENABLE	
	07	SFTF	0/1	00	00	SIFT CHECK FACTORY	1
	08	3 BCN	0~255	10	10		

<sup>\*</sup> After registration adjustment is comleted, set the initial value to "01".

<sup>01 :</sup> As a countermeasure against CRT image burnout, picture slightly shifts left and right (every 2 hours).

<sup>00:</sup> No shift of picture (adjustment mode)

ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
CONVERGENCE ADJUSTMENT				
●When replacing the deflection yoke, always perform "DEFLECTION YOKE TILT ADJUSTMENT" before adjusting the convergence.				
Adjustment procedure				
R GH (SUB), R GV (SUB)  R RH (SUB), R RV (SUB)  R BH (SUB), R BV (SUB)				
• GREEN REGISTRATION ADJUSTMENT			<vsp menu=""></vsp>	
V-SHIFT adjustment	Monoscope pattern or Crosshatch		VSP VPOS	VPOS
V-LINEARITY adjustment	pattern		VSP VLIN	VLIN -
V-SIZE, V-CORRECTION adjustment     While tracking, adjust so that the lattice intervals for VSIZ and     VSCO are equal.			VSP VSIZ VSP VSCO	vsiz + -
				vsco ( )

ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
H-SHIFT adjustment			VSP HPOS	HPOS •
H-SIZE adjustment     Finely adjust with SUB MSIZE.			VSP HSIZ	HSIZ -
PIN-AMP adjustment     Finely adjust with SUB MPIN.			VSP HPIN	HPIN → [[([])]]
UPPER/LOWER-CORNER PIN adjustment     Correct the screen top and bottom section line bow.     However, if this adjustment is overdone, distortion may occur with the PIN-AMP adjustment that can not be adjusted away.			VSP UPCP VSP LOCP	UPCP →
Note: The PIN-AMP adjustment adjusts the overall screen from top to bottom, but the UPPER/LOWER-CORNER PIN adjustments have just large movement in the top and bottom sections, so be careful.				LOCP
V-ANGLE, V-BOW adjustment Correct the tilt and bow of the vertical line at the center of the screen.			VSP HSKE VSP HBOW	HSKE
• TILT adjustment			VSP HKEY	HBOW ←
Adjust to eliminate the tilt of one of the two vertical lines at both ends of the screen.			VOF FIRE 1	

	ADJUSTMENT ITEM AND PROCEDURE				EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER			
<b>CONV</b> Adjustm	ERGENCE SU			TME	T						
Aujustiii	<del></del>	<del></del>		Adjustn	ent tvi		<del></del> -1			:	
Display	Adjustment item	RGH	RGV	RRH	RRV	RBH	RBV				
BSEL	COL SELECT	-	_	_	_	0	_				
CENT	CENT	0	0	0	0	0	0				
SKEW	SKEW	o	0	0	0	0	0				
BOW	BOW	0	0	0	0	0	0				
4BOW	4TH BOW	0		0	_	0		i			
SIZE	SIZE	0	0	0	0	0	0				
LIN	LIN	0	О	0	0	0	0				
MSIZ	MID SIZE	0	0	0	0	0	0				
MLIN	MID LIN	0	0	0	_	0	-			}	
MKEY	MID KEY	-	O	-	0	_	0				
KEY	KEY	0	0	. 0	0	0	0				,
SSKW	SUB SKEW	О	0	0	0	0	0				
MPIN	MID PIN	0	0	0	0	0	0				
PIN	PIN	0	0	0	0	. 0	0				and the second second
SBOW	SUB BOW	0	О	0	0	0	0				
WAVE	WAVE	-	0	-	0	-	0			}	
MBOW	MID BOW	0	-	0	_	0					
4PIN	4TH PIN	0	0	0	0	0	0				
4SBOW	4TH SUB BOW	0	-	0		0	]			t t	
					<del>.</del>						w.
	g skier og til er										grand to the second of the sec
*	ng Kinggan Lagar	and the second	.*,		er Maria				*n * 12 * * * * * * * * * * * * * * * * *	A Secretary	**************************************

ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
• GREEN SUB ADJUSTMENT SCREEN CENTER SECTION GREEN VERTICAL LINE				
ADJUSTMENT     1. Finely adjust with RGH CENT, RGH BOW, RGH SKEW.     Adjust watching out for the RGH CENT screen center section.			<rgh menu=""> RGH CENT RGH BOW RGH SKEW</rgh>	Watch out only for the GH CENT center point.
				Watch the vertical center line.
				RGH CENT -
				RGH BOW ← (((((((((((((((((((((((((((((((((((
				RGH SKEW
2. RGH 4TH BOW adjustment  Correct the corner distortion that could not be adjusted away with the RGH BOW adjustment.			RGH 4BOW	RGH 4BOW →
		,		
	!			

ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
SCREEN CENTER SECTION GREEN HORIZONTAL LINE			<rgv menu=""></rgv>	
ADJUSTMENT				
Finely adjust the center position of the vertical line at the center of the screen with RGV CENT.			RGV CENT	Watch the horizontal center line.
				Watch out only for the RGV CENT center point.
				RGV CENT
Correct the tilt and bow of the horizontal line at the center of the screen with RGV SKEW and RGV BOW.			RGV SKEW RGV BOW	RGV SKEW
				RGV BOW
			<rgh menu=""></rgh>	
GREEN SIZE AND LINEARITY ADJUSTMENT			:	
Balance the sizes at both sides of the center section of the screen with RGH MLIN.			RGH MLIN RGH LIN	- <del>                                     </del>
<ol><li>Balance the sizes on both end sections of the screen with RGH LIN.</li></ol>				MLIN
<ol> <li>While tracking, adjust with RGH MLIN and RGH LIN so that the sizes of the horizontal line at the center of the screen are symmetrical left and right.</li> </ol>				- HIN
	,			<u> </u>

ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
GREEN HORIZONTAL SIZE ADJUSTMENT			<rgh menu=""></rgh>	1
1. Adjust with RGH MSIZE so that the sizes of both edges and of			RGH MSIZ	
both sides of the center section of the screen are equal.			DOM GIZE	- ' <del>                                     </del>
<ol><li>Adjust with RGH SIZE so that the horizontal sizes of both edges and of both sides of the center section of the screen are equal.</li></ol>			RGH SIZE	MSIZ () SIZE
3. While tracking, adjust with RGH MSIZ and RGH SIZE so that				
the lattice intervals for the horizontal line section of the center				— <del></del>
section of the screen are equal and so that the horizontal size is the prescribed value.				
4. If M LIN is changed when the RGH MSIZ and RGH SIZE				
adjustment is complete, adjust again while tracking.				GH MLIN
				GH MSIZ GH LIN
				GH SIZE
•With just the H SIZE adjustment in MAIN, if there is no need to adjust RGH SIZE in SUB this can save power.				
GREEN VERTICAL LINEARITY ADJUSTMENT			<rgv menu=""></rgv>	
Adjust RGV LIN so that the vertical lines at the top and bottom of the screen are symmetrical.			RGV LIN	
	}			

ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
GREEN VERTICAL SIZE ADJUSTMENT  1. Adjust with RGV MSIZE so that the sizes for the top and bottom sections of the screen and for both sides of the center section of the screen are equal.			<rgv menu=""> RGV MSIZ</rgv>	
<ol> <li>Set the vertical size to the prescribed value with RGV SIZE.</li> <li>Adjust RGV MSIZ and RGV SIZE watching the vertical line at the center section of the screen.</li> <li>While tracking, adjust with RGV MSIZ and RGV SIZE so that the lattice intervals for the vertical line section of the center section of the screen are equal and so that the vertical size is the regulation value.</li> <li>If RGV LIN is out of place when the RGV MSIZ and RGV SIZE adjustment is complete, adjust again while tracking.</li> <li>If there is no need to adjust RGV SIZE in SUB with just the V SIZE adjustment in MAIN, this can save power.</li> </ol>			RGV SIZE	SIZE
GREEN HORIZONTAL TRAPEZOIDAL DISTORTION  ADJUSTMENT  1. Adjust with RGH SSKW so that the tilt of the vertical lines at both edges of the screen is symmetrical left and right.  2. Adjust with RGH KEY so that there is no tilt in the vertical lines at both edges of the screen.  3. If there is a tilt on either the left or right after the RGH KEY adjustment, adjust while tracking.			<rgv menu=""> RGH SSKW RGH KEY</rgv>	SSKW ( ) KEY

ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
<ol> <li>GREEN HORIZONTAL QUATERNARY ADJUSTMENT</li> <li>Correct the quaternary distortion with RGH 4PIN.</li> <li>While balancing, correct the quaternary distortion of both end sections of the screen with RGH 4SBOW.</li> <li>While tracking, adjust with RGH 4PIN and RGH 4SBOW.</li> </ol>			<rgh menu="">  RGH 4PIN RGH 4SBOW</rgh>	
				4 PIN 1 4SBOW
<ol> <li>GREEN HORIZONTAL ASYMMETRICAL PIN DISTORTION         ADJUSTMENT     </li> <li>Adjust with RGH MBOW so that the pin asymmetry at both sides of the center section of screen is symmetrical.</li> <li>Adjust with RGH SBOW so that the bow at both end sections of the screen is symmetrical left and right.</li> <li>While tracking, adjust with RGH MBOW and RGH SBOW so that the bow of vertical lines on the entire screen is symmetrical left and right.</li> </ol>			<rgh menu=""> RGH MBOW RGH SBOW</rgh>	M BOW S BOW

ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
GREEN HORIZONTAL SYMMETRICAL PIN DISTORTION			<rgh menu=""></rgh>	
ADJUSTMENT				
<ol> <li>Adjust the pin distortion at both sides of the center section of the screen with RGH MPIN.</li> <li>Adjust the pin distortion at both end sections of the screen with RGH PIN.</li> <li>While tracking, adjust with RGH MPIN and RGH PIN so that the PIN of vertical lines on the entire screen have no bowing.</li> </ol>			RGH MPIN	M PIN
4. If there is asymmetrical pin distortion after the RGH MPIN and RGH PIN adjustments, adjust with RGH MBOW and RGH SBOW while tracking.			RGH MBOW RGH SBOW	PIN
●With just the PIN AMP adjustment in MAIN, if there is no need to adjust RGV PIN in SUB, this can save power.				GH MBOW GH SBOW GH SBOW GH MPIN
GREEN VERTICAL WAVE (TERTIARY DISTORTION)	· j		<rgv menu=""></rgv>	
ADJUSTMENT	·			
Take the screen top and bottom horizontal lines with RGV WAVE and find the secondary and quaternary waveform.			RGV WAVE	RGV WAVE
There is KEY distortion after the RGV WAVE adjustment, so adjust with GV WAVE and RGV KEY while tracking.			RGV KEY	RGV KEY
		in the second of the second		

ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
GREEN VERTICAL QUATERNARY DISTORTION			<rgv menu=""></rgv>	
ADJUSTMENT				
Correct the quaternary distortion of the horizontal lines at the top and bottom sections of the screen with RGV 4PIN.			RGV 4PIN	RGV 4PIN
<ol> <li>Since there is no 4SBO for vertical correction, there will be a slight imbalance, but adjust to eliminate the distortion from the horizontal line at either the top or the bottom of the screen.</li> <li>In many cases, the horizontal lines at the top and bottom sections of the screen are not straight lines after the adjustment.         As long as the secondary distortion is mild enough that it can be corrected with the PIN adjustment, this is OK.     </li> </ol>				
GREEN VERTICAL TRAPEZOIDAL DISTORTION			<rgv menu=""></rgv>	
ADJUSTMENT			RGV SSKW	RGV SSKW
<ol> <li>Adjust with RGV SSKW so that the tilt of the horizontal lines at the top and bottom sections of the screen is symmetrical about the center position horizontal line,</li> <li>Adjust with RGV MKEY so that there is no tilt for the line</li> </ol>			RGV MKEY	RGV SSRW
sections at both sides of the horizontal lines at the center section of the stream.  3. Adjust with RGV KEY so that there is no tilt for the horizontal lines at the top and bottom sections of the screen.			RGV KEY	MKEY
4. While tracking, adjust with RGV MKEY and RGV KEY so that there is no tilt for the horizontal lines on the entire screen.				MREY (1) KEY
5. If the tilt is unbalanced after the RGV MKEY and RGV KEY adjustment, adjust again with RGV SSKW.			RGV SSKW	GV SSKW GV MKEY

ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
GREEN VERTICAL ASYMMETRICAL PIN DISTORTION			<rgv menu=""></rgv>	
(SECONDARY DISTORTION) ADJUSTMENT				
Correct the asymmetrical pin distortion at the top and bottom sections of the screen with RGV SBOW.	,		RGV SBOW	RGV SBOW
GREEN VERTICAL ASYMMETRICAL PIN DISTORTION ADJUSTMENT			<rgv menu=""></rgv>	
<ol> <li>Adjust the pin distortion for both side sections and the center of the screen with RGV MPIN.</li> <li>Adjust with RGV PIN so that the horizontal lines at the top and bottom sections of the screen are straight lines.</li> <li>Adjust with RGV MPIN and RGV PIN so that there is no curve in the horizontal lines on the entire screen.</li> </ol>			RGV MPIN RGV PIN	MPIN PIN
4. After the adjustments in Items 1-3, adjust the tracking with RGV SBOW, RGV MPIN, and RGV PIN.	,		RGV SBOW	GV SBOW GV PIN

ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
GREEN AND RED REGISTRATION ADJUSTMENT				
(RRH, RRV)				
1. Receive a PAL cross-hatch signal.	PAL Cross-hatch			
2. Adjust so that the red lines lay on the green lines.	pattern			
Adjust with the same procedure as the GREEN SUB	}			
adjustment.				
Notes: 1. The main correction is not carried out during red				
registration adjustment.				
2. Beware. The green adjustment items can be changed				
by mistake.				
3. Unlike for green, adjust within the range -127 ~ +128.				
GREEN AND BLUE REGISTRATION ADJUSTMENT				
(RBH, RBV)				
1. Receive a PAL cross-hatch signal.	PAL Cross-hatch			
<ol> <li>Adjust so that the blue and green lines are on top of each other.</li> </ol>	pattern			
Notes: 1. The main correction is not carried out during RED				
registration adjustment.				
2. Beware. The GREEN and RED adjustment items				
can be changed by mistake.				
		·		
	·		* 1	
			1	

ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
1. Receive an off-air signal. 2. Adjust the AGC VR ( IF 1002, IF1003 ) so that there is no snow noise and cross-modulation.  WHITE BALANCE ADJUSTMENT  1. Receive the monoscope pattern signal and adjust the picture quality with the menu.  2. Adjust service mode SBRT so that the signal 10 IRE section barely glows.	AND SIGNAL			

The second of th

# SECTION 4 SAFETY RELATED ADJUSTMENTS

ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
HV HOLD DOWN CIRCUIT OPERATIONS CHECK AND ADJUSTMENT (☑ RESISTOR)			■ R809, R988	E BOARD - COMPONENT SIDE -
When replacing the parts marked on the right, check the HV hold down and adjust.		■ marked parts C818, D804, D806, D809, D909, D912, Q915, R809, R855, R856, R857, R858, R883, R954, R955, R984, R988, R991, R995, R996, T801(FBT),T803		CN886 CN885 CN884 ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○
<ol> <li>Remove the cap for the unconnected pin in the high-voltage block and connect a Static Voltmeter.</li> <li>Input 240 VAC power.</li> </ol>	Static Voltmeter	HV Block		Remove the cap off from the unused terminal and connect a static voltmeter there.
3. Receive the Dot siganl and set the PICTURE and BRIGHTNESS settings to their minimums.	Dot pattern		PICTUREminimum BRIGHTNESSminimum	
4. Connect a 33 k variable resistor across the E board CN885 connector (with the variable resistor set to its maximum).				CN885 E board
				VR33kΩ

-41.

ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
<ul> <li>5. Gradually lower the value of the variable resistor and check that the hold down circuit operates at a Static Voltmeter reading of 33.70 ± 0.80 kVDC and that the rasters disappear.</li> <li>6. If the hold down circuit operates and the rasters disappear at a Static Voltmeter reading of 34.0kVDC or higher, remove resistor R809 and mount a 16.0 k 1/4W RN at R988.</li> <li>If the hold down circuit operates and the rasters disappear at a Static Voltmeter reading of 32.0 kVDC or lower, remove resistor R809 and mount 6.2 k 1/4W RN at R988.</li> <li>7. Check Item 5 again.</li> </ul>			R988 R988	33.70 ± 0.80 kVDC  34.0 kVDC or higher 16.0 k 1/4W  32.0 kVDC or lower 6.2 k 1/4W  CN886 (E board)  ○ ○ ○ ○ WO ■ R809  W ■ R988
HV REGULATION CIRCUIT CHECK AND ADJUSTMENT (► RESISTOR)				2,1000
When replacing the parts marked  on the right, check the HV regulation and adjust.  1. Remove the cap for the unconnected pin in the high-voltage block and connect a Static Voltmeter.  2. Input 240 VAC power.	Static Voltmeter	marked parts C918, C930, C934, C980, D902, D920, D925, Q909, R808, R851, R929, R936, R939, R942, R944, R945, R946, R947, R950, R960, R965, R967, R971, R975, R976, R982, R983, R985, R998	R808, R983	E BOARD - COMPONENT SIDE -  CN886 CN885 CN884  COOO COO COMPO COMPO 6 1
3. Receive the Dot signal and set the PICTURE and BRIGHTNESS settings to their minimums.	Dot pattern		PICTURE minimum BRIGHTNESS minimum	

. 43 |

## SECTION 5 ELECTRICAL ADJUSTMENTS

ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
B BOARD ADJUSTMENT				<cn201 <b="">⑤ pin&gt; <u>w</u> су му ві</cn201>
SUB COLOR (SCOL) ADJUSTMENT				TTYW G TT F TT BK
<ol> <li>Input the PAL Color Bar signal and adjustment the picture control.</li> <li>Set to service mode.</li> <li>Connect an oscilloscope between ⑤ pin of CN201 and ground.</li> <li>Adjust SCOL so that Vcy = VMg = VBi in the waveform levels.</li> <li>Write the data to memory.</li> </ol>	PAL Color Bar pattern Oscilloscope	CN201 ⑤ pin (B(2/3) Board)	PICTURE 80% RGB SCOL : Vcy =VMg=VBi	Vw Vcy Vmg VBI 63.5 μsec <cn201 pin="" ⑤=""></cn201>
1. Input the NTSC Color Bar signal. 2. Set to service mode. 3. Connect an oscilloscope between ⑤ pin of CN201 and ground. 4. Adjust MHUE so that Vcy = VMg in the waveform levels. 5. Write the data to memory.	NTSC Color Bar pattern Oscilloscope	CN201 (5) pin (B(2/3) Board)	MCD MHUE : Vcy =VMg	V <sub>W</sub> C <sub>y</sub> M <sub>g</sub> B <sub>i</sub> B <sub>k</sub> V <sub>w</sub> V <sub>cy</sub> V <sub>Mg</sub> V <sub>Bi</sub> 63.5 μsec  (PIP MODE) < CN201 ⑤ pin >
(PIP MODE)  1. Input the NTSC Color Bar signal.  2. Select PIP on screen mode and put the set into service mode.  3. Connect an oscilloscope between ⑤ pin of CN201 and ground.  4. Adjust SHUE so that Vcy = VMg in the waveform levels.  5. Write the data to memory.	NTSC Color Bar pattern Oscilloscope	CN201 ⑤ pin (B(2/3) Board)	SCD SHUE : Vcy =VMg	W Cy Mg Bi W Cy Mg Bi Yw G R Bk Yw G R Bk  Vw Vcy Vkg VBi Vw Vcy Vkg VBi  MAIN PIP SCREEN SCREEN
<ol> <li>(PIP MODE)         <ol> <li>Input the PAL Color Bar signal.</li> <li>Select PIP on screen mode and put the set into service mode.</li> <li>Connect an oscilloscope Q14 emitter on the B(1/3) board and ground.</li> </ol> </li> <li>Adjust SCON so that V MAIN-Y = V PIP-Y in the waveform levels.</li> <li>Write the data to memory.</li> </ol>	PAL Color Bar pattern Oscilloscope	Q14 emitter (B(1/3) Board)	PIP SCON: V MAIN-Y =V PIP-Y	31.75 μsec  (PIP MODE)  < B(1/3) board - Q14 emitter >  White f  V MAIN-Y  Black  MAIN SCREEN  PIP SCREEN


ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
SUB WHITE BALANCE ADJUSTMENT				
<ol> <li>(PIP MODE)</li> <li>Input Gray Scale signal 20 IRE.</li> <li>Select PIP in screen mode and put the set into service mode.</li> <li>Connect an oscilloscope Q15 emitter on the B(1/3) board and ground.</li> <li>Adjust RV1 so that V main = Vpip in the waveform levels.</li> <li>Connect an oscilloscope Q16 emitter on the B(1/3) board and ground.</li> <li>Adjust RV2 so that V main = Vpip in the waveform levels.</li> </ol>	Oscilloscope	[ B(1/3) Board ] Q15 emitter (R-Y) Q16 emitter (B-Y) Q35 emitter (PIP-FS)	[ B(1/3) Board ] RV1 (R-Y) RV2 (B-Y)	< Q15 emitter, Q16 emitter >  -V 50(R-V)  -V 50(B-V)  -U 50(B-V)  Vmain  Vpip  PIP-FS
P IN P POSITION ADJUSTMENT  1. Upon receiving the Monoscope signal. 2. Set service mode and then press the PIP command twice. The P in P positon will then move periodically to four points. Adjust "RDV" and "RDH" on the new screen so that the four points are distributed equally at; up, down, left and right. 3. Write the data to memory.	Monoscope pattern		< PIP MENU > RDV RDH	
1. Receive the RF signal with TEXT. 2. Set to service mode. 3. Set the TEXT in MIX mode and adjust the screen positon with "TXH" and "TXV". 4. Write the data to memory.			<txt menu=""> TXH (H position) TXV (V position)</txt>	
OSD POSITION ADJUSTMENT  1. Receive the PAL Color Bar signal. 2. Set to service mode. 3. Adjust "OSH" so that the center line of the signal and the center of the crosshairs of the OSD display match are aligned with each other. 4. Write the data to memory.	PAL Color Bar pattern	,	< CPU MENU > OSH	

### 6-5. SEMICONDUCTORS





MC74HC163AF MC74HC4053F MC74HC4538F IR3M02A TDA4665T-T

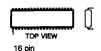

CXA1855S



CXD2018Q




CXD2024AQ



CXP85460-033Q




CXP85112B-613S

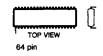

CX20125




IR2112

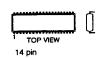

LA7856A PA0053B



LM393P M5218P ST24016CM1-TR/A μPC393C

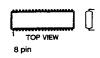

MB81C1000A-70PJ-T5



MC14066BF




MN1382S



MSP3410 TPU3040



NJM2058D

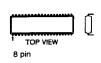

L7805CP MC7805CT PQ09RF2 TA7805S TA7812S




LM7912CT MC7905CT NJM7912FA



PC123F2



PM0002B

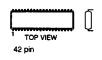

PQ05RF1



PQ12RF1




4 pin

SBX1780-51



SE-135N

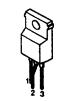

SDA9187-2XGEG SDA9188-3XGEG



STK392-010



TDA6101Q/N3



STV9379



TDA4780/V3



TDA7265




TDA9143 TDA9160A



**μPC339C** 



μPC574J

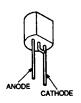

DTA114EKA-T146 DTA144EKA-T146 DTC144EKA-T146 2SA1037K-T-146-QR 2SA1162G 2SB709A-QRS-TX 2SC1623-L5L6 2SC2412K-QR 2SC2712-YG 2SD601A-Q



DTA144ESA DTC124ESA




IRFI640LF IRFI744G-LF 2SA1837 2SC4793



2SA1013-O 2SA1208



2SA1175-HFE 2SA1309A-QRS 2SC2785-HFE 2SC3311A-QRSTA

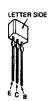

2SA1221-L 2SA1221-T-M 2SB733-34 2SB734-B4 2SB734-T-4 2SD774-34



2SB649A 2SC2668-LK



2SC2878-AB



2SC4632LS-CB7 2SD1887-CA



2SD2348LBSONY



BAS16



DAN202K



DAP202K



DA204K 1SS226



EL1Z GP08D(GP08DPKG23) P6KE200AG23 RGP02-20EL-6394 RGP10GPKG23 S2L40F UF4005PKG23 1SS83



D1N20R ERA82-004TP5 MTZJ-13 MTZJ-3.6A MTZJ-T-77-24 MTZJ-T-77-3.6 RD13ES-B2 RD20ES-B1 RD20ES-B1 RD20ES-B1 RD3.3ES-B2 RD3.3ES-B2 RD3.9ES-B1 RD33ES-B2 RD5.6ES-B2 RD5.6ES-B2 RD5.1ES-B1 1SS119-25 1SS119-25 1SS133T-77 11EQS04



D10SC4M



D10SC4M D8LC40



D6SB60L RBA-4068



D2S4M



D3S4M-F EGP10D ERC04-06S ERC06-15S ERC91-02 RU-IC S2LA20F



**SLR-325VCT31** 

CATHODE

ERC38-06 U05G V09C V19E



MA110



MA3100H MA3051M MA3075M-TX RD13M-B3 RD3.9M-B1 RD5.1M-B2 RD7.5M-B2




MA3240-TX



SC802-06



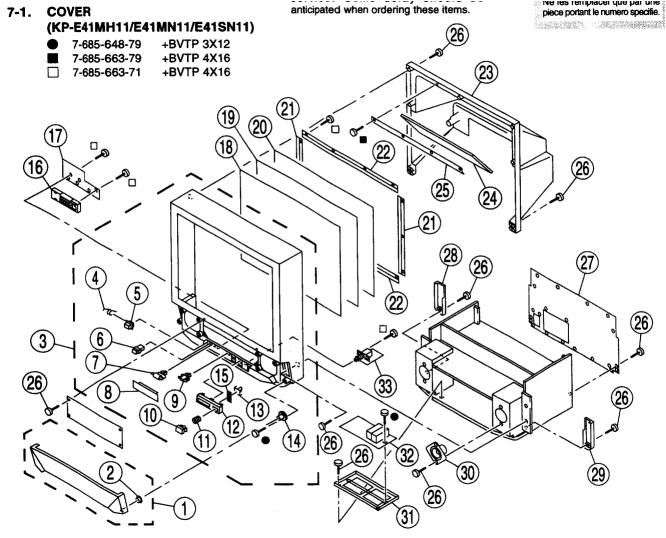


### 7-2. COVER

### (KP-E53MH11/E53MN11/E53SN11)

7-685-648-79 +BVTP 3X12


7-685-661-79 TAPPING SCREW DIA.4X12

7-685-663-79 +BVTP 4X16

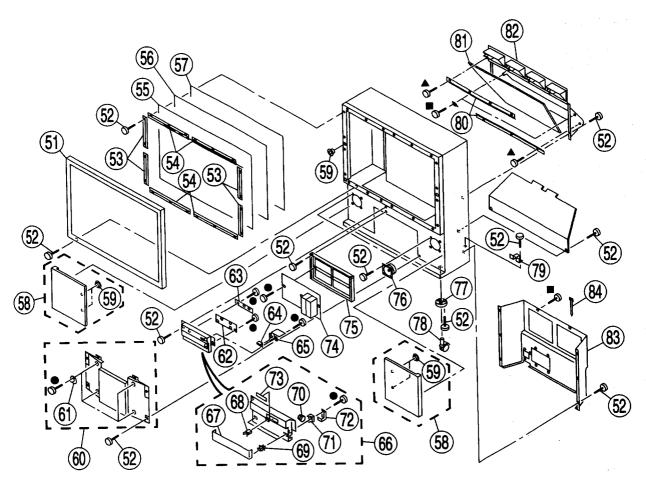


## 7-3. CHASSIS

• 7-685-648-79 +BVTP 3X12

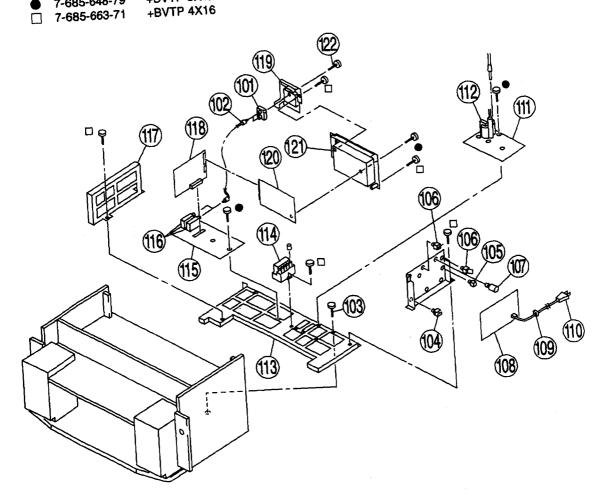

7-685-663-71 +BVTP 4X16

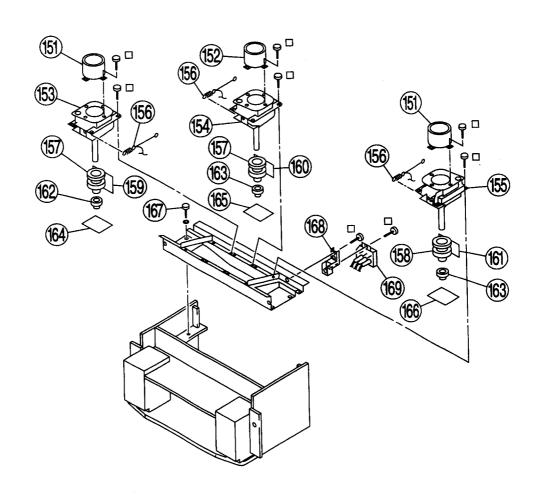



SONY -08945

## RG-1 CHASSIS

# **SERVICE MANUAL**

MODEL COMMANDER DEST. CHASSIS NO.


KP-E61MH11 RM-901 Hong Kong SCC-K62C-A

KP-E61MH11 RM-901 ME SCC-K61C-A KP-E61MN11 RM-901 GE SCC-K63C-A


KP-E61SN11 RM-901 Austrarian SCC-K64C-A

COMMANDER DEST. CHASSIS NO.

MODEL

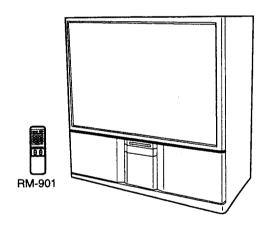



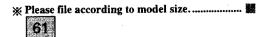



### **SPECIFICATIONS**

**Projection system** 

3 picture tubes, 3 lenses, horizontal in-

line system

Picture tube

Screen size

7 inch high-brightness monochrome tubes (6.3 raster size), with optical

coupling and liquidcooling system

Projection lenses High performance, large-diameter hybrid lens F1.0

61 inches

**Television system** 

B/G, I, D/K, M

Color system PAL, PAL 60, SECAM, NTSC4.43,

NTSC3.58

Channel coverage

See "Channel coverage" at the bottom

Antenna 75 ohm external antenna terminal

Audio output (Speaker)

15 W × 2

**Number of terminals** 

Video Input: 4, Output: 1
Audio Input: 4, Output: 1

1 . 1

S1 Video/S Video

Input: 4, Output: 1

Y: 1 Vp-p, 75 ohms, unbalanced, sync

negative,

C: 0.286 Vp-p, 75 ohms

**Power requirement** 

110 - 240 V AC, 50/60 Hz

Power consumption

175 W

Dimensions (w/h/d)

1336×1519×647mm

Mass

Approx. 130 kg

**Supplied accessories** 

Remote commander RM-901(1)

Size R6 (AA) battery (1)

Design and specifications are subject to change without notice.

### Channel coverage

### **M E/ASIA/CATV W EURO**

Receivable channel	Channel display
E-2 to E-12	C02 to C12
E-21 to E-69	C21 to C69
S-01 to S-03	S42 to S44
S-1 to S-41	S01 to S41
Indonesia	
1A	C01
2 to 11	C03 to C12
Morocco	
M-4 to M-7	C70 to C73
M-8 to M-10	C08 to C10
New Zealand	
1	C01
2 to 11	C03 to C12
27 to 62	C27 to C62

#### HK/UK

Receivable channel	Channel display
Hong Kong, United	Kingdom
B-21 to B-68	C21 to C68
Ireland	
A to J	C01 to C09
South Africa	
4 to 13	C04 to C13
21 to 68	C21 to C68

#### **AUSTRALIA**

Receivable channel	Channel display
Australia	
AS-0 to AS-12	C00 to C12
AS-5A, AS-9A	C13, C14
AS-28 to AS-69	C28 to C69
New Zealand	
1	C00
2 to 3	C01 to C02
4 to 7	C06 to C09
8	C14
9 to 11	C10 to C12

### **CHINA/E EURO**

Receivable channel	Channel display
China	
C-1 to C-2	C01 to C02
C-3	C13
C-4	C03
C-5	C04
C-6	C14
C-7 to C-12	C06 to C11
C-13 to C-24	C21 to C32
C-25 to C-47	C38 to C60
C-48 to C-57	C61 to C70
Z-1 to Z-39	S01 to S39
Eastern Europe	
R-1 to R-12	C01 to C12
R-21 to R-60	C21 to C60

## **AMERICA/CATV AMERICA**

Receivable channel	Channel display
2 to 79	C02 to C79
A-1	S99
A-2	S98
A-3	S97
A-4	S96
A-5	S95
A-6	S06
A-7	S05
A-8	S01
A to W	S14 to S36
AA to CCC	S37 to S65

### **JAPAN**

Receivable channel	Channel display
J-1 to J-62	C01 to C62
C-13 to C-32	C80 to C99

## TABLE OF CONTENTS

Sec	ion <u>Title</u> <u>Page</u>
1.	GENERAL
	Installing the projection TV4
	Changing the menu language
	Instaining the projection 1 v  Changing the menu language 4  Adjusting the convergence (CONVERGENCE) 5  Presetting channels 5
	Presetting channels
	Watching the TV
	Licing the Dicture in Picture teatures
	Selecting the nicture mode
	Selecting the sound mode
	Selecting the stereo or bilingual program9
	Setting the speaker switch9
	Setting the speaker switch Viewing Teletext  Using headphones  11
	Customizing the projection TV
	Setting the remote command mode
	Connections 13
	Troubleshooting 14
	Channel allocation
2.	DISASSEMBLY
	2-1-1. Rear Board and Light Interception Removal
	2-1-2. Chassis Assy Removal
	2-1-3. Service Position
	2.1.5 IJ Board Removal
	2-1-6. B Board Removal
	2-1-6. B Board Removal 16 2-1-7. D Board Removal 16
	2-1-8 HA HB and HC Boards Removal
	2-1-9. Screen Frame Assy Removal
	2-1-10.Reflection Mirror Removal
	2-1-11 Piglir Voltage Carbon Instantion and Proceedings 17 2-2. Service Stay Assy How to Use and Carry Back Service Stay Assy 18
	2-2. Service Stay Assy How to Use and Carry Back Service Stay Assy 18
	2-2-1 Service Stay Assy 18
	2-2-2. Picture Tube Bracket Assy Removal and Install a
	Chassis Assy
	2-2-3. Install a Picture Tube Blacket Assy
3.	CETLID ADJUSTMENTS
J.	Screen Voltage Adjustment
	Focus Lens Adjustment 20
	SCREEN (G2) Adjustment 20
	Focus VR Adjustment 21 Deflection Yoke Tilt Adjustment 21
	2-Pole Magnet Adjustment 22
	4-Pole Magnet Adjustment 22
	Defocus Adjustment
	Flectrical Adjustment By Remote Commander
	1. Method of Setting the Service Adjustment Mode
	2. Memory Write Confirmation Method 23 3. Adjust Buttons and Indicator 24
	4. Service Mode List
	Convergence Adjustment 27
	Green Registration Adjustment
	Convergence Sub Adjustment 29
	Green Sub Adjustment 30
	Screen Center Section Green Vertical Line Adjustment
	Green Size and Linearity Adjustment
	Green Horizontal Size Adjustment
	Green Vertical Linearity Adjustment
	Green Vertical Size Adjustment 33
	Green Horizontal Trapezoidal Distortion Adjustment
	Green Horizontal Quaternary Adjustment
	Green Horizontal Symmetrical Pin Distortion Adjustment
	Green Vertical Wave (Terriary Distortion) Adjustment
	Green Vertical Quaternary Distortion Adjustment
	Green Vertical Trapezoidal Distortion Adjustment
	Green Vertical Asymmetrical Pin Distortion (Secondary Distortion)
	Adjustment 37 Green Vertical Asymmetrical Pin Distortion Adjustment 37
	Green and Red Registration Adjustment (RRH, RRV)
	Green and Blue Registration Adjustment (RBH, RBV)
	AGC Adjustment 39
	White Balance Adjustment
4.	SAFETY RELATED ADJUSTMENTS 40

Sec	tion Title P	age
5.	ELECTRICAL ADJUSTMENTS	
	B Board Adjustment	43
	Sub Color (SCOL) Adjustment	43
	Sub Hue (NHUE, SHUE) Adjustment	43
	Sub Contrast (SCON) Adjustment	43
	Sub White Balance Adjustment	44
	P in P Position Adjustment	44
	Text Position Adjustment	44
	OSD Position Adjustment	44
6.	DIAGRAMS	
•	6-1. Block Diagram (1)	45
	Block Diagram (2)	47
	Block Diagram (3)	52
	6-2. Frame Schematic Diagram	57
	6-3 Circuit Boards Location	60
	6-4. Printed Wiring Boards and Schematic Diagrams	60
	• B(1/3) Board	61
	• B(2/3) Board	65
	• B(3/3) Board	70
	D Board	73
	• U Board	. 79
	• E Board	81
	• A Board	87
	• G Board	. 93
	• ZR Board	. 97
	• ZG Board	. 98
	ZB Board	. 99
	CR Board	100
	CG Board	100
	CB Board	101
	HA Board	103
	HB Board	103
	HC Board	104
	6-5. Semiconductors	105
7.	EXPLODED VIEWS	
	7-1. Cover	107
	7-2 Chassis	108
	7-3. Picture Tube	109
В.	ELECTRICAL PARTS LIST	110

#### (CAUTION)

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR CARBON PAINTED ON THE CRT, AFTER REMOVING THE ANODE.

### SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK & ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESECOMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY. CIRCUIT ADJUSTMENTS THAT ARE CRITICAL TO SAFEOPERATION ARE IDENTIFIED IN THIS MANUAL. FOLLOW THESE PROCEDURES WHENEVER CRITICAL COMPONENTS ARE REPLACED OR IMPROPER OPERATION IS SUSPECTED.

## (ATTENTION)

APRES AVOIR DECONNECTE LE CAP DE L'ANODE, COURTCIRCUITER L'ANODE DU TUBE CATHODIQUE ET CELUI DE L'ANODE DU CAP AU CHASSIS METALLIQUE DE L'APPAREIL, OU AU COUCHE DE CARBONE PEINTE SUR LE TUBE CATHODIQUE OU AU BLINDAGE DU TUBE CATHODIQUE.

#### ATTENTION AUX COMPOSANTS RELATIFS ÁLA SÉCURITÉ!!

LES COMPOSANTS IDENTIFIÉS PAR UNE TRAME ET PAR UNE MAPQUE À SUR LES SCHÉMAS DE PRINCIPE, LES VUES EXPLOSÉES ET LES LISTES DE PIECES CONT D'UNEIMPORTANCE CRITIQUE POUR LA SÉCURITÉ DU FONCTIOI NEMENT. NE LES REMPLACER QUE PAR DES COMPOSANTS SONY DONT LE NUMÉRO DE PIÈCE EST INDIQUÉ DANS LE PRÉSENT MANUEL OU DANS DES SUPPLÉMENTS PUBLIÉS PAR SONY. LES RÉGLAGES DE CIRCUIT DONT L'IMPORTANCE EST CRITIQUE POUR LA SÉCURITÉ DU FONCTIONNEMENT SONT IDENTIFIES DANS LE PRÉSENT MANUEL. SUIVRE CES PROCÉDURES LORS DE CHAQUE REMPLACEMENT DE COMPOSANTS CRITIQUES, OU LORSQU'UN MAUVAIS FONCTIONNEMENT EST SUSPECTÉ.

# SECTION 1 GENERAL

The operation instruction mentioned here are partial abstracts from the Operating Instruction Manual. The page numbers of the Operating Instruction Manual remain as in the manual.

**Getting Started** 

# Installing the projection TV


For the best picture quality, install the projection TV within the areas shown below.

Optimum viewing area (Horizontal)

Optimum viewing area (Vertical)

Changing the menu language

If you prefer Chinese to English, you can change the menu language. You can use the buttons on both the remote commander and the projection TV.

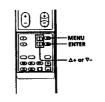

1 Press POWER on the projection TV.

2 Press MENU.



ÞVIDEO CONTROL AUDIO CONTROL FEATURES PRESET LANGUAGE

3 Press △ + or ▽ - to move the cursor (▶) to LANGUAGE.



VIDEO CONTROL AUDIO CONTROL FEATURES PRESET LANGUAGE

4 Press ENTER.



LANGUAGE⊃ ▶ENGLISH CHINESE/中文

5 Press  $\triangle$  + or  $\nabla$  - to select CHINESE.



LANGUAGE⊃ ENGLISH ▶CHINESE/中文


6 Press ENTER.




衛在 /LANGUAGE 英文/ENGL I 8H 中文

7 Press MENU to return to the normal screen.



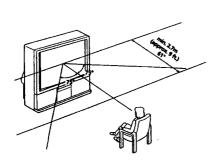

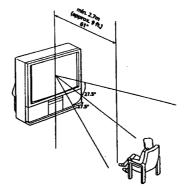

-EN | Getting Starte

**Getting Started** 

7-EN

# Adjusting the convergence (CONVERGENCE)


AND THE RESIDENCE OF STREET AND STREET AND ASSOCIATION OF THE PROPERTY OF THE

Before you use the projection TV, adjust convergence. The projection tube image appears on the screen in three layers (red, green and blue). If they do not converge, the color is poor and the picture blurs. To correct this, adjust convergence.

After 20-30 minutes of turning on the power, adjust

- convergence.

  1 Press MENU.
- 2 Press △ + or ▽ ~ to move the cursor (>) to FEATURES and press ENTER.
- 3 Press △ + or ▽ to move the cursor (►) to CONVERGENCE and press ENTER.
  The CONVERGENCE adjustment screen appears.

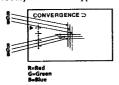


4 Press △ + or ∀ - to move the cursor (►) to the symbol showing the line you want to adjust, and press ENTER.




- + : Red vertical line (left/right adjustment)
- +: Red horizontal line (up/down adjustment)
- +: Blue vertical line (left/right adjustment)
- +: Blue horizontal line (up/down adjustment)

5 Press △+ or ∇ - to move the line until it converges with the center green line, and press ENTER.

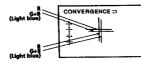

To move up/right, press  $\Delta$  +. To move down/left, press  $\nabla$  -.

6 Repeat step 4 and 5 to adjust the other lines until all three lines converge and are seen as a white cross.

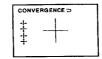

The angular section of the section o

7 Press MENU to return to the normal screen.

## **Presetting channels**

You can preset TV channels easily by storing all the receivable channels automatically. You can also preset channels manually or skip program positions (page 23). You can preset channels using the buttons on the projection TV as well as those on the remote commander.

#### Presetting channels automatically

You can preset up to 100 TV channels in numerical sequence from program position 1.



1 Press MENU.



PYIDEO CONTROL AUDIO CONTROL FEATURES PRESET LANGUAGE

2 Press ∆ + or ∇ – to move the cursor (►) to PRESET.



VIDEO CONTROL AUDIO CONTROL FEATURES PRESET LANGUAGE

3 Press ENTER.



PRESET⊃ ►AUTO PROGR MANUAL PROGR 4 Press △ + or  $\nabla$  - to select AUTO PROGR.



PRESETO PAUTO PROGR MANUAL PROGR

5 Press ENTER.



AUTO PROGR⊃ ►M E/ASIA/CATV W EURO AUSTRALIA HK/IUK CHINA/E EURO AMERICA/CATV AMERICA JAPAN


6 Press ∆ + or ∇ - to select your area (channel system).

For the areas allocated in each channel system, see "Channel allocation" on page 27.



AUTO PROGR >
M E/ASIA/CATV W EURO
AUSTRALIA
HK/UK
CHINA/E EURO
AMERICA/CATV AMERICA
JAPAN

7 Press ENTER.
Presetting starts from program 1.

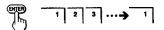

#### Getting back to the previous menu

Press  $\triangle$  + or  $\nabla$  - to move the cursor (>) to the first line ( ) of each menu (except for the main menu), and press ENTER.

#### Press MENU.

If more than 60 seconds elapse after you press a button, the menu screen disappears automatically.

#### Operations

## Watching the TV

1 Select the TV program you want to watch. Press the number buttons or PROGR +/-. The projection TV turns on automatically and the selected program appears. When the STANDBY indicator on the front of the projection TV is not lit, press POWER on the

projection TV, and select the program position.

0

#### To select a program position directly Press the number buttons.



To select a two-digit program position, press "-/-" before the number buttons.

For example, to select program position 25, press "-/-" and then "2" and "5."



#### To scan through program positions

Press PROGR +/- until the program position you want appears.



#### To select a channel directly

Press C (once for VHF/UHF channels, twice for cable TV channels), then press the number buttons (two-digit number for VHF/UHF channels, threedigit number for cable TV channels). For example, to select the VHF/UHF channel 4, press C, 0 then 4.

## 2 Press VOL +/- to adjust the volume.




9



To switch off the projection TV completely, press POWER on the TV.

#### Watching the video input

#### Press VIDEO/HOLD.

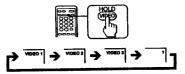


To watch projection TV, press TV, the number buttons or PROGR +/-.




#### Muting the sound

#### Press MUTING.

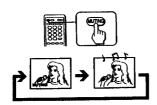

### Displaying on-screen information

Press DISP.

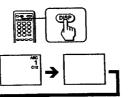


#### Note

 When you press DISP, the on-screen display shows the picture and sound settings as well, all of which disappear after three seconds.

#### **Setting the Sleep Timer**

You can set the projection TV to turn off automatically after the period of time you set.

- 1 Press MENU.
- 2 Press △ + or ▽ to move the cursor (►) to FEATURES, and press ENTER.
- 3 Press △ + or ∇ to move the cursor (►) to SLEEP, and press ENTER.
- 4 Press △ + or ∇ until the time (in minutes) you want appears.

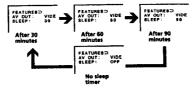


#### 5 Press ENTER.

To cancel the Sleep Timer, select OFF, or turn the projection TV off.


## Using the Picture-in-Picture features

You can display a Picture-in-Picture (PIP) screen (small picture) within the main picture of a TV program or a video input.

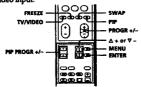

#### Displaying PIP

#### Press PIP.

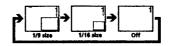

## Selecting a TV program or video input in the PIP screen

To select a TV program, press PIP PROGR +/- (yellow buttons).

To select a video input, press TV/VIDEO

## Swapping pictures between the main and PIP screens

#### Press SWAP.



#### Changing the position of the PIP screen

#### 1 Press MENU.

مستعمل ومعالمون فوساحك والمعارف والمعارف والماري والمستعملين ومها فكال المرازي والمعارف والمهالين



2 Press △ + or ∇ – to move the cursor (►) to FEATURES, and press ENTER.




3 Press △ + or ▽ - to move the cursor (►) to PIP POSITION, and press ENTER.



4 Press  $\triangle$  + or  $\nabla$  – to select the position you want

Pressing  $\Delta$  + changes the position as shown below. Pressing  $\nabla$  – changes the position in reverse order.

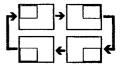

#### Freezing the PIP screen


#### Press FREEZE.

To restore the normal picture, press FREEZE again.

# Selecting the picture mode

You can select the picture mode using the menu as well as the PICTURE MODE button on the remote commander. Select VIDEO CONTROL from the main menu, then select the desired mode.

## Press PICTURE MODE until the mode you want appears on the screen.

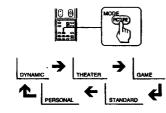

Select	То
DYNAMIC	Display more contrast picture
THEATER	Display darker and finely detailed picture suitable for movies
GAME	Display softer picture suitable for the video games
STANDARD	Display normal contrast picture
PERSONAL	Display the picture that is adjusted using ADJUSTMENT in the VIDEO CONTROL menu

#### Viewing a video game screen

## Press PICTURE MODE until the GAME mode appears on the screen.

The screen changes to the optimum mode for video games with soft picture.

## If the fixed (non-moving) pattern is on the screen for long periods of time

Keep the picture functions at low settings (see "Adjusting the picture setting" on page 14). If not, the image may be permanently imprinted on the screen.

#### Note

 To prevent imprints on the screen, the picture shifts horizontally and vertically about 5 mm every 2 hours. This is not a malfunction of the TV.

## Adjusting the picture setting (ADJUSTMENT)

You can adjust the picture quality to suit your taste with the ADJUSTMENT option. The adjusted settings are stored in the PERSONAL option.



1 Press MENU.

PYIDEO CONTROL AUDIO CONTROL FEATURES PRESET LANGUAGE

2 Press ∆ + or ∇ - to move the cursor (►) to VIDEO CONTROL, and press ENTER.

VIDEO CONTROL D
POYNAMIC
THEATER
GAME
STANDARD
PERSONAL
LAD JUSTMENT

3 Press △ + or ∇ - to move the cursor (►) to ADJUSTMENT, and press ENTER.

PERSONAL ADJUSTMENT: PPICTURE HISHIBISHHIS COLOR HISHIBISHHIS 72 BRIGHT HISHIBISHHIS 100 SHARP HISHIBISHHIS 46
--

4 Press △ + or ∇ – to move the cursor (►) to the item you want to adjust, and press ENTER

## 5 Press △ + or ▽ - to adjust the item, and press ENTER.

Item	Press ∆ + to	Press ∇ – to
PICTURE	Increase picture contrast	Decrease picture contrast
COLOR	Increase color intensity	Decrease color intensity
BRIGHT	Brighten the picture	Darken the picture
HUE	Make skin tones become greenish	Make skin tones become reddish
SHARP	Sharpen the picture	Soften the picture

- 6 To adjust other items, repeat steps 4 and 5.
- 7 Press MENU to return to the normal screen.

#### Note

You can adjust HUE for NTSC color system only.

## If the color of the picture is abnormal when receiving programs through the $\mathbb{T}$ (antenna) terminal

Press COLOR SYSTEM on the projection TV or change the TV system setting from the menu as described below until the color becomes normal.

- 1 Press MENU.
- 2 Press △ + or ▽ to move the cursor (►) to PRESET, and press ENTER.
- 3 Press △ + or ∇ to move the cursor (►) to MANUAL PROGR, and press ENTER.
- 4 Press △ + or ▽ to move the cursor (►) to TV SYS, and press ENTER.
- 5 Press △ + or ▽ to change the TV system until the color becomes normal.


#### Note

Normally set COLOR SYSTEM to AUTO.

# Selecting the sound mode

You can select the sound mode using the menu as well as the SOUND MODE button on the remote commander. Select AUDIO CONTROL from the main menu, then select the desired mode.

## Press SOUND MODE until the mode you want appears on the screen.

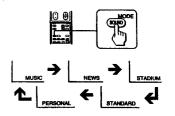

Select	To
MUSIC	Listen to music programs. It gives, sound with a live concert effect.
NEWS	Listen to news program. A person's voice can be heard clearly.
STADIUM	Listen to sports program. It gives sound with a sports stadium effect.
STANDARD	Listen to sound other than music, news or sports program.
PERSONAL	Listen to the sound that is adjusted using ADJUSTMENT in the AUDIO CONTROL menu.

You can adjust the sound quality to suit your taste with the ADJUSTMENT option. The adjusted settings are stored in the PERSONAL option.



1 Press MENU.



2 Press △ + or ∇ – to move the cursor (>) to AUDIO CONTROL, and press ENTER.

AUDIO CONTROLD

MUSIC
NEWS
STADIUM
STANDAND
PERSONAL
LADJUSTMENT

3 Press △ + or ▽ - to move the cursor (►) to ADJUSTMENT, and press ENTER.



- 4 Press △ + or ∇ to move the cursor (►) to the item you want to adjust, and press
- 5 Press  $\triangle$  + or  $\nabla$  to adjust the item, and

Item	Press ∆ + to	Press ∇ - to
BASS	Increase the bass sound	Decrease the bass sound
TREBLE	Increase the treble sound	Decrease the treble sound
BALANCE	Increase the volume of right speaker	Increase the volume of left speaker

- 6 To adjust other items, repeat steps 4 and 5.
- 7 Press MENU to return to the normal screen.

16-EN | Operations

#### Listening to surround sound

You can enjoy a surround sound effect that is like being in a movie theater or a concert hall when receiving stereo signals.

- 1 Press MENU.
- 2 Press △ + or ▽ to move the cursor (▷) to AUDIO CONTROL, and press ENTER.
- 3 Press △ + or ▽ to move the cursor (►) to ADJUSTMENT, and press ENTER.

TREBLE ###################################	<b>₽B</b> ASS	((3)()((1))+++++++	57
			64
CHIDDOLIND - OF E	BALANC	E +**************	00
	SURROU	ND:OFF	

- 4 Press △ + or ∇ to move the cursor (►) to SURROUND, and press ENTER.
- 5 Press △ + or ∇ to select ON, and press ENTER.

## if the sound is distorted or noisy when receiving programs through the ⅓ (antenna) terminal

Press COLOR SYSTEM on the projection TV or change the TV system setting as follows until the sound becomes clear.

- 1 Press MENU.
- 2 Press △ + or ∇ to move the cursor (►) to PRESET, and press ENTER.
- 3 Press △ + or ▽ to move the cursor (►) to MANUAL PROGR, and press ENTER.
- 4 Press ∆ + or ∀ to move the cursor (►) to TV SYS, and press ENTER.
- 5 Press △ + or ∇ to change the TV system until the sound becomes clear.

#### Note

Normally set COLOR SYSTEM to AUTO.


# Selecting a stereo or bilingual program

You can enjoy stereo sound or bilingual program of NICAM and A2 (German) stereo systems. The initial setting is stereo sound.

## Press A/B/ENLARGE repeatedly until you receive the sound you want.

The sound changes and the corresponding indicator lights up as follows:



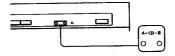

When receiving a NICAM program:

Broadcasting	On-screen Display	Selected sound (Indicator lit)
NICAM stereo	NICAM	→ Stereo → Regular- (A and B)
NICAM bilingual	NICAM	$A \rightarrow B \rightarrow Regular$ (A) (B)
NICAM monaural	NICAM	(A) Regular

When receiving an A2 (German) stereo program:

Broadcasting	On-screen display	Selected sound (Indicator lit)
A2 (German) stereo	STEREO	→ Stereo → Monaural (A and B)
A2 (German) bilingual	_	A → B (A) (B)

## Receiving area for NICAM and A2 (German)

System	Receiving area
NICAM	Hong Kong, Singapore, New Zealand, etc.
A2 (German) stereo	Australia, Malaysia, Thailand, etc.

#### Notes

- If the signal is very weak, the sound becomes monaural.
- If the stereo sound is noisy, select "regular" or "mono."
   The sound becomes monaural, however, the noise will be reduced.

You cannot receive stereo broadcasts in mainland China.

## Setting the speaker switch

If you connect a Dolby Pro Logic-compatible amplifier to the CENTER SPEAKER IN terminals, you can use the projection TV speakers as center speakers. To use the projection TV speakers as center speakers, set the CENTER SPEAKER IN switch located at the rear of the projection TV to CENTER. To listen to the sound from the projection TV, set to MAIN. See page 25 for connection.




## 1 5

## **Viewing Teletext**

TV stations broadcast an information service called Teletext via a local TV channel.

Teletext service allows you to receive various information such as weather forecasts or news at any time. Some of the features, however, may not be available depending on the Teletext service.

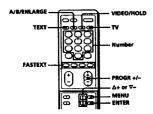

#### **Note on Teletext**

· Teletext service is not available in Chinese

#### **Displaying Teletext**

- 1 Select a TV channel which carries the Teletext broadcast you want to watch.
- 2 Press TEXT to display the Teletext. A Teletext page (normally the index page) is displayed on the left. If there is no Teletext broadcast, P100 appears in the top left corner of the

To switch Teletext off, press TV.

#### Superimposing a Teletext page on the TV picture

#### Press TEXT.

Each time you press TEXT, the screen changes as

Teletext → Teletext and TV → TV —

18-EN | Operations

#### Checking the contents of a Teletext service (INDEX)

When Teletext is switched on, you can display the Teletext menu.

1 Press MENU.

INDEX TEXT CLEAR SUBTITLES REVEAL TIME PAGE SUBPAGE :OFF

2 Press △ + or ▽ - to move the cursor (▶) to INDEX, and press ENTER.

#### Selecting a Teletext page

Press the number buttons to enter the threedigit page number of the Teletext number you

If you make a mistake, re-enter the correct page

To access the next or previous page, press PROGR +/-.

. When you request another Teletext page while viewing one Teletext page, the page scrolling may pause on a different page depending on the Teletext service, but the search will continue till the requested page is displayed.

#### Preventing a Teletext page from being updated (HOLD)

A Teletext page may consist of several subpages. You can stop the page scrolling in order to read the text at your own pace.

#### Press VIDEO/HOLD.

HOLD appears in the top left corner of the screen.

To resume normal Teletext operation, press

#### **Using FASTEXT**

This feature allows you to quickly access a Teletext page that uses FASTEXT. When a FASTEXT page is broadcast, a color-coded menu appears at the bottom of the screen. The colors of the menu correspond to the red (TV/VIDEO), green (FREEZE), yellow (SWAP) and blue (PIP) buttons on the remote commander. These colored buttons function as the FASTEXT buttons in Teletext mode.

Press the colored button which corresponds to the color-coded menu.

The page is displayed after a few seconds.

#### **Enlarging the Teletext display** (ENLARGE)

Each time you press A/B/ENLARGE, the Teletext display changes as follows:

--Enlarge upper half---Enlarge lower half---Normal size-

#### Revealing concealed information (REVEAL)

Sometimes pages contain concealed information, such as answers to a quiz. The reveal option discloses the information.

- 2 Press  $\triangle$  + or  $\nabla$  to move the cursor (>) to REVEAL and press ENTER.
- 3 Press △ + or ∇ to select ON, and press

To conceal the information again, select OFF.

#### Watching a TV program while waiting for a requested Teletext page (TEXT CLEAR)

- 1 Select the Teletext page to which you want to refer.
- 2 Press MENU.
- 3 Press  $\triangle$  + or  $\nabla$  to move the cursor (>) to TEXT CLEAR, and press ENTER.
- 4 When the page number is displayed on the screen, press TEXT to switch the Teletext

To restore the normal Teletext reception, press TEXT.

#### Displaying subtitles (SUBTITLES)

Your Teletext service informs you if a TV program is subtitled.

- 1 Press MENU.
- 2 Press  $\triangle + \text{ or } \nabla \text{ to move the cursor } (\triangleright) \text{ to}$ SUSTITLES, and press ENTER.

If the subtitles are not broadcast on page 888, select the subtitle

#### Displaying a Teletext page at the requested time (TIME PAGE)

You can display a time-coded page (e.g. an alarm page) at the time you preset.

- 1 Press MENU.
- 2 Press △ + or ▽ to move the cursor (▶) to TIME PAGE, and press ENTER.
- 3 Press the number buttons to enter four digits for the desired time. For example, to enter 7:30, press 0,7,3 and 0.



At the requested time, the page appears on the screen.

To restore the normal Teletext reception, press TEXT.

#### Displaying a particular page among several subpages (SUBPAGE)

- 1 Press MENU.
- **2** Press  $\triangle$  + or  $\nabla$  to move the cursor (>) to SUBPAGE, and press ENTER.
- 3 Press the number buttons or PROGR +/- to enter four digits for the desired subpage. For example, to display the second page of a sequence, press 0, 0, 0 and 2.

8000		

You can use headphones to enjoy the sound of the TV. This feature does not allow you to enjoy the sound of PIP screens.

#### Listening to the sound of the projection TV with headphones

Insert the headphones into the  $\Omega$  (headphones) jack located on the front panel of the projection TV.

The sound from the speaker is shut off. To adjust the headphones volume, press VOL +/-.

## **Customizing the** projection TV

#### Using the AV OUT (advance rec-out) terminal

You can select the output signal from the VIDEO jacks at the rear of the projection TV.

The S Video output can be used only when MONITOR is selected.

#### 1 Press MENU.

2 Press △ + or ▽ - to select FEATURES, and press ENTER.

> FEATURES > FEATURES D
>
> AV OUT: MONITOR
>
> SLEEP: OFF
>
> PIP POSITION: IN
>
> CONVERGENCE

## 3 Press △ + or ▽ - to select AV OUT, and press

#### 4 Press $\triangle$ + or $\nabla$ – to select the output signal, and press ENTER.

Select	To
TV	Output the TV signal.
MONITOR	Output the signal of the picture you are watching as a main picture.

 Do not change the channel while recording with a VCR through the MONITOR/TV OUT jacks. If you change the channel, it also changes the channel you are recording.

### Presetting channels manually

To change the program position for a channel or to receive a channel with a weak signal, preset the channel manually.

For example, preset a channel in program position 8.

#### 1 Press MENU.

2 Press  $\triangle$  + or  $\nabla$  - to move the cursor (>) to PRESET, and press ENTER.

> PRESETO AUTO PROGR MANUAL PROGR

3 Press  $\triangle$  + or  $\nabla$  - to select MANUAL PROGR, and press ENTER.

MANUAL PR	OGR ⊃
PPR: 01+	
LABEL:	
AREA: N	E/ASIA
CH: C	01
AFT: C	N
TV. SYS: B	/G
ATT: C	FF

#### 4 Select the program position to which you want to preset a channel.

- (1) Press  $\Delta$  + or  $\nabla$  to select PR, and press ENTER.
- (2) Press ∆ + or ∇ to select 8. You can also select the program position with PROGR +/- or the number buttons (e.g. for program 24, press -/--, 2 and 4).
- (3) Press ENTER.

#### 5 Select your area (channel system).

For the areas allocated in each channel system, see "Channel allocation" on page 27.

- (1) Press  $\Delta$  + or  $\nabla$  to select AREA, and press ENTER.
- (2) Press Δ + or ∇ to select your area, and press

#### 6 Select a channel which you want to preset.

- (1) Press ∆ + or ∇ to select CH, and press ENTER.
- (2) Press △ + or ∇ until the channel you want appears on the screen. You can also select the channel directly using the number buttons. Press C (once for VHF/ UHF channels, twice for cable TV channels), then the number buttons (e.g., for channel 5, press 0 and 5).
- (3) Press ENTER.

#### To preset other channels Repeat steps 4 to 6.

#### Disabling program positions


By disabling unused or unwanted program positions, you can skip those positions when you press PROGR

For example, disable program position 8.

- 1 Display the MANUAL PROGR menu. (Follow steps 1 to 3 in "Presetting channels manually" on this page.)
- 2 Press  $\triangle$  + or  $\nabla$  to move the cursor (>) to PR, and press ENTER.
- 3 Press PROGR + or until 8 appears.
- 4 Press △ + or ▽ to select "-", and press

To skip other program positions, repeat steps 3 and

To restore the skipped program positions In step 4 above, press  $\Delta$  + or  $\nabla$  - to select "+," and press ENTER.

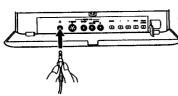

 $\exists$ 

### **Customizing channel names**

You can caption each channel number using up to five letters to be displayed on the screen.

- 1 Display the MANUAL PROGR menu. (Follow steps 1 to 3 in "Presetting channels manually" on page 21.)
- 2 Press △ + or ∇ to move the cursor (>) to PR, and press ENTER.
- 3 Press △ + or ∇ to select the program position you want to caption and press
- 4 Press △ + or ▽ to move the cursor (>) to LABEL, and press ENTER.
- 5 Press △ + or  $\nabla$  to select a letter or number, and press ENTER for each caption space (up to five.)

Each time you press ∆ + or ∇ -, the letter (number) changes as shown below.

 $A \rightarrow \overline{B} \rightarrow ... \rightarrow Z \rightarrow 0 \rightarrow 1 \rightarrow ... \rightarrow 9 \rightarrow - \rightarrow : \rightarrow / \rightarrow . \rightarrow$ +--- (space)

For the caption space you want to leave blank, select "-."

6 Repeat steps 2 to 5 to caption other channels.

To erase a caption In step 5 above, select "\_ (space)."

#### Manual fine-tuning

Normally, the automatic fine-tuning (AFT) is operating. However, if the picture of a channel is distorted, you can use the manual fine-tuning function for the channel to obtain better picture reception.

- 1 Display the MANUAL PROGR menu. (Follow steps 1 to 3 in "Presetting channels manually" on page 21.)
- 2 Press △ + or ▽ to move the cursor (>) to PR, and press ENTER.
- 3 Press △ + or ▽ to select the program position corresponding to the channel which you want to manually fine-tune, and press ENTER.
- 4 Press  $\triangle$  + or  $\nabla$  to move the cursor (>) to AFT, and press ENTER.
- 5 Press △ + or ∇ to select OFF, and press ENTER.
- 6 Press △ + or ▽ to fine-tune the channel so that you get the best TV reception. As you press these buttons, the frequency changes from -128 to +128.
- 7 After fine-tuning, press ENTER. The fine-tuned level is stored.


#### Improving TV signal

If the reception signal is very strong, you can attenuate it to obtain better picture reception.

- 1 Display the MANUAL PROGR menu. (Follow steps 1 to 3 in "Presetting channels manually" on page 21.)
- 2 Press △ + or ▽ to move the cursor (>) to PR, and press ENTER.
- 3 Press  $\triangle$  + or  $\nabla$  to select the program position corresponding to the channel whose signal is very strong, and press
- 4 Press  $\triangle$  + or  $\nabla$  to move the cursor (>) to ATT, and press ENTER.
- 5 Press  $\triangle$  + or  $\nabla$  to select ON, and press ENTER.

## **Setting the remote** command mode


You can use the supplied remote commander to operate the TV and Sony video equipment, such as a VCR or multi-disc player. To operate Sony video equipment, first set the remote command mode for the video equipment you want to use.

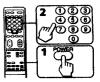

- 1 Press and hold the POWER button in the VCR control area.
- 2 Press the number buttons that correspond to the remote command mode.

Mode number buttons	Remote command mode
0 and then 1	VTR1 (e.g., Beta format VCR)
0 and then 2	VTR2 (e.g., 8 mm format VCR)
0 and then 3	VTR3 (e.g., VHS format VCR)
0 and then 4	MDP (multi-disc player)

After setting the remote command mode, you can use the following buttons to operate the video equipment.

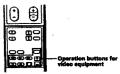


22-EN

SEAT SERVICE SERVICE SERVICES


#### Connecting a VHF antenna or a combination VHF/UHF antenna—75-ohm coaxial cable (round)


Attach an optional IEC antenna connector to the 75-ohm coaxial cable. Plug the connector into the \( \) (antenna) terminal at the rear of the projection TV.

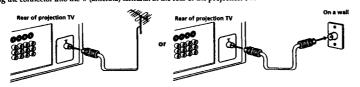

#### **Connecting optional equipment**

You can connect optional audio/video equipment to this projection TV such as a VCR, multi-disc player, camcorder, headphones, or stereo system.

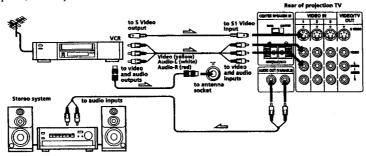

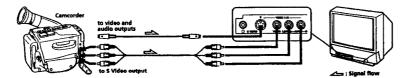

### When connecting a monaural VCR

Connect the yellow plug to VIDEO and the white plug to AUDIO-L (mono).

### If both S Video and video signals are input

The S Video input signal is selected. To view a video signal, disconnect the S Video connection.

#### Note on the video input

When no signal is input, the screen becomes black and on-screen-


When connecting a VCR to the VIDEO 3 IN jacks
This projection TV is equipped with two sets of the VIDEO 3 IN
jacks on the front and rear panels. Front and rear jacks are not
available to be used at the same time. When using equipment connected, turn off other equipment not in use.

## Connecting an amplifier with Dolby Pro Logic decoder

If you use an amplifier with Dolby Pro Logic decoder instead of the projection TV's audio system, you can still use the projection TV's center speaker.

\*Manufactured under license from Dolby Laboratories Licensing Corporation.

DOLBY, the double-D symbol DD and "PRO LOGIC" are trademarks of Dolby Laboratories Licensing Corporation.

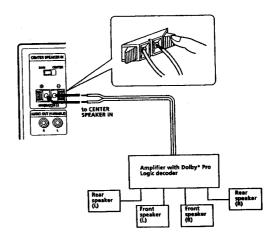

If you have any problems, read this manual again and check the countermeasure for each of the symptoms listed below.

If the problem persists, contact your nearest authorized service center or dealer.

#### Snowy picture Noisy sound





- Check the antenna.
- Check the antenna connection on the projection TV and on the wall.

#### **Dotted lines or stripes**



→ This may be caused by local interference (e.g. cars, neon signs, hair dryers, etc.) Adjust the antenna for minimum interference.

#### Double images or "ghosts"



This may be caused by reflections from nearby mountains or buildings. A highly directional antenna may improve the picture.

#### Good picture Noisy sound





→ Check the TV SYSTEM setting

#### No picture No sound



- → Press POWER.
- Press POWER to turn the projection TV off for 5 to 6 seconds, then turn it on again by pressing POWER.
- ⇒ Check the antenna connection.
- ⇒Check the VCR connections.

#### Good picture No sound





- ◆ Press VOL +
- → Press MUTING.

#### No color



- → Adjust COLOR in the VIDEO CONTROL menu's ADJUSTMENT option.
- → Check the COLOR SYSTEM setting.

#### TV cabinet creaks

Even if the picture or the sound is normal, changes in the room temperature sometimes make the TV cabinet expand or contract, making a noise. This does not indicate a malfunction.

## **Channel allocation**

#### Areas allocated in each channel system

#### M E/ASIA/CATV W EURO

Afghanistan, Albania, Algeria, Austria, Bahrain, Bangladesh, Belgium, Brunei, Canary Islands, Cyprus, Denmark, Egypt, Finland, Germany, Ghana, Gibraltar, Greece, Iceland, India, Indonesia, Iran, Iraq, Italy, Jordan, Kenya, Republic of Korea, Kuwait, Lebanon, Liberia, Libya, Luxemburg, Malaysia, Malta, Mauritania, Mauritius, Maldives Rep., Morocco, Mozambique, Nepal, Netherlands, New Zealand, Nicaragua, Nigeria, Norway, Oman, Pakistan, Portugal, Qatar, Sarawak, Saudi Arabia, Seychelles, Sierra Leone, Singapore, Spain, Srilanka, Sudan, Swaziland, Sweden, Switzerland, Syrian Arab Rep., Tanzania, Thailand, Tunisia, Turkey, Uganda, United Arab Emirates, Western Sahara, Yemen Arab Republic, People's Dem. Rep. of Yemen, Yugoslavia, Zambia, Zimbabwe

#### AUSTRALIA

Australia, New Zealand

#### **HK/UK**

Hong kong, Ireland, Lesotho, South Africa, United Kingdom

#### CHINA/E EURO

Benin, Bulgaria, China, Congo, Czechosłovakia, Djibouti Republic, Gabon, Guadeloupe, Guiana, Guinea (P.P.R.), Hungary, Ivory Coast, Dem. People's Rep. of Korea, Madagascar, Mongolia, New Caledonia, Niger, Poland, Reunton, Rumania, Senegal, Tahiti, Togo, Former U.S.S.R., Vietnam, Zaire

#### **AMERICA/CATY AMERICA**

Bahama Islands, Barbados, Belize, Bermuda, Bolivia, Burma (UHF), Canada, Chile, Colombia, Costa Rica, Cuba, Dominica Republic, Ecuador, El Salvador, Guam, Guatemala, Haiti, Hawaii, Honduras, Jamaica, Laos, Mexico, Panama, Peru, Philippines, Puerto Rico, Surinam, Taiwan, Trinidad & Tobago, U.S.A., U.S.A. (CATV), Venezuela

#### JAPAN

Burma (Myanmar) (VHF), Japan (VHF, UHF)


#### TV and color systems of each channel system

The TV system and color system are automatically set according to the channel system.


Channel system	TV system	Color system AUTO	
M E/ASIA/ CATV W EURO	B/G, H: West European TV standard		
AUSTRALIA	B/G, H: Australian TV standard	AUTO	
HK/UK	I: British TV standard	AUTO	
CHINA/E EURO	D/K: East European TV standard	AUTO	
AMERICA/CATV AMERICA M: American TV standard		AUTO	
JAPAN	M: Japan TV standard	AUTO	

## SECTION 2 DISASSEMBLY


## 2-1-1. REAR BOARD AND LIGHT INTERCEPTION REMOVAL

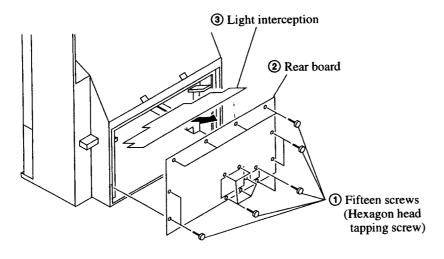


## 2-1-3. SERVICE POSITION

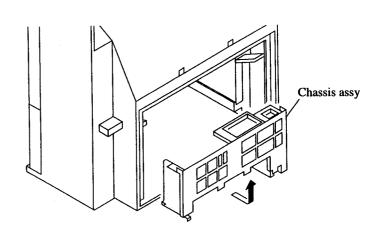



2-1-2. CHASSIS ASSY REMOVAL

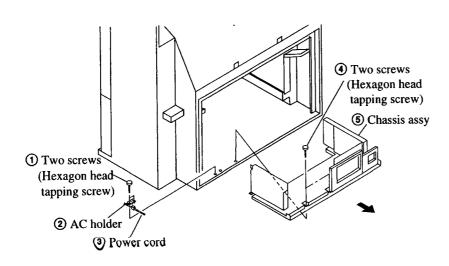


## 2-1-4. G BOARD REMOVAL

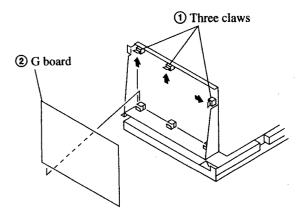

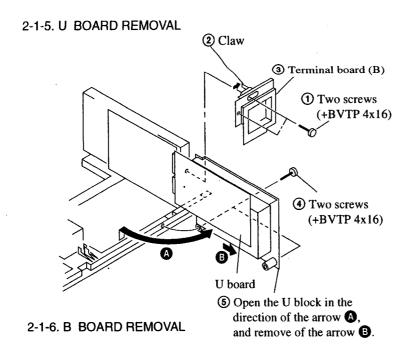


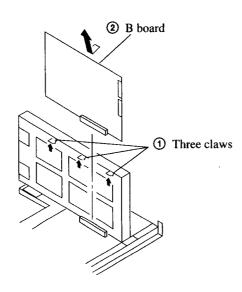


#### 2-1-7. D BOARD REMOVAL

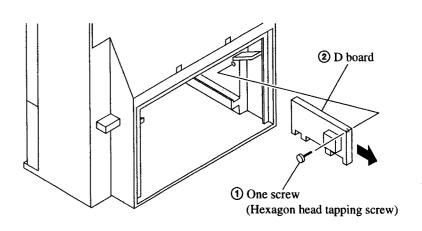


## 2-1-8. HA, HB AND HC BOARDS REMOVAL

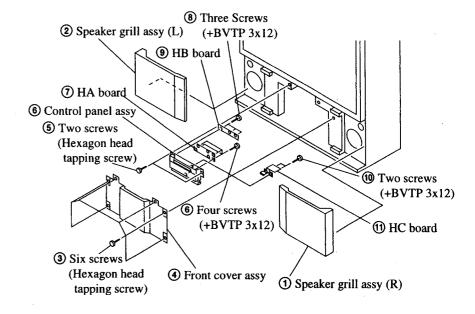


### 2-1-9, SCREEN FRAME ASSY REMOVAL

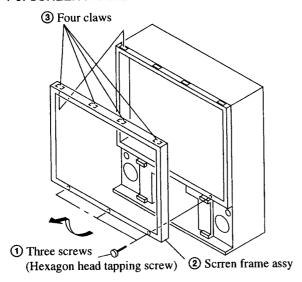


## 2-1-10. REFLECTION MIRROR REMOVAL

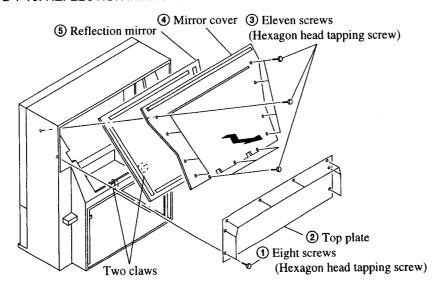


## 2-1-11. HIGHT-VOLTAGE CABLE INSTALLATION AND REMOVAL

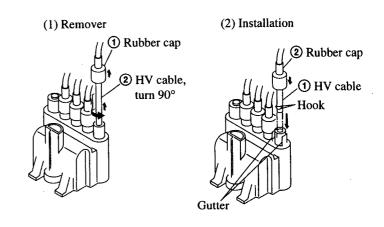

## 2-1-12. PICTURE TUBE REMOVAL

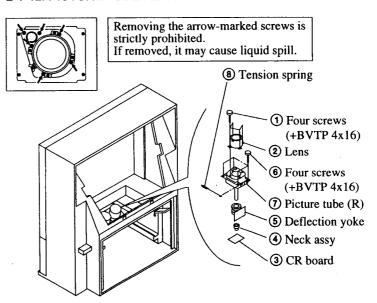


## 2-2-1.SERVICE STAY ASSY (X-4034-033-1)

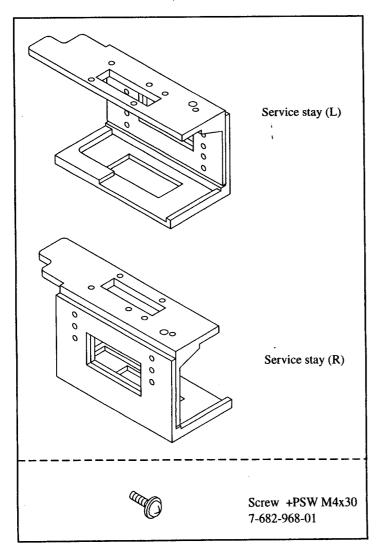

## PREPARATION


- 1) Remove the rear board and chassis assy while referring to the instructions.
- 2) Remove the control panel assy while referring to the instructions.
- 3) Remove the mirror cover while referring to the instructions.
- 4) Remove the harnesses from the purse lock.
- 5) Remove the connector from the speaker. (U board: CN2004, CN2008)


## 2-2-2. PICTURE TUBE BRACKET ASSY REMOVAL AND INSTALL A CHASSIS ASSY

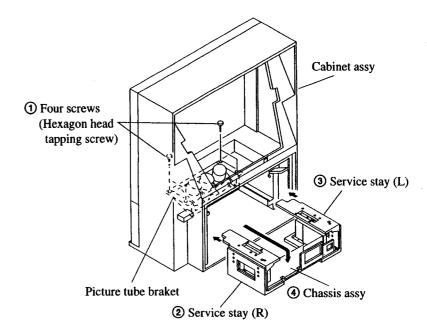

- 18 -

The State of the Control of the Cont

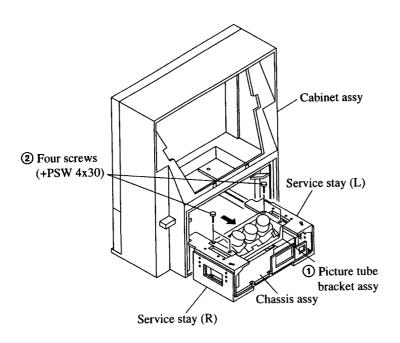

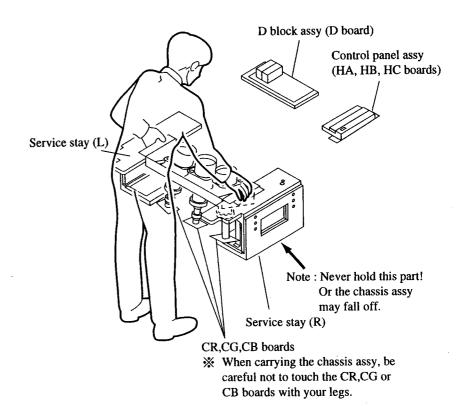

- Even with 2 servicemen, be sure to put your hands in to the grooves on the top of service stays (L) and (R) to carry the chassis assy.
- \* To hold the chassis assy, put your hands into the grooves on the top of service stays (L) and (R).

## SECTION 3 SET-UP ADJUSTMENTS

ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
SCREEN VOLTAGE ADJUSTMENT				
(ROUGH ALIGNMENT)				R G B
<ol> <li>Turn the red VR on the FOCUS block all the way to the left and then gradually turn it to the right until the point where you can see the retrace line.</li> <li>Next gradually turn it to the left to the position where the retrace line disappears.</li> </ol>	Monoscope Pattern		PICTURE minimum BRIGHTNESS50% SCREEN (G2)	O O O SCREEN R G B O O O FOCUS
FOCUS LENS ADJUSTMENT				FOCUS block
1. Loose the lens screw.				1 OCOG BIOCK
2. Set in service mode.				CONVERGENCE
3. Use VSP on the service mode menu to shown only the green color.				CONVERGENCE
4. Press the Commander Menu button and select FEATURES and CONVERGENCE to display the test signal on the screen.				
5. Rotate the green lens and align with the optimal focus point from the test signal.				
6. Use RRH from the service mode menu to set to green and red.				
7. Output the test signal and rotate the red lens to obtain the optimum focus at the point where the red and green spots overlap.				
8. Use RBH from the service mode menu to set to red and blue.				·
<ol><li>Output the test signal and rotate the blue lens to obtain the optimum focus at the point where the blue and red spots overlap.</li></ol>				·
10. Tighten the lens screw.				
SCREEN (G2) ADJUSTMENT				
<ol> <li>Select VIDEO mode without signals.</li> <li>Connect an oscilloscope to the TP701(KR), TP731(KG) and</li> </ol>				
TP761(KB) of CR board, CG board and CB board.				175 ± 2VDC pedestal
3. Adjust R, G and B screen voltage to 175 ± 2VDC with screen VR on the focusblock.				GND

Superior Control of the Control of t

ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
FOCUS VR ADJUSTMENT				<b>←</b>
<ol> <li>Set in service mode.</li> <li>Use VSP on the service mode menu to shown only the green color.</li> <li>Press the Commander Menu button (convergence) and output the test signal.</li> <li>Rotate the green VR on the FOCUS block and align to obtain the optimal focus point.</li> <li>Use RRH from the service mode menu to set to green and red.</li> <li>Output the test signal and rotate the red VR to obtain the optimum focus at the point where the red and green spots overlap.</li> <li>Use RBH from the service mode menu to set to red and blue.</li> <li>Output the test signal and rotate the blue VR aligning to obtain the optimum focus at the point where the blue and green spots overlap.</li> </ol>				Lens Scanning line visible.  Minimize both A and B.
<ol> <li>DEFLECTION YOKE TILT ADJUSTMENT</li> <li>Set in service mode.</li> <li>Set to receive the monoscope signal.</li> <li>Use VSP on the service mode menu to shown only the green color.</li> <li>Loosen the deflection yoke setscrew and align the tilt of the Deflection Yoke so that the bars at the center of the monoscope pattern are horizontal.</li> <li>After aligning the deflection yoke, fasten it securely to the funnel-shaped portion (neck) of the CRT.</li> <li>The tilt of the deflection yoke for red is aligned with RRH on the service mode menu, and the tilt on the deflection yoke for green is aligned with RBH on the service menu, is aligned the same as was done for green.</li> </ol>	Monoscope pattern			4-pole magnet 2-pole magnet Deflection yoke Neck Assy Anode cap

and the second of the second o

ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
2-POLE MAGNET ADJUSTMENT				
<ol> <li>Set in service mode.</li> <li>Set to receive the dot pattern signal.</li> <li>Place the caps on the red and blue lens so that only the green color is shown.</li> <li>Turn the green VR on the focus block to the right and set to overfocus to enlarge the spot.</li> <li>Now align the 2-Pole Magnet so that the enlarged spot is in the center of the Just Focus spot.</li> <li>Align the green focus VR and set for just (precise) focus.</li> <li>Perform the same alignment for red and blue.</li> </ol>	Dot pattern		2-pole magnet	Use the center dot
<ol> <li>4-POLE MAGNET ADJUSTMENT</li> <li>Set in service mode.</li> <li>Set to receive the dot pattern signal.</li> <li>Place the caps on the red and blue lens so that only the green color is shown.</li> <li>Turn the green VR on the focus block to the left and set to underfocus to enlarge the spot.</li> <li>Now align the 4-Pole Magnet so that the enlarged spot becomes a perfect circle.</li> </ol>	Dot pattern		4-pole magnet	Use the center dot  • y  x: y = 1:2
DEFOCUS ADJUSTMENT  1. Receive the crosshatch signal. 2. Adjust the FOCUS knob so that the crosshatch pattern vertical line width is as in the figure on the right.	Crosshatch pattern		FOCUS VR • RED • GREEN • BLUE	• Focus adjustment point  a:b=1:4  A:61";14-16mm  without flare

## **ELECTRICAL ADJUSTMENT BY REMOTE COMMANDER**

Use of Remote Commander (RM-901) can be performed circuit adjustments about this model.

#### **NOTE: Test Equipment Required.**


- 1. Pattern Generator
- 2. Frequency counter
- 3. Digital multimeter
- 4. Audio oscillator

### 1. METHOD OF SETTING THE SERVICE ADJUSTMENT MODE

#### SERVICE MODE PROCEDURE


- 1. Standby mode. (Power off)
- 2.  $\boxed{\text{DISPLAY}} \rightarrow \boxed{5} \rightarrow \boxed{\text{VOL (+)}} \rightarrow \boxed{\text{POWER}}$  on the Remote Commander. (Press each button within a second.)

## SERVICE ADJUSTMENT MODE IN

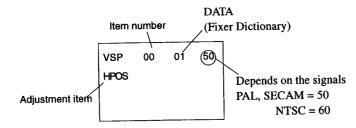

- 3. The CRT displays the item Being adjusted.
- 4. Press 1 or 4 on the Remote Commander to select the item.
- 5. Press 3 or 6 on the Remote Commander to change the data.
- 6. If you want to recover the latest values press [7] then [0] to read the memory.
- 7. Press 5 then 0 to write initial data into memory.
- 8. Press MUTING then 0 to write into memory.

#### SERVICE ADJUSTMENT MODE MEMORY

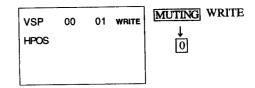


- 9. Press 8 then 0 on the Remote Commander to initialize. (Be sure not to use usually)
- 10. Turn set off and on to exit.

#### 2. MEMORY WRITE CONFIRMATION METHOD

- 1. After adjustment, pull out the plug from AC outlet, and next place, plug in AC outlet again.
- 2. Turn the power switch ON and set to Service Mode.
- 3. Call the adjusted items again, confirm they were adjusted.

- 23 -

#### 3. ADJUST BUTTONS AND INDICATOR

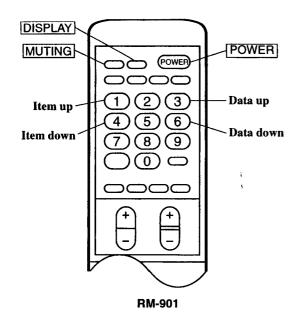

## 4. SERVICE MODE LIST

#### VSP

	Item number	Adjustment item	Data range	Standard data	Initial data	Note	Device
VSP	00	HPOS	0~63	28	28	H-SHIFT	CXD2018Q
	01	VSIZ	0~63	00	15	V-SIZE	
	02	VPOS	0~63	35	35	V-SHIFT	
	03	vsco	0~15	07	07	S-CORRECTION	
	04	VLIN	0~15	08	08	V-LINEARITY	
	05	HSTZ	0~63	20	28	H-SIZE	
	06	HIPN	0~63	38	36	PIN-AMP	
	07	HKEY	0~31	15	15	TILT	
	08	UPCP	0~15	07	07	UPPER CORNER PIN	
	09	LOCP	0~15	06	06	LOWER CORNER PIN	
	10	HBOW	0~15	09	09	V-BOW	
	11	HSKE	0~15	08	08	V-ANGLE	
	1	1		ı	1 1	l i	i

#### DΡ

1	Item	Adjustment	D-4	Standard	Initial		
	number	item	Data range	data	data	Note	Device
R GH	00	CENT	-127~+128	07	00	GREEN. H CENTER	CXP85112B-613S
	01	SKEW	-127 ~ +128	00	00	GREEN. H SKEW	
	02	BOW	-127 ~ +128	-01	-01	GREEN. H BOW	
	03	4BOW	-127 ~ +128	00	00	GREEN, H 4th BOW	
	04	SIZE	-127~+128	09	00	GREEN. H SIZE	
	05	LIN	-127 ~:+128	06	-20	GREEN. H LINEARITY	
	06	MSIZ	-127 ~ +128	16	16	GREEN. H MIDDLE SIZE	
	07	MLIN	-127 ~ +128	06	06	GREEN. H MIDDLE LINEARITY	
	08	KEY	-127 ~ +128	00	00	GREEN. H KEY	
	09	SSKW	-127 ~ +128	14	14	GREEN. H SUB SKEW	
	10	MPIN	-127~+128	<b>–04</b>	47	GREEN. H MIDDLE PIN	
	11	PIN	-127~+128	47	02	GREEN. H PIN	
	12	SBOW	-127 ~ +128	-16	-16	GREEN. H SUB BOW	
	13	мвоw	-127 ~ +128	04	04	GREEN. H MIDDLE BOW	
	14	4PIN	-127 ~ +128	-11	-03	GREEN. H 4th PIN	
	15	4SBOW	-127 ~ +128	00	00	GREEN. H 4th SUB BOW	
R GV	00	CENT	-127~+128	00	00	GREEN, V CENTER	CXP85112B-613S
	01	SKEW	-127 ~ +128	00	00	GREEN. V SKEW	
	02	BOW	-127 ~ +128	16	16	GREEN. V BOW	
1	03	SIZE	-127 ~ +128	-30	-06	GREEN. V SIZE	
- 1	04	LIN	-127~+128	22	22	GREEN. V LINEARITY	
1	05	MSIZ	-127 ~ +128	05	-05	GREEN. V MIDDLE SIZE	
i	06	MKEY	-127 ~ +128	-05	-05	GREEN. V MIDDLE KEY	
	07	KEY	-127~+128	-18	-18	GREEN. V KEY	
1	08	SSKW	-127~+128	01	01	GREEN. V SUB SKEW	
	09	MPIN	-127 ~ +128	-04	-04	GREEN, V MIDDLE PIN	
	10	PIN	-127 ~+128	42	42	GREEN. V PIN	
	11	SBOW	-127 ~ +128	08	08	GREEN. V SUB BOW	
	12	WAVE	-127 ~ +128	-01	-01	GREEN, V WAVE	
	13	4PIN	-127 ~ +128	07	07	GREEN. V 4th PIN	
R RH	00	CENT	-127 ~ +128	-40	-04	RED. H CENTER	CXP85112B-613S
	01	SKEW	-127 ~ +128	00	00	RED. H SKEW	
	02	BOW	-127 ~ +128	06	06	RED. H BOW	
1	03	4BOW	-127~+128	-01	-01	RED. H 4th BOW	
	04	SIZE	-127 ~ +128	10	-02	RED. H SIZE	
	05	LIN	-127~+128	31	16	RED. H LINEARITY	
	06	MSIZ	-127 ~ +128	12	12	RED. H MIDDLE SIZE	ľ
1	07	MLIN	-127~+128	-09	-09	RED. H MIDDLE LINEARTIY	}
	08	KEY	-127~+128	-08	-08	RED. H KEY	
	09	sskw	-127 ~ +128	04	04	RED. H SUB SKEW	•
	10	MPIN	-127 ~:+128	54	54	RED. H MIDDLE PIN	
	11	PIN	-127 ~ +128	-01	-01	RED. H PIN	

- 24 -

	ļ	
	I	

	ltem number	Adjustment item	Data range	Standard data	Initial data	Note	Device
R RH	12	SBOW	-127 ~ +128	07	07	RED. H SUB BOW	
	13	мвож	-127 ~ +128	21	21	RED. H MID BOW	
	14	4PIN	-127 ~ +128	-10	00	RED. H 4th PIN	
	15	4SBOW	~127 ~ +128	-13	00	RED. H 4th SUB BOW	
R RV	00	CENT	-127~+128	00	-43	RED. V CENTER	CXP85112B-613S
	01	SKEW	-127 ~ +128	00	00	RED. V SKEW	
	02	BOW	-127 ~ +128	17	17	RED. V BOW	
	03	SIZE	-127 ~ +128	70	00	RED. V SIZE	
	04	LIN	-127 ~ +128	24	24	RED. V LINEARITY	
	05	MSIZ	-127 ~ +128	-05	-05	RED. V MIDDLE SIZE	
	06	MKEY	-127 ~ +128	05	05	RED. V MIDDLE KEY	i
	07	KEY	-127 ~ +128	05	05	RED. V KEY	
	08	SSKW	-127~+128	01	01	RED. V SUB SKEW	
	09	MPIN	-127 ~ +128	<b>–07</b>	-07	RED. V MIDDLE PIN	
	10	PIN	-127 ~ +128	09	09	RED. V PIN	
	11	SBOW	-127~+128	10	10	RED. V SUB BOW	
	12	WAVE	-127~+128	29	29	RED. V WAVE	
	13	4PIN	-127~+128	10	10	RED. V 4th PIN	
R BH	00	BSEL	0/1	01	00	RESISTRATION µ CON BSEL	CXP85112B-6135
	01	CENT	-127~+128	-25	-08	BLUE, H CENTER	
	02	SKEW	-127~+128	00	00	BLUE, H SKEW	
	03	BOW	-127 ~ +128	-01	-01	BLUE. H BOW	
	04	4BOW	-127~+128	-03	-03	BLUE. H 4th BOW	
	05	SIZE	-127 ~ +128	-21	-21	BLUE. H SIZE	
	06	LIN	-127 ~ +128	-64	-64	BLUE, H LINEARITY	
	07	MSIZ	-127~+128	22	22	BLUE. H MID SIZE	1
	08	MLIN	-127~+128	55	55	BLUE, H MID LINEARTTY	
	09	KEY	-127 ~ +128	-08	-08	BLUE H KEYSTONE	
	10	SSKW	-127~+128	24	24	BLUE. H SUB SKEW	
	11	MPIN	-127~+128	34	34	BLUE. H MID PIN	
	12	PIN	-127~+128	10	10	BLUE. H PIN	
	13	SBOW	-127 ~ +128	-34	-34	BLUE, H SUB BOW	
	14	MBOW	-127 ~ +128	-12	-12	BLUE. H MID BOW	
	15	4PIN	-127 ~ +128	-10	-01	BLUE. H 4th PIN	
	16	4SBOW	-127~+128	05	05	BLUE. H 4th SUB BOW	
R BV	00	CENT	-127 ~ +128		-17	BLUE. V CENTER	CXP85112B-613
	01	SKEW	-127~+128	00	00	BLUE. V SKEW	
ĺ	02	BOW	-127 ~ +128	į	13	BLUE, V BOW	
	03	SIZE	-127~+128	1	-38	BLUE, V SIZE	
	04	LIN	-127~+128		20	BLUE, V LINEARITY	
	05	MSIZ	-127 ~ +128		-07	BLUE, V MIDDLE SIZE	
	06	MKEY	-127~+128	1	-21	BLUE, V MIDDLE KEY	
		MINET	-127 1120			DECENT MEDICALITY	<u> </u>

	Item number	Adjustment item	Data range	Standard data	Initial data	Note	Device
R BV	07	KEY	-127 ~ +128	67	67	BLUE. V KEY	CXP85112B-613S
	08	SSKW	-127 ~+128	04	04	BLUE. V SUB SKEW	
	09	MPIN	-127 ~ +128	-07	-07	BLUE, V MIDDLE PIN	
	10	PIN	-127 ~ +128	-29	-29	BLUE. V PIN	
	11	SBOW	-127 ~ +128	10	10	BLUE. V SUB BOW	
ļ	12	WAVE	-127 ~ +128	-40	<b>-40</b>	BLUE. V WAVE	
	13	4PIN	-127 ~ +128	15	15	BLUE. V 4th PIN	

#### MCD

1110	<b></b>						
	1	Adjustment	Data range	Standard		Note	Device
i	number	item	-	data	data		
MCD	00	MHUE	0~31	17	13	SUB HUE OF MAIN PICTURE	TDA9141
	1	'			l		

#### SCD

	Item number	Adjustment item	Data range	Standard data	Initial data	Note	Device
SCD	01	YDLY	0~15	01	01	Y DELAY	TDA9143

#### RGB

	Item number	Adjustment item	Data range	Standard data	Initial data	Note	Device
RGB	00	SHUE	0~31	28	16	SUB HUE OF SUB PICTURE	TDA4780
	01	SCOL	0~15	10	11	SUB COLOR	
	02	SBRT	0~63	21	10	SUB BRIGHTNESS	
	03	RAMP	0~63	31	31	RED GAIN	
	04	GAMP	0~63	31	31	GREEN GAIN	
	05	BAMP	0~63	31	48	BLUE GAIN	
	06	RCUT	0~63	31	31	RED LEVEL REFERENCE	
	07	GCUT	0~63	45	31	GREEN LEVEL REFERENC	E
	08	BCUT	0~63	31	48	BLUE LEVEL REFERENCE	
	09	PDL	0~63	30	20	PEAK DRIVE LIMIT	
	10	GNMA	0~63	40	40	GAMMA	
	11	ADBL	0/1	00	00	ADAPTIVE BLACK	
	12	RELC	0/1	01	01	RELATIVE TO CUT-OFF	
	13	TCPL	0/1	01	01	TIME CONSTANT PEAK	
					1	DRIVE LIMITER	

	Item number	Adjustment item	Data range	Standard data	Initial data	Note	Device
PIP	00	AXIS	0/1	01	01	RGB AXIS	SDA9188-3X
	01	RDV	0~15	08	08	V READ DELAY	
	02	RDH	0~63	16	16	H READ DELAY	
	03	FRY	0~15	04	04	BRIGHTNESS OF THE BORDER FRAME	
	04	9V50	0~7	03	03	MULTI PIN PV 50Hz	
	05	9H50	0~7	03	03	MULTI P IN P H 50Hz	
	06	9V60	0~7	03	03	MULTI PIN PV 60Hz	
	07	9H60	0~7	03	03	MULTI PIN PH 60Hz	
			I	I	1	1	l

#### TXT

	Item number	Adjustment item	Data range	Standard data	Initial data	Note	Device
TXT	00	BOXP	0~15	00	00		TPU3040
	01	TXH	0 ~ 255	05	05	H START POSITION	
	02	TXV	0~63	44	44	V START POSITION	
1	03	VSP	0~255	59	59	V STOP POSITION	
	04	BSP	0 ~ 255	61	61	BLANKING STOP	
	05	BST	0~255	53	53	BLANKING START	
	06	QSF	0~31	01	01	ACQUSITION SOFT SLICER	
	07	A7F	0 ~ 255	10	10	VALUE OF ADRESS 007FH	
	08	QDT	0 ~ 63	13	13	ACQUSITION DATA SLICER	
	09	CST	0~255	00	00	CLAMPING START	
	10	CSP	0 ~ 255	80	80	CLAMPING STOP	
	11	LMT	0/1	00	00	LIMIT SLICER ADAPTION SWITCH	
	12	GMX	0 ~ 255	31	31	GAIN MAX	
	13	FMX	0 ~ 255	32	31	FILTER MAX	

#### ΑP

	Item number	Adjustment item	Data range	Standard data	Initial data	Note	Device
AP	00	TVER	0~3	03	03	TPU VERSION (TC20=3)	MSP3410
	10	FAW	0~255	10	10	NICAM FAW THRESHOLD	
	02	CTM	0 ~ 255	08	08	NICAM ERROR BIT THRESHOLD (MONO->NICAM)	
	03	CIN	0 ~ 255	80	80	NICAM ERROR BIT THRESHOLD (NICAM->MONO)	
	04	WGO	0~255	10	10	WEST GERMAN STEREO LOW THRESHOLD	
	05	WGS	0~255	21	21	WEST GERMAN STEREO HIGH THRESHOLD	
	06	WGT	0~255	80	80	WEST GERMAN STEREO LOW 2 THRESHOLD	
	07	WGB	0~255	234	234	WEST GERMAN STEREO HIGH 2 THRESH	
	08	ACG	0/1	01	01	AGC AUTO / CONSTANT SWITCH	
	09	CDB	0~63	40	40	AGC GAIN VALUE AT CONSTANT MODE	
	10	FMP	0~127	34	34	FM MONO PRESCALE	1
	- 11	WGP	0~127	60	60	WEST GERMAN STEREO PRESCALE	
	12	INIP	0~127	127	127	I NICAM PRESCALE	ł
	13	CRM	0/1	00	00	CARRIER MUTE FUNCTION	
	14	ACO	0/1	01	01	AUDIO CLOCK OUT OFF/ON	

#### CPU

	Item number	Adjustment item	Data range	Standard data	Initial data	Note	Device
CPU	00	WAC	0~15	01	01	WEST GERMAN STEREO JUDGE CONSTANT	CXP5400
	01	OSH	0~63	11	13	OSD H POSITION	
	02	ODL	0~256	15	15	POWER ON DELAY	
	03	WIDE	0/1	00	00	RELAY FOR WIDE MODEL	ł
				1		0:4:3 1:16:9	
	04	TWIN	0/1	00	00	0 : Sub V FIELD PROCESSING	
				İ		1 : Sub V FRAM PROCESSING	
	05	DSPC	0/1	01	01	0: ENABLE RECEIVE OF CHANNEL	
	1					IDENTICAL TO TWIN PICTURE	
						1 : DISABLE RECEIVE OF CHANNEL	
					İ	IDENTICAL TO TWIN PICTURE	
	06	SFTE	0/1	*00	01	SIFT ENABLE	1
	07	SFIF	0/1	00	00	SIFT CHECK FACTORY	l
	08	3 BCN	0 ~ 255	10	10		

<sup>\*</sup> After registration adjustment is comleted, set the initial value to "01".

01: As a countermeasure against CRT image burnout, picture slightly shifts left and right (every 2 hours).

00: No shift of picture (adjustment mode)

ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
CONVERGENCE ADJUSTMENT  ● When replacing the deflection yoke, always perform  "DEFLECTION YOKE TILT ADJUSTMENT" before adjusting the convergence.				
Adjustment procedure				
R GH (SUB), R GV (SUB)  R RH (SUB), R RV (SUB)  R BH (SUB), R BV (SUB)				
GREEN REGISTRATION ADJUSTMENT			<vsp menu=""></vsp>	
V-SHIFT adjustment	Monoscope pattern or Crosshatch pattern		VSP VPOS	VPOS -
V-LINEARITY adjustment			VSP VLIN	VLIN + = =
V-SIZE, V-CORRECTION adjustment     While tracking, adjust so that the lattice intervals for VSIZ and     VSCO are equal.			VSP VSIZ VSP VSCO	vsiz vsco
				• •

ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
H-SHIFT adjustment			VSP HPOS	HPOS
H-SIZE adjustment			VSP HSIZ	HSIZ
Finely adjust with SUB MSIZE.				
• PIN-AMP adjustment			VSP HPIN	HPIN
Finely adjust with SUB MPIN.				
UPPER/LOWER-CORNER PIN adjustment			VSP UPCP	UPCP
Correct the screen top and bottom section line bow.			VSP LOCP	
However, if this adjustment is overdone, distortion may occur with the PIN-AMP adjustment that can not be adjusted away.				<b>→</b>
N. TI DIN AMB P. C. L. P. C. H. C.				LOCP
Note: The PIN-AMP adjustment adjusts the overall screen from top to bottom, but the UPPER/LOWER-CORNER PIN adjustments have just large movement in the top and bottom sections, so be careful.				<b>→</b>
V-ANGLE, V-BOW adjustment			VSP HSKE	HSKE
Correct the tilt and bow of the vertical line at the center of the screen.			VSP HBOW	
				HBOW
				<b>→</b>
• TILT adjustment			VSP HKEY	НКЕУ
Adjust to eliminate the tilt of one of the two vertical lines at both ends of the screen.				

ŀ
29
1

Α	DJUSTMENT I	TEM A	AND F	PROC	EDUF	RE		EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
CONVE Adjustme	ERGENCE SU			<b>IMEN</b>	<b>IT</b>						
			Δ	djustn	ent typ	 ре					
Display	Adjustment item	RGH	RGV	RRH	RRV	RBH	RBV				
BSEL	COL SELECT		_	_	_	0	-				
CENT	CENT	0	0	О	0	О	0				
SKEW	SKEW	0	0	0	0	0	0				
BOW	BOW	0	О	0	0	0	0				
4BOW	4TH BOW	0	<del>-</del>	0	_	0	-				
SIZE	SIZE	0	0	0	0	0	0				
LIN	LIN	0	0	0	0	0	0				
MSIZ	MID SIZE	0	0	0	0	0	0				
MLIN	MID LIN	О	0	0	_	0	-				
MKEY	MID KEY	-	0	-	0	-	0				
KEY	KEY	0	0	О	0	0	0				
SSKW	SUB SKEW	0	0	0	0	0	0				
MPIN	MID PIN	0	0	0	0	0	0				
PIN	PIN	0	0	0	0	0	0				
SBOW	SUB BOW	0	О	0	0	О	0				
WAVE	WAVE	-	0	_	0		0				
MBOW	MID BOW	0	-	0	-	0	-				
4PIN	4TH PIN	0	0	0	0	0	0				
4SBOW	4TH SUB BOW	0	-	0	-	0	_				

and the second of the second o

ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
SCREEN CENTER SECTION GREEN HORIZONTAL LINE			<rgv menu=""></rgv>	
1. Finely adjust the center position of the vertical line at the center of the screen with RGV CENT.			RGV CENT	Watch the horizontal center line.  Watch out only for the RGV CENT center point.
				RGV CENT -
<ol><li>Correct the tilt and bow of the horizontal line at the center of the screen with RGV SKEW and RGV BOW.</li></ol>			RGV SKEW RGV BOW	RGV SKEW  →
				RGV BOW
			<rgh menu=""></rgh>	
<ol> <li>Balance the sizes at both sides of the center section of the screen with RGH MLIN.</li> <li>Balance the sizes on both end sections of the screen with RGH LIN.</li> </ol>			RGH MLIN RGH LIN	MLIN D
<ol><li>While tracking, adjust with RGH MLIN and RGH LIN so that the sizes of the horizontal line at the center of the screen are symmetrical left and right.</li></ol>				- CIN

of the second of the contract of the second of the second of the second of the second of the second of

ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
<ol> <li>GREEN HORIZONTAL SIZE ADJUSTMENT</li> <li>Adjust with RGH MSIZE so that the sizes of both edges and of both sides of the center section of the screen are equal.</li> <li>Adjust with RGH SIZE so that the horizontal sizes of both edges and of both sides of the center section of the screen are equal.</li> <li>While tracking, adjust with RGH MSIZ and RGH SIZE so that the lattice intervals for the horizontal line section of the center section of the screen are equal and so that the horizontal size is the prescribed value.</li> <li>If M LIN is changed when the RGH MSIZ and RGH SIZE adjustment is complete, adjust again while tracking.</li> </ol>			<rgh menu=""> RGH MSIZ RGH SIZE</rgh>	MSIZ  SIZE  GH MLIN  GH MSIZ  GH SIZE
With just the H SIZE adjustment in MAIN, if there is no need to adjust RGH SIZE in SUB this can save power.  GREEN VERTICAL LINEARITY ADJUSTMENT  1. Adjust RGV LIN so that the vertical lines at the top and bottom of the screen are symmetrical.			<rgv menu=""> RGV LIN</rgv>	

ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
<ol> <li>GREEN VERTICAL SIZE ADJUSTMENT</li> <li>Adjust with RGV MSIZE so that the sizes for the top and bottom sections of the screen and for both sides of the center section of the screen are equal.</li> <li>Set the vertical size to the prescribed value with RGV SIZE.</li> <li>Adjust RGV MSIZ and RGV SIZE watching the vertical line at the center section of the screen.</li> <li>While tracking, adjust with RGV MSIZ and RGV SIZE so that the lattice intervals for the vertical line section of the center section of the screen are equal and so that the vertical size is the regulation value.</li> <li>If RGV LIN is out of place when the RGV MSIZ and RGV SIZE adjustment is complete, adjust again while tracking.</li> <li>If there is no need to adjust RGV SIZE in SUB with just the V SIZE adjustment in MAIN, this can save power.</li> </ol>			<rgv menu=""> RGV MSIZ  RGV SIZE</rgv>	MSIZ SIZE GV LIN  GV SIZE  GV MSIZ
<ul> <li>GREEN HORIZONTAL TRAPEZOIDAL DISTORTION</li> <li>ADJUSTMENT</li> <li>1. Adjust with RGH SSKW so that the tilt of the vertical lines at both edges of the screen is symmetrical left and right.</li> <li>2. Adjust with RGH KEY so that there is no tilt in the vertical lines at both edges of the screen.</li> <li>3. If there is a tilt on either the left or right after the RGH KEY adjustment, adjust while tracking.</li> </ul>			<rgv menu=""> RGH SSKW RGH KEY</rgv>	SSKW

ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
<ol> <li>GREEN HORIZONTAL QUATERNARY ADJUSTMENT</li> <li>Correct the quaternary distortion with RGH 4PIN.</li> <li>While balancing, correct the quaternary distortion of both end sections of the screen with RGH 4SBOW.</li> <li>While tracking, adjust with RGH 4PIN and RGH 4SBOW.</li> </ol>			<rgh menu="">  RGH 4PIN  RGH 4SBOW</rgh>	4 PIN () 4SBOW
GREEN HORIZONTAL ASYMMETRICAL PIN DISTORTION ADJUSTMENT  1. Adjust with RGH MBOW so that the pin asymmetry at both sides of the center section of screen is symmetrical.  2. Adjust with RGH SBOW so that the bow at both end sections of the screen is symmetrical left and right.  3. While tracking, adjust with RGH MBOW and RGH SBOW so that the bow of vertical lines on the entire screen is symmetrical left and right.			<rgh menu=""> RGH MBOW RGH SBOW</rgh>	M BOW S BOW

ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
GREEN HORIZONTAL SYMMETRICAL PIN DISTORTION			<rgh menu=""></rgh>	
ADJUSTMENT				
<ol> <li>Adjust the pin distortion at both sides of the center section of the screen with RGH MPIN.</li> </ol>			RGH MPIN	
2. Adjust the pin distortion at both end sections of the screen with RGH PIN.			RGH PIN	MANAGEMENT OF THE PROPERTY OF
<ul><li>3. While tracking, adjust with RGH MPIN and RGH PIN so that the PIN of vertical lines on the entire screen have no bowing.</li><li>4. If there is asymmetrical pin distortion after the RGH MPIN</li></ul>				M PIN () PIN
and RGH PIN adjustments, adjust with RGH MBOW and RGH SBOW while tracking.			RGH MBOW RGH SBOW	
•With just the PIN AMP adjustment in MAIN, if there is no need to adjust RGV PIN in SUB, this can save power.				GH PIN GH SBOW
GREEN VERTICAL WAVE (TERTIARY DISTORTION)			<rgv menu=""></rgv>	
ADJUSTMENT				
Take the screen top and bottom horizontal lines with RGV WAVE and find the secondary and quaternary waveform.			RGV WAVE	RGV WAVE
There is KEY distortion after the RGV WAVE adjustment, so adjust with GV WAVE and RGV KEY while tracking.			RGV KEY	RGV KEY  GH MPIN

\* \*

ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
GREEN VERTICAL QUATERNARY DISTORTION ADJUSTMENT		·	<rgv menu=""></rgv>	
Correct the quaternary distortion of the horizontal lines at the top and bottom sections of the screen with RGV 4PIN.			RGV 4PIN	RGV 4PIN
<ol> <li>Since there is no 4SBO for vertical correction, there will be a slight imbalance, but adjust to eliminate the distortion from the horizontal line at either the top or the bottom of the screen.</li> <li>In many cases, the horizontal lines at the top and bottom sections of the screen are not straight lines after the adjustment. As long as the secondary distortion is mild enough that it can be corrected with the PIN adjustment, this is OK.</li> </ol>				
GREEN VERTICAL TRAPEZOIDAL DISTORTION			<rgv menu=""></rgv>	
Adjust with RGV SSKW so that the tilt of the horizontal lines at the top and bottom sections of the screen is symmetrical			RGV SSKW	RGV SSKW
about the center position horizontal line.  2. Adjust with RGV MKEY so that there is no tilt for the line			RGV MKEY	
sections at both sides of the horizontal lines at the center section of the stream.  3. Adjust with RGV KEY so that there is no tilt for the horizontal lines at the top and bottom sections of the screen.  4. While tracking, adjust with RGV MKEY and RGV KEY so that there is no tilt for the horizontal lines on the entire screen.			RGV KEY	MKEY () KEY
5. If the tilt is unbalanced after the RGV MKEY and RGV KEY adjustment, adjust again with RGV SSKW.			RGV SSKW	GV SSKW GV MKEY

ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
GREEN VERTICAL ASYMMETRICAL PIN DISTORTION (SECONDARY DISTORTION) ADJUSTMENT			<rgv menu=""></rgv>	
Correct the asymmetrical pin distortion at the top and bottom sections of the screen with RGV SBOW.			RGV SBOW	RGV SBOW
i 1				
GREEN VERTICAL ASYMMETRICAL PIN DISTORTION ADJUSTMENT			<rgv menu=""></rgv>	
<ol> <li>Adjust the pin distortion for both side sections and the center of the screen with RGV MPIN.</li> <li>Adjust with RGV PIN so that the horizontal lines at the top and bottom sections of the screen are straight lines.</li> </ol>			RGV MPIN RGV PIN	
3. Adjust with RGV MPIN and RGV PIN so that there is no curve in the horizontal lines on the entire screen.				MPIN A N
•				Pin
4. After the adjustments in Items 1-3, adjust the tracking with RGV SBOW, RGV MPIN, and RGV PIN.			RGV SBOW	GV SBOW GV PIN
,				$\Leftrightarrow$

.

ı	
38	
1	

ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
GREEN AND RED REGISTRATION ADJUSTMENT (RRH, RRV)  1. Receive a PAL cross-hatch signal. 2. Adjust so that the red lines lay on the green lines. Adjust with the same procedure as the GREEN SUB adjustment.	PAL Cross-hatch pattern			
Notes: 1. The main correction is not carried out during red registration adjustment.  2. Beware. The green adjustment items can be changed by mistake.  3. Unlike for green, adjust within the range -127 ~ +128.  GREEN AND BLUE REGISTRATION ADJUSTMENT (RBH, RBV)  1. Receive a PAL cross-hatch signal.  2. Adjust so that the blue and green lines are on top of each other.	PAL Cross-hatch pattern			
Notes: 1. The main correction is not carried out during RED registration adjustment.  2. Beware. The GREEN and RED adjustment items can be changed by mistake.				
·				

ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
AGC ADJUSTMENT  1. Receive an off-air signal. 2. Adjust the AGC VR (IF 1002) so that there is no snow noise and cross-modulation.  WHITE BALANCE ADJUSTMENT  1. Receive the monoscope pattern signal and adjust the picture	Monoscope pattern		PICTURE	
quality with the menu.  2. Adjust service mode SBRT so that the signal 10 IRE section barely glows.			minimum < RGB MENU > SBRT	
<ol> <li>Receive the all-white pattern signal.</li> <li>Adjust the white balance with service mode GCUT and BCUT.</li> <li>Adjust service mode SBRT so that the signal 100 IRE section barely glows.</li> </ol>	All White pattern		BCUT BCUT	
<ul><li>6. Adjust the white balance with service mode GAMP and BAMP.</li><li>7. Repeatedly adjust the white balance for the minimum and</li></ul>			PICTUREminimum GAMP BAMP	
maximum picture settings.			PICTURE maximum	
				·

,

and the second of the second o

## - 40 -

## SECTION 4 SAFETY RELATED ADJUSTMENTS

ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
HV HOLD DOWN CIRCUIT OPERATIONS CHECK AND ADJUSTMENT (M RESISTOR)			■ R809, R988	E BOARD – COMPONENT SIDE –
When replacing the parts marked on the right, check the HV hold down and adjust.		☐ marked parts C818, D804, D806, D809, D909, D912, Q915, R809, R855, R856, R857, R858, R883, R954, R955, R984, R988, R991, R995, R996, T801(FBT),T803		CN886 CN885 CN884  ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○
<ol> <li>Remove the cap for the unconnected pin in the high-voltage block and connect a Static Voltmeter.</li> <li>Input 240 VAC power.</li> </ol>	Static Voltmeter	HV Block		Remove the cap off from the unused terminal and connect a static voltmeter there.
3. Receive the Dot siganl and set the PICTURE and BRIGHTNESS settings to their minimums.	Dot pattern		PICTUREminimum BRIGHTNESSminimum	
4. Connect a 33 k variable resistor across the E board CN885 connector (with the variable resistor set to its maximum).				CN885

ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
<ul> <li>5. Gradually lower the value of the variable resistor and check that the hold down circuit operates at a Static Voltmeter reading of 33.70 ± 0.80 kVDC and that the rasters disappear.</li> <li>6. If the hold down circuit operates and the rasters disappear at a Static Voltmeter reading of 34.0kVDC or higher, remove resistor R809 and mount a 16.0 k 1/4W RN at R988. If the hold down circuit operates and the rasters disappear at a Static Voltmeter reading of 32.0 kVDC or lower, remove resistor R809 and mount 6.2 k 1/4W RN at R988.</li> <li>7. Check Item 5 again.</li> </ul>			R988 R988	33.70 ± 0.80 kVDC  34.0 kVDC or higher 16.0 k 1/4W  32.0 kVDC or lower 6.2 k 1/4W  ■ R809
HV REGULATION CIRCUIT CHECK AND ADJUSTMENT (MRESISTOR)				
<ol> <li>When replacing the parts marked  on the right, check the HV regulation and adjust.</li> <li>Remove the cap for the unconnected pin in the high-voltage block and connect a Static Voltmeter.</li> </ol>	Static Voltmeter	☐ marked parts C918, C930, C934, C980, D920, Q909, R808, R851, R936, R939, R942, R944, R945, R946, R947, R950, R960, R965, R967, R971, R975, R976, R982, R983, R985, R998		E BOARD – COMPONENT SIDE –  CN886 CN885 CN884  CN886 CN885 CN884  CN886 CN885 CN884  CN886 CN885 CN884  CN886 CN885 CN884  CN886 CN885 CN884  CN886 CN885 CN884
<ol> <li>Input 240 VAC power.</li> <li>Receive the Dot signal and set the PICTURE and BRIGHTNESS settings to their minimums.</li> </ol>	Dot pattern		PICTUREminimum BRIGHTNESSminimum	

ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
<ol> <li>Check that the Static Voltmeter reading is 31.0 ± 0.5 kVDC.</li> <li>If the Static Voltmeter reading is 30.4 kVDC or lower, remove resistor R808 and mount 5.6 k 1/4W RN at R983.</li> <li>If the Static Voltmeter reading is 31.5 kVDC or higher, remove resistor R808 and mount 8.2 k 1/4W RN at R983.</li> <li>If the Static Voltmeter reading is 32.0 kVDC or higher, remove resistor R808 and mount 10.0 k 1/4W RN at R983.</li> <li>If any of Items 5, 6 or 7 has been implemented, check Item 4 again.</li> </ol>			R983 R983 R983	31.0 ±0.5 kVDC 30.4 kVDC or lower 5.6 k 1/4W 31.5 kVDC or higher 8.2 k 1/4W 32.0 kVDC or higher 10.0 k 1/4W  R983
HV HOLD DOWN AND HV REGULATOR SIMPLE ADJUSTMENT  It is normally desirable that the HV hold down and HV regulation checks use a Static-voltmeter. However, sometime one is not available, for example in the field, below is a simple adjustment method.  When replacing parts with the mark, replace both the resistors with the mark R808 (R983) and R809 (R988) with resistors one rank lower in the E-12 series. Do not replace just one of these resistors. Always replace both with resistors one rank lower.			R808 (R983) R809 (R988)	E board CN886 CN885 O O O O O O O O O O O O O O O O O O O


# SECTION 5 ELECTRICAL ADJUSTMENTS


ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
B BOARD ADJUSTMENT  SUB COLOR (SCOL) ADJUSTMENT  1. Input the PAL Color Bar signal and adjustment the picture control.  2. Set to service mode.  3. Connect an oscilloscope between ⑤ pin of CN201 and ground.  4. Adjust SCOL so that Vcy = VMg = VBi in the waveform levels.  5. Write the data to memory.	PAL Color Bar pattern Oscilloscope	CN201 ⑤ pin (B(2/3) Board)	PICTURE 80% RGB SCOL : Vcy =VMg=VBi	CN201 ⑤ pin> VW VCY VMG BI BK 63.5 μsec CN201 ⑥ pin>
SUB HUE (MHUE,SHUE) ADJUSTMENT  1. Input the NTSC Color Bar signal. 2. Set to service mode. 3. Connect an oscilloscope between ⑤ pin of CN201 and ground. 4. Adjust MHUE so that Vcy = VMg in the waveform levels. 5. Write the data to memory.  (PIP MODE) 1. Input the NTSC Color Bar signal. 2. Select PIP on screen mode and put the set into service mode. 3. Connect an oscilloscope between ⑤ pin of CN201 and ground. 4. Adjust SHUE so that Vcy = VMg in the waveform levels.	NTSC Color Bar pattern Oscilloscope  NTSC Color Bar pattern Oscilloscope	CN201 ⑤ pin (B(2/3) Board)  CN201 ⑤ pin (B(2/3) Board)	MCD MHUE: Vcy =VMg  SCD SHUE: Vcy =VMg	(PIP MODE) < CN201 (\$\sqrt{s}\) pin >
<ol> <li>Write the data to memory.</li> <li>SUB CONTRAST ADJUSTMENT</li> <li>(PIP MODE)         <ol> <li>Input the PAL Color Bar signal.</li> <li>Select PIP on screen mode and put the set into service mode.</li> <li>Connect an oscilloscope Q14 emitter on the B(1/3) board and ground.</li> <li>Adjust SCON so that V MAIN-Y = V PIP-Y in the waveform levels.</li> <li>Write the data to memory.</li> </ol> </li> </ol>	PAL Color Bar pattern Oscilloscope	Q14 emitter (B(1/3) Board)	PIP SCON: V MAIN-Y =V PIP-Y	(PIP MODE)  < B(1/3) board - Q14 emitter >  White  White  Black  MAIN SCREEN  PIP SCREEN  31.75 µsec  White  PIP SCREEN  PIP SCREEN  PIP SCREEN  PIP SCREEN  PIP SCREEN  PIP SCREEN


ADJUSTMENT ITEM AND PROCEDURE	EQUIPMENT AND SIGNAL	MEASUREMENT POSITION	ADJUSTMENT LOCATION	ILLUSTRATION AND SHAPE AND NUMBER
SUB WHITE BALANCE ADJUSTMENT  (PIP MODE)  1. Input Gray Scale signal 20 IRE.  2. Select PIP in screen mode and put the set into service mode.  3. Connect an oscilloscope Q15 emitter on the B(1/3) board and ground.  4. Adjust RV1 so that V main = Vpip in the waveform levels.  5. Connect an oscilloscope Q16 emitter on the B(1/3) board and ground.  6. Adjust RV2 so that V main = Vpip in the waveform levels.	Oscilloscope	[ B(1/3) Board ] Q15 emitter (R-Y) Q16 emitter (B-Y) Q35 emitter (PIP-FS)	[ B(1/3) Board ] RV1 (R-Y) RV2 (B-Y)	< Q15 emitter, Q16 emitter >  -V 50(R-V)  -U 50(B-V)  Vmain  Vpip
P IN P POSITION ADJUSTMENT  1. Upon receiving the Monoscope signal. 2. Set service mode and then press the PIP command twice. The P in P position will then move periodically to four points. Adjust "RDV" and "RDH" on the new screen so that the four points are distributed equally at; up, down, left and right. 3. Write the data to memory.	Monoscope pattern		< PIP MENU > RDV RDH	PIP-FS
1. Receive the RF signal with TEXT. 2. Set to service mode. 3. Set the TEXT in MIX mode and adjust the screen positon with "TXH" and "TXV". 4. Write the data to memory.			<txt menu=""> TXH (H position) TXV (V position)</txt>	
1. Receive the PAL Color Bar signal. 2. Set to service mode. 3. Adjust "OSH" so that the center line of the signal and the center of the crosshairs of the OSD display match are aligned with each other. 4. Write the data to memory.	PAL Color Bar pattern	·	< CPU MENU > OSH	


# SECTION 6 DIAGRAMS


6-1. BLOCK DIAGRAM (1)

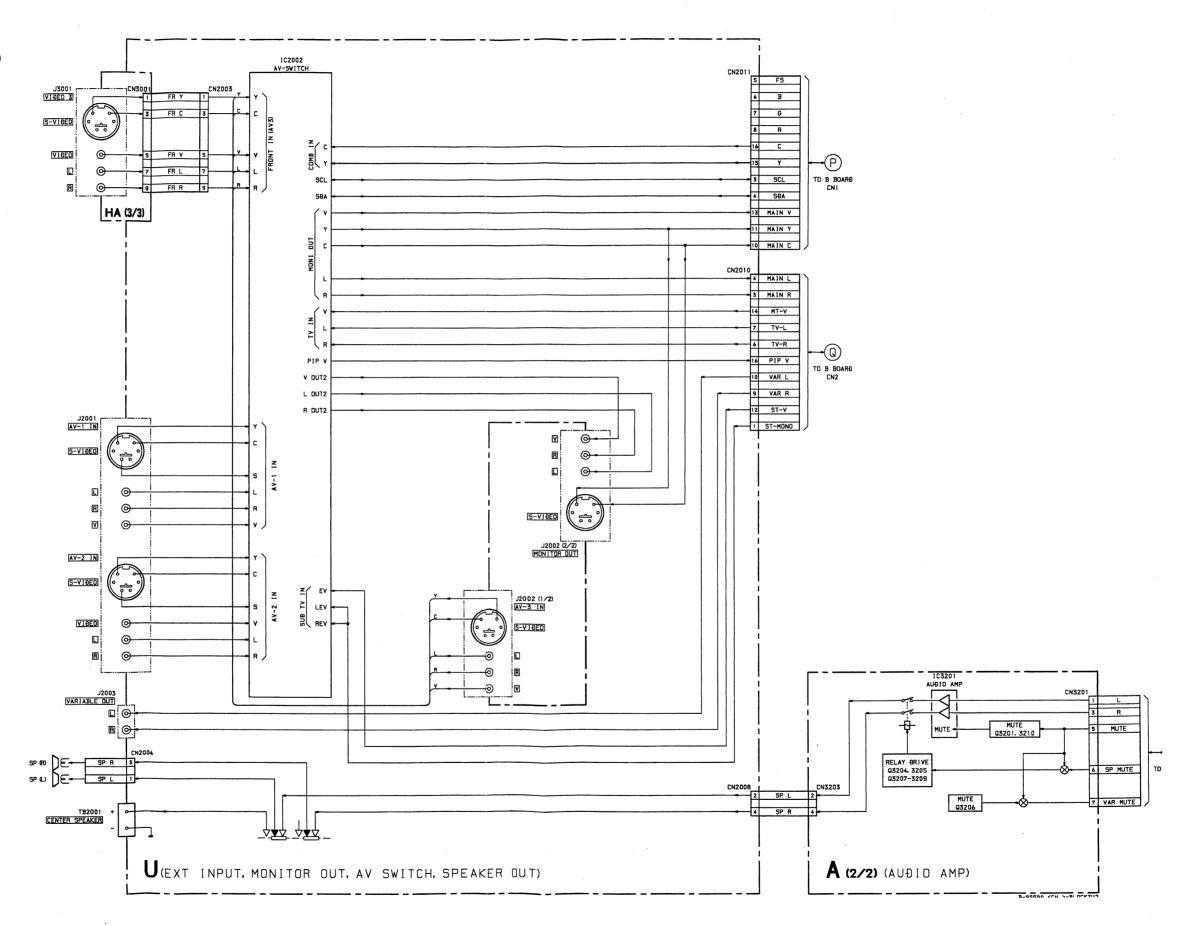


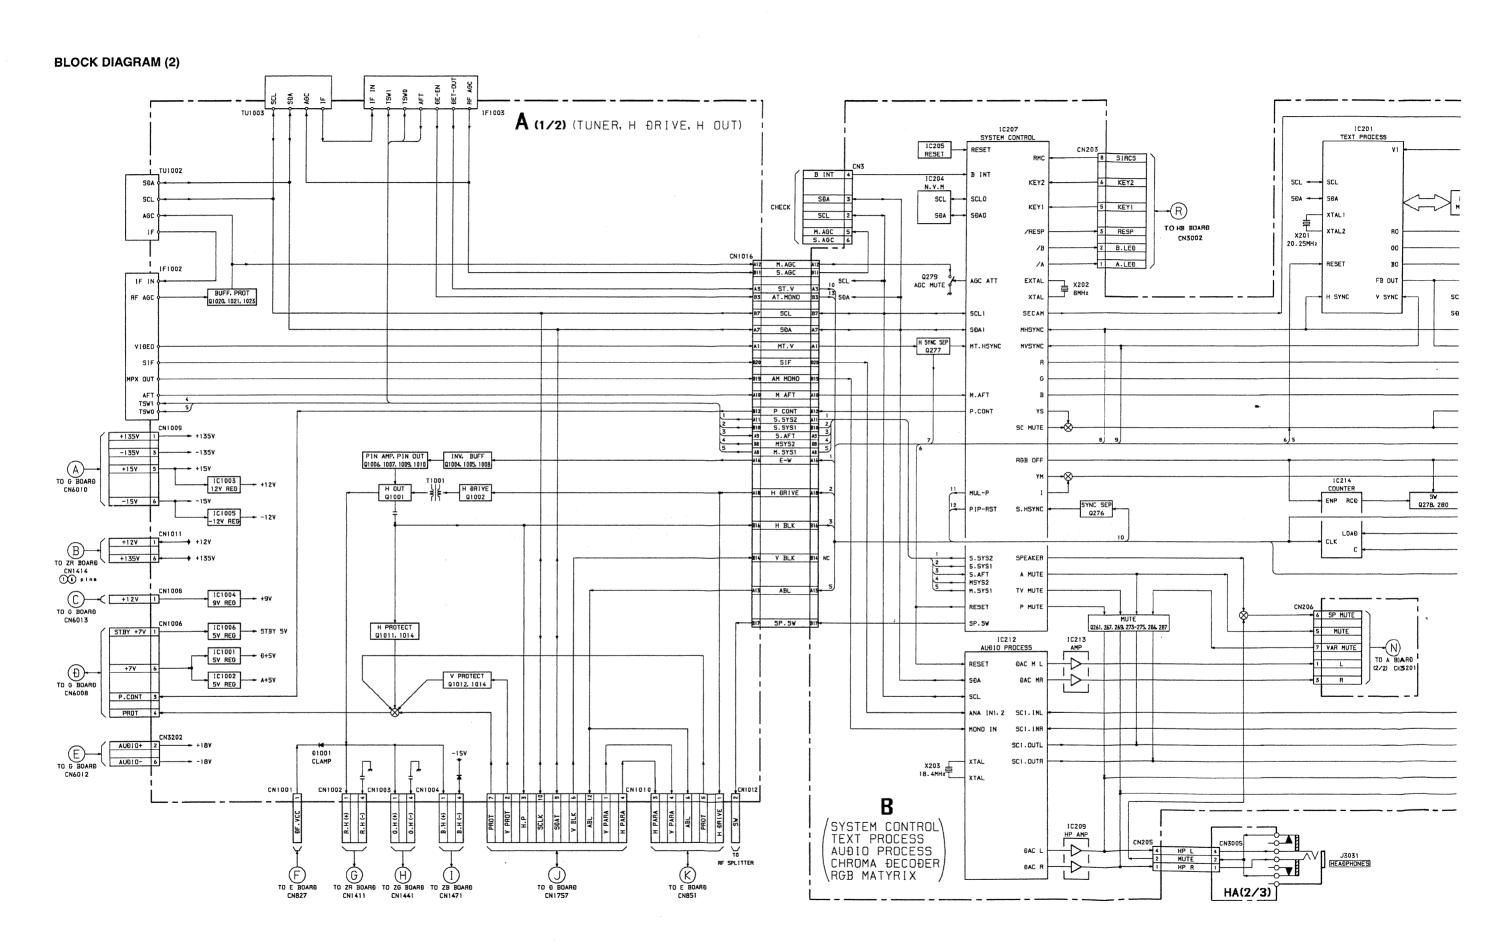

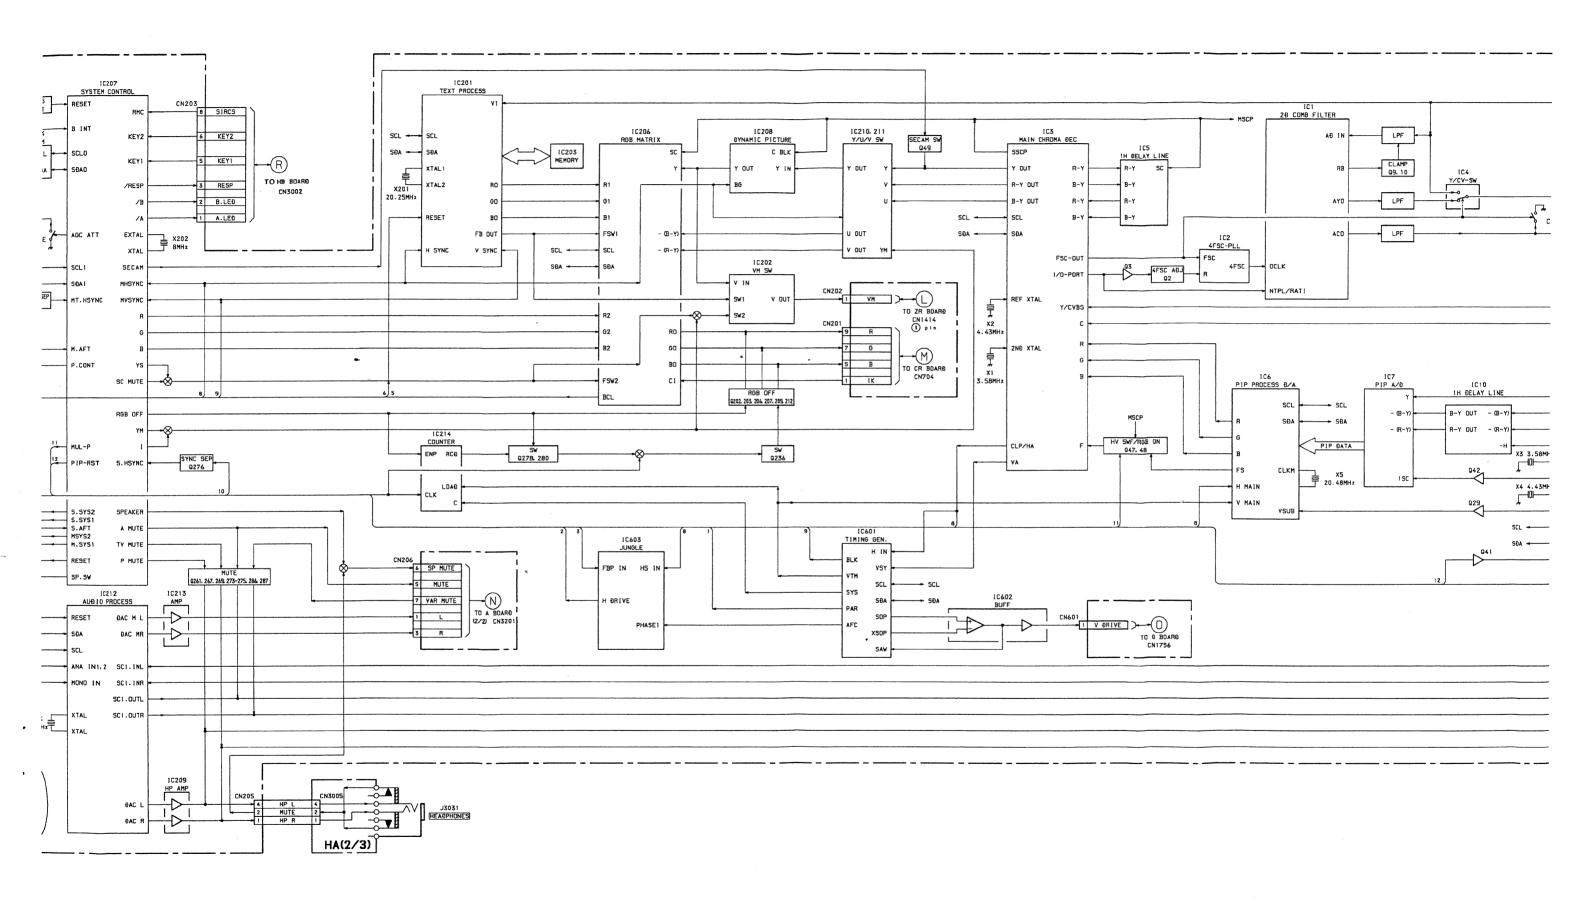


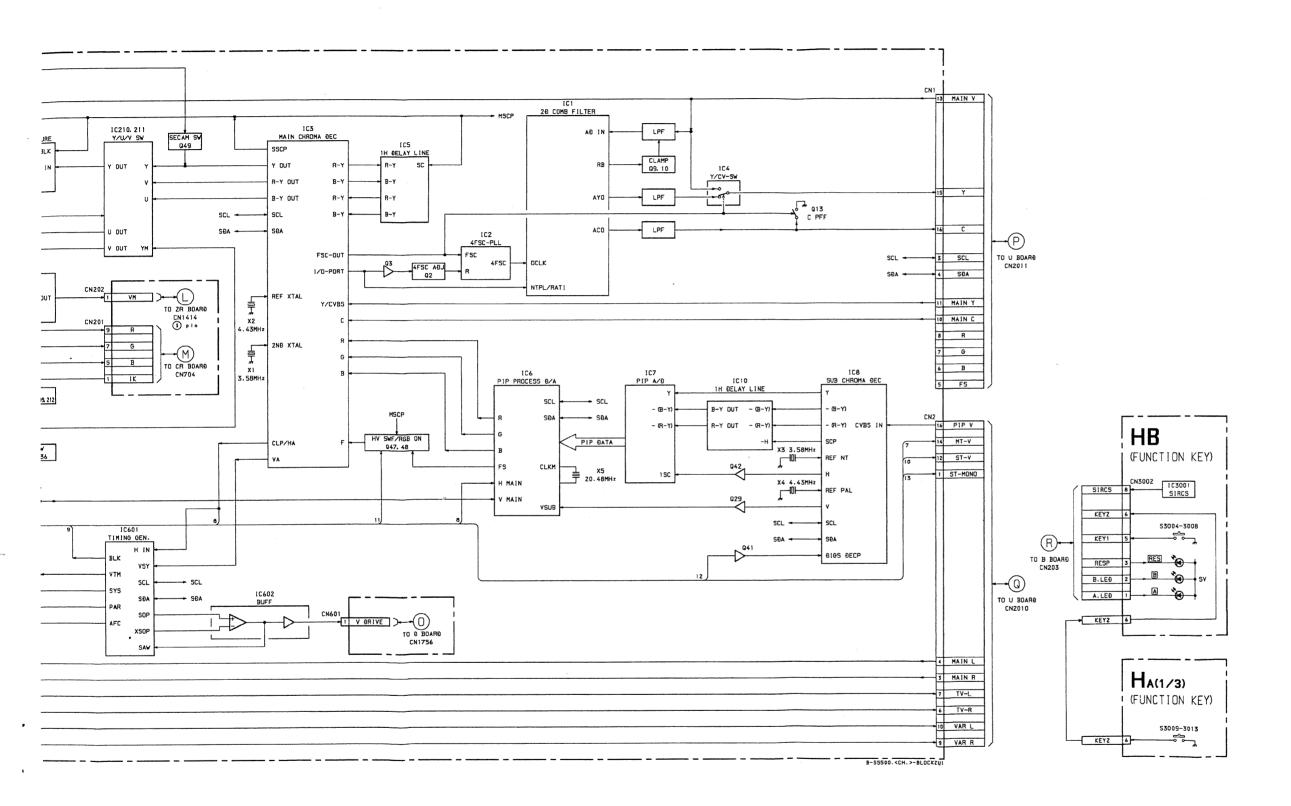


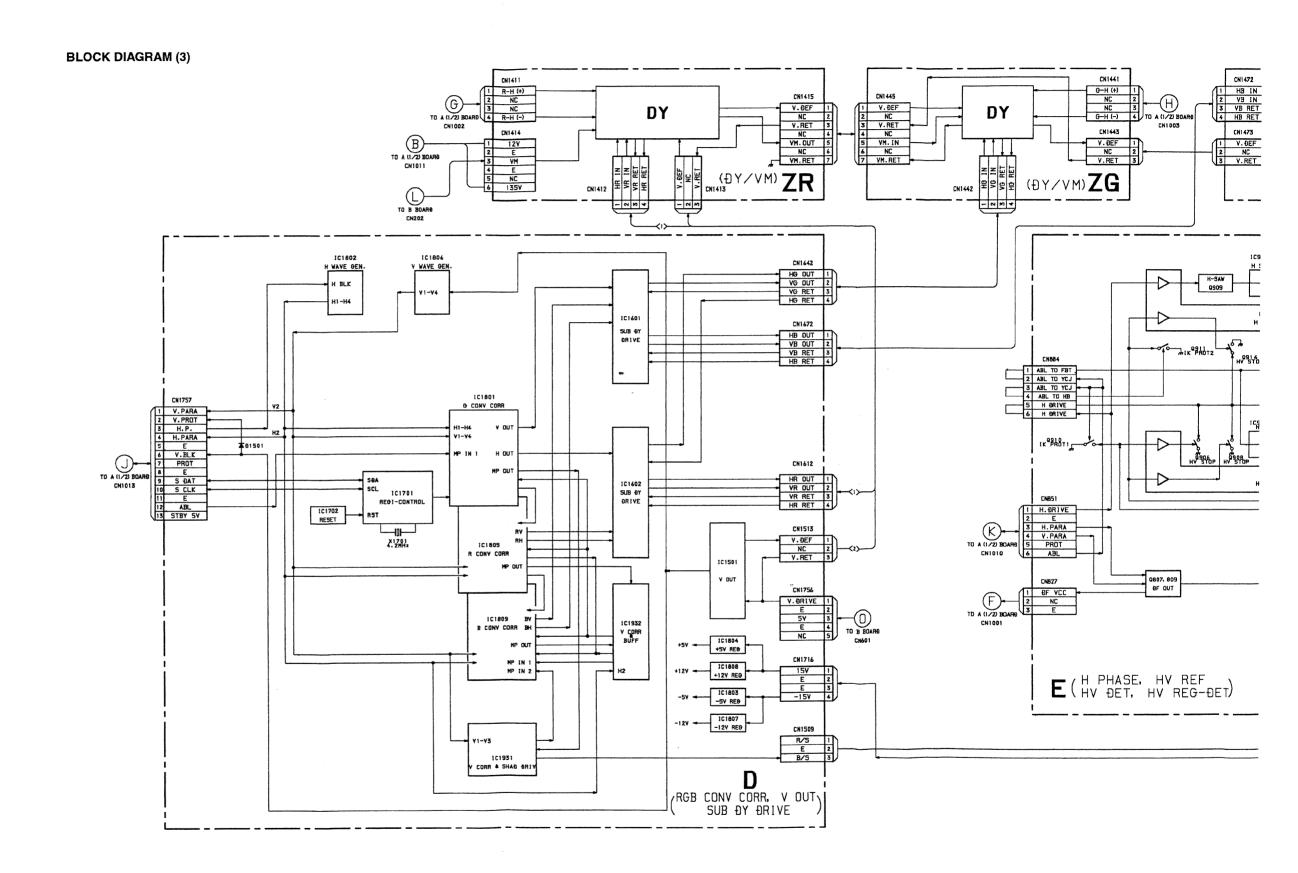


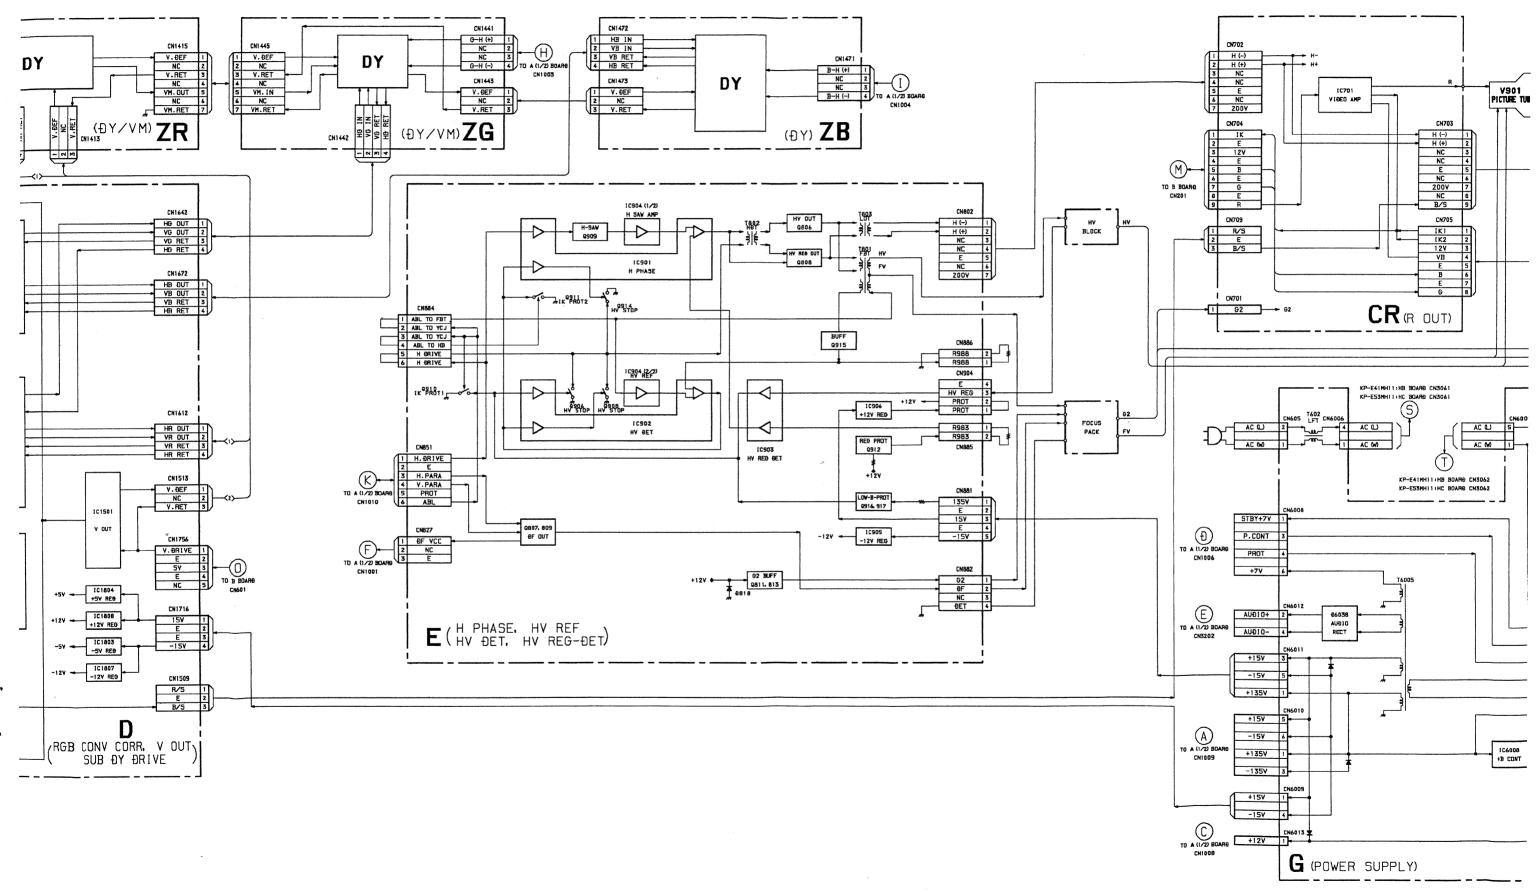



- 55 -

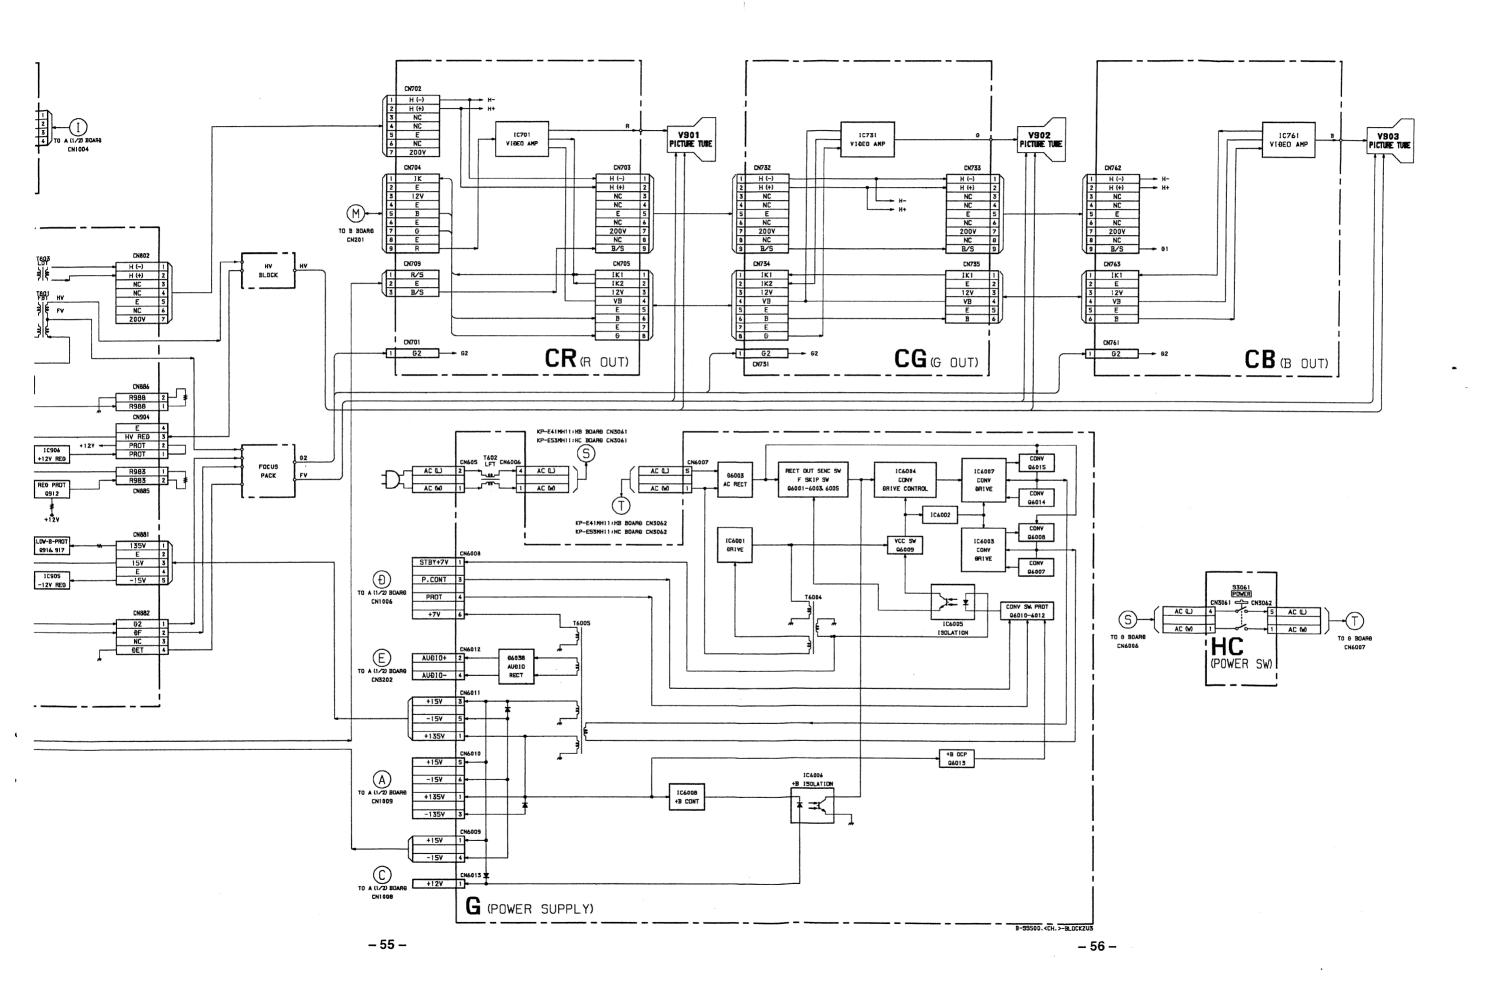

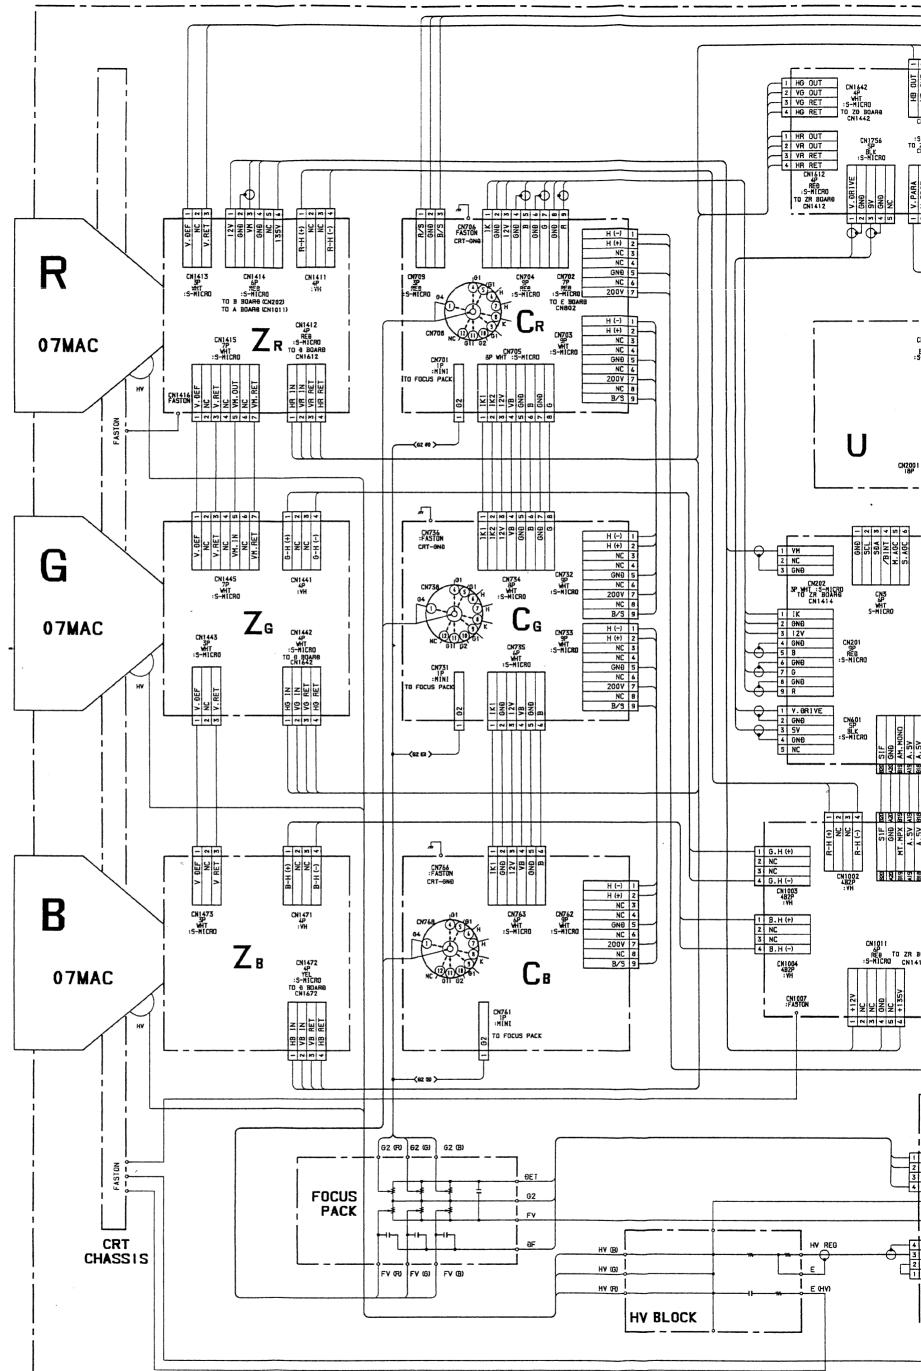

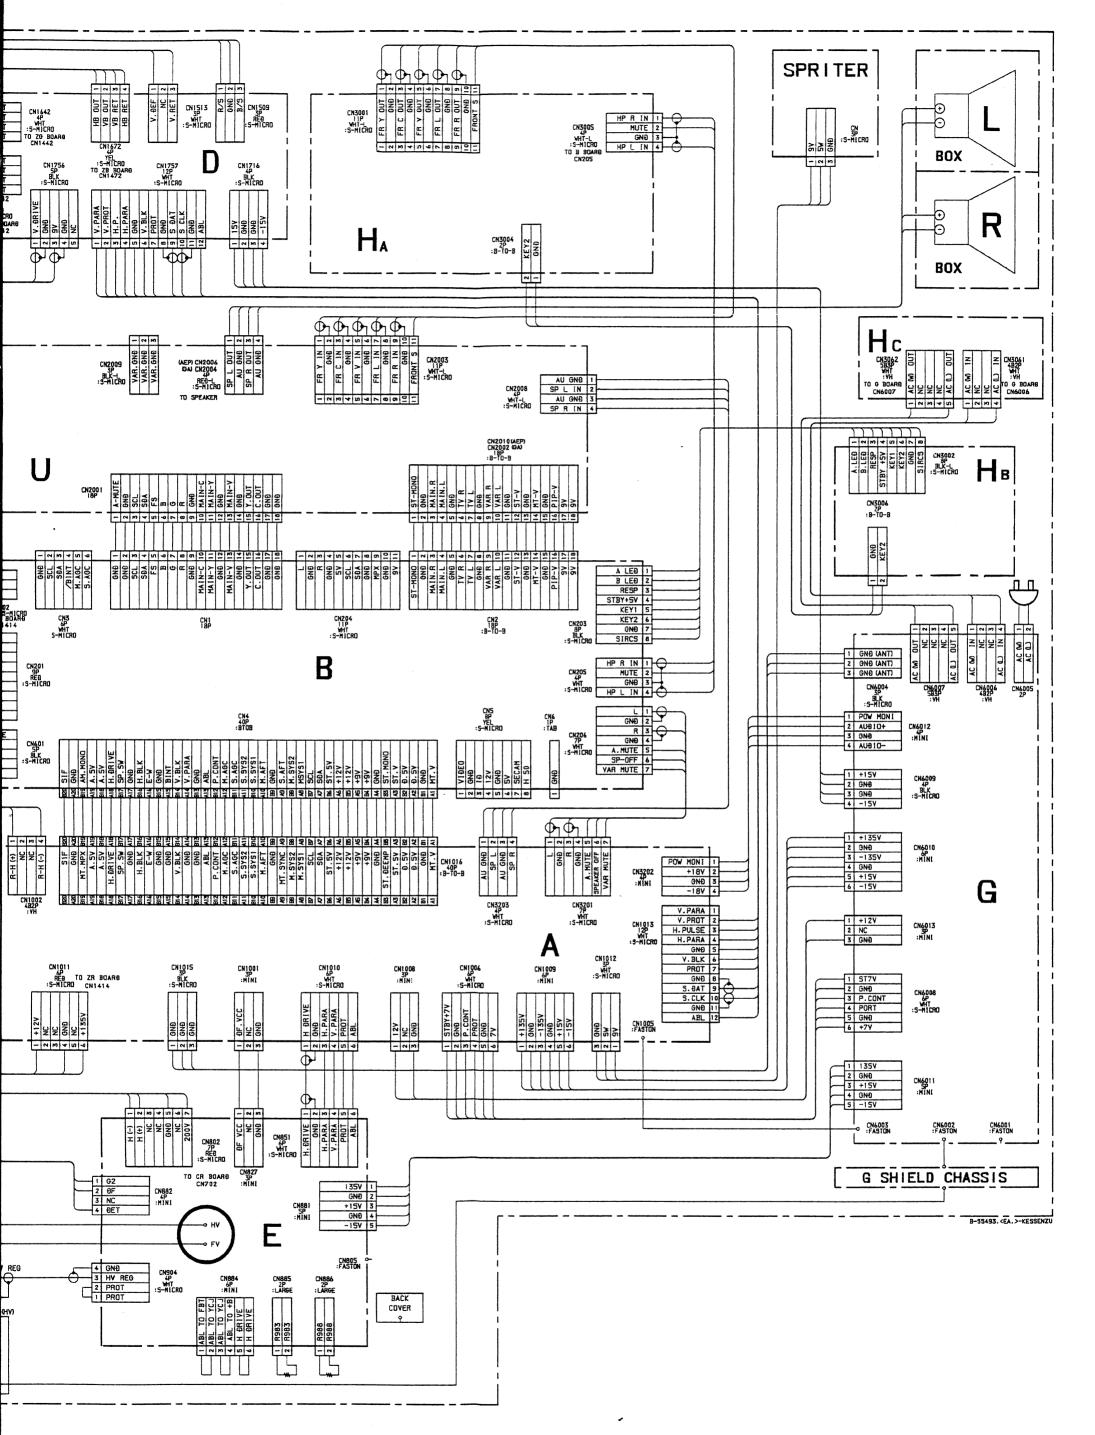

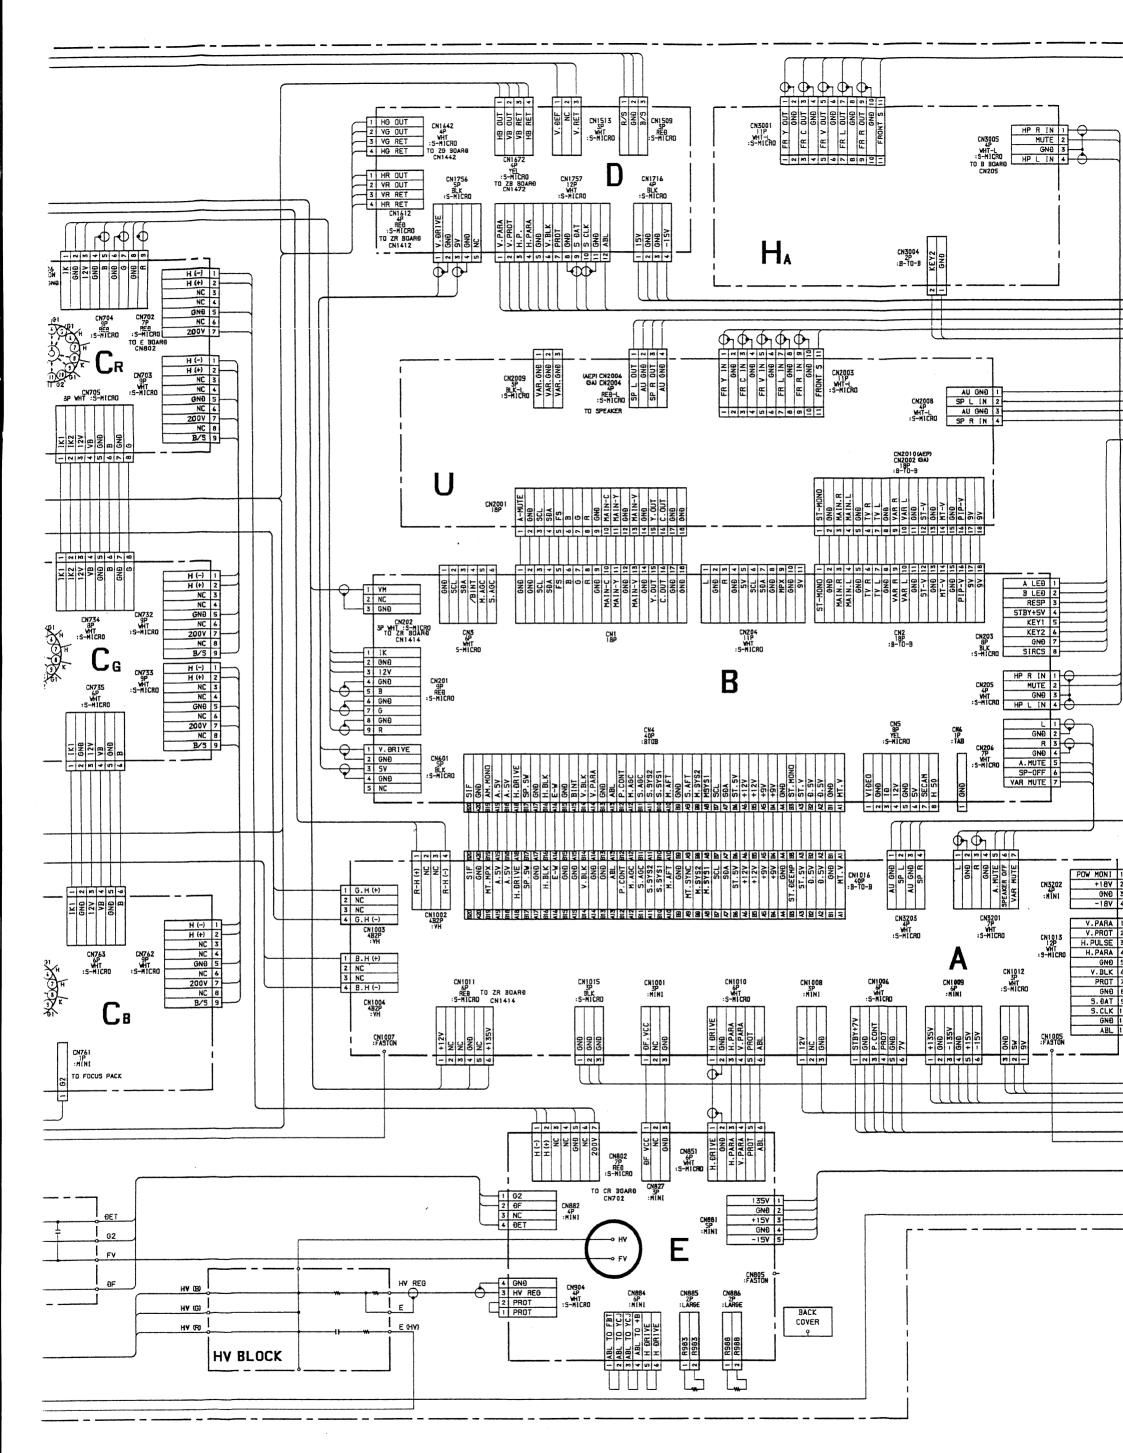

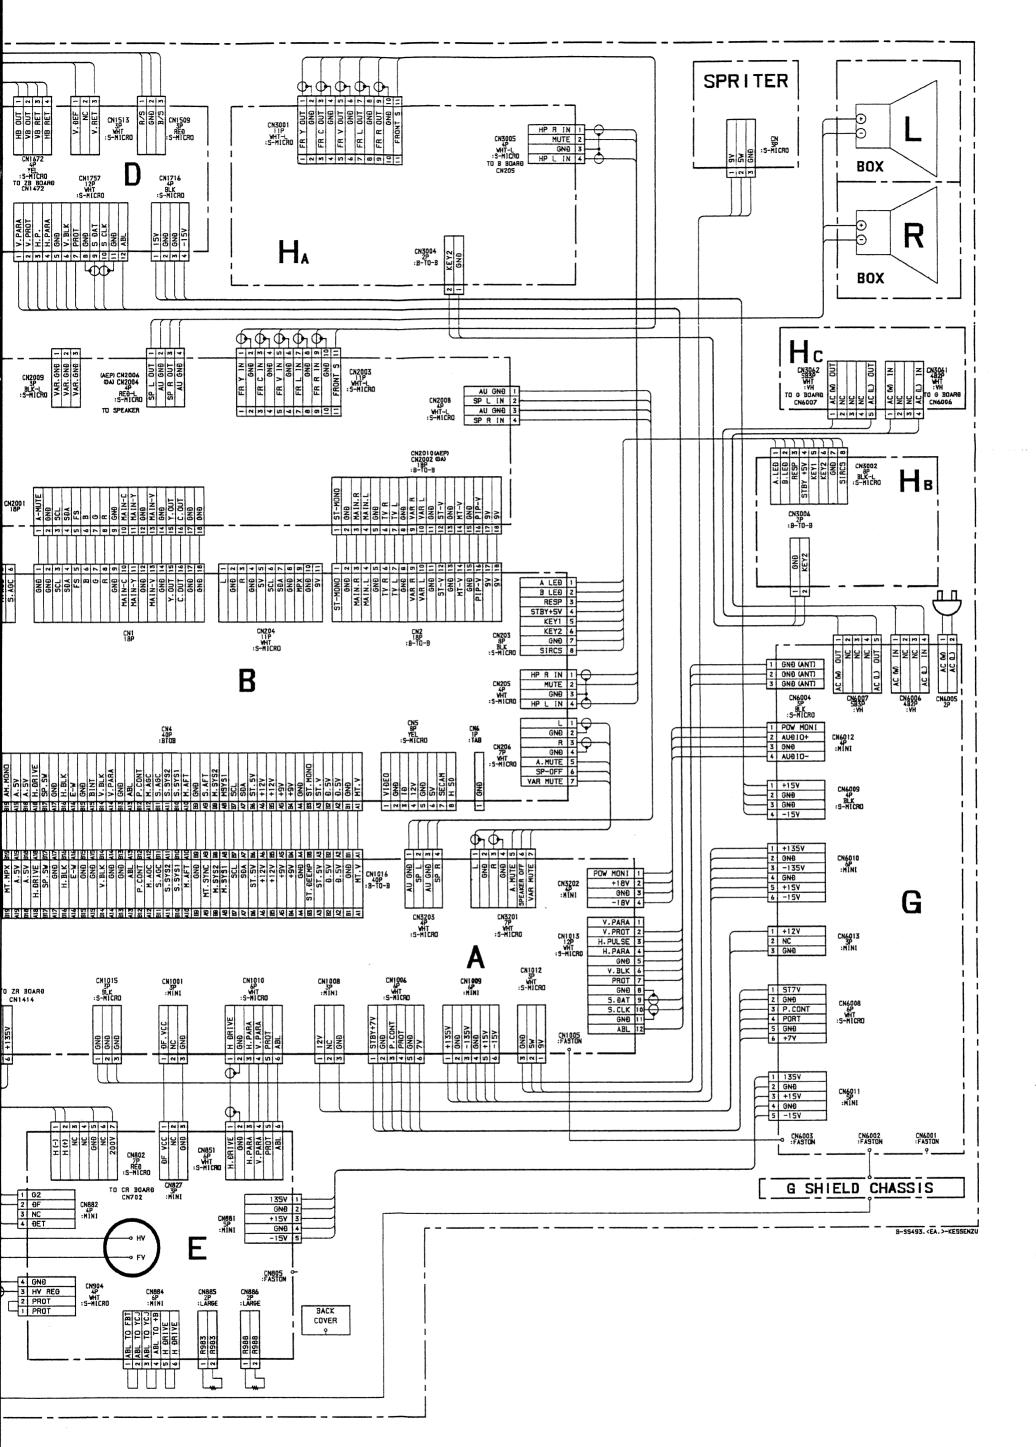

6-3. CIRCU HĄ ZG CG-

#### 6-4. PRINT DIAGE

Note:

· Capacitors wit

 All resistors ar  $k\Omega = 1000\Omega$ , M

 Indication of re as follows.

Pitch : 5mn

Rating elec · Eww] : nonfl

• <del>[</del>\*\*\*] : fu • ∆ : internal c

: panel

 All variable and noted.

earth-cha <del>رازر</del> · The componer

carefully facto X-ray radiation

Should replace When replacin

indicated. If re


identified by 🗜

(Refer to R808 When replacing

Pa HVBlock C818, D804, Q915, R809 R883, R954

R995, R996, ....E B HV Block, C918, C930, R808, R851 R945, R946, R967, R971 R985, R998

.....E BOAR

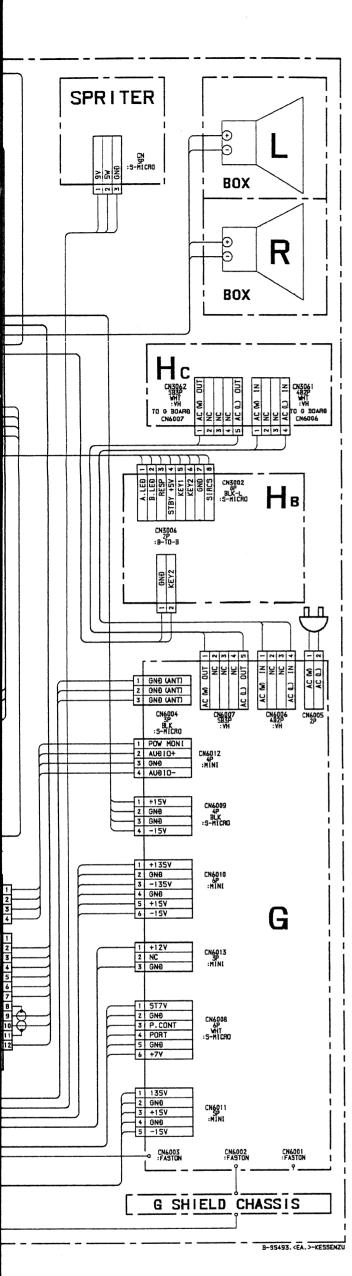


#### Terminal name of semiconductors in silk screen printed circuit (\*)

	Device	Printed symbol	Terminal name	Circuit
0	Transistor	T	Collector Base Emitter	2) 2)
2	Transistor		Collector Base Emitter	
3	Diode	P	Calhode Anode	*
•	Diode	Т	Cathode Anode (NC)	<u>\$</u>
(5)	Diode		Cathode Anode (NC)	<b>⊶</b>
6	Diode	Т	Common Anode Cathode	. 9
0	Diode		Common Anode Cathode	l <mark>≯  , ≯ </mark> Ĵ
8	Diode	Т	Common Anode Anode	2, 9,4
9	Diode		Common Anode Anode	گه بور
10	Diode	Т	Common Cathode Cathode	
11	Diode		Common Cathode Cathode	
12	Transistor (FET)	I	Drain Source Gate	
13	Transistor (FET)	H	Drain Source Gate	50 50
14	Transistor (FET)		☐ ☐ Source ☐ Drain ☐ Gate	
_	Discrete se	miconductot		

(Chip semiconductors that are not actually used are included.)

#### 6-3. CIRCUIT BOARDS LOCATION

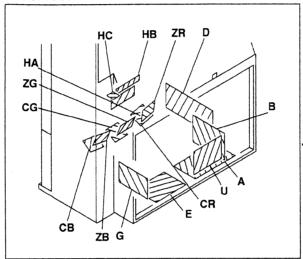

#### 6-4. PRINTED WIRING BOARDS AND SCHEMATIC **DIAGRAMS**

### Note:

- Capacitors without voltage indication are all 50.
- · All resistors are in ohms.
- $k\Omega = 1000\Omega$ ,  $M\Omega = 1000k\Omega$
- Indication of resistance, which dose not have one for rating electrical power, is as follows.

Pitch : 5mm Rating electrical power: 1/4 W (CHIP: 1/10W)

- monflammable resistor.
- fusible resistor.
- $\Delta$  : internal component.
- \_\_\_\_\_: panel designation and adjustment for repair.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- + : earth-chassis.
- The components identified by 📓 in this basic schematic diagram have been carefully factory-selected for each set in order to satisfy regulations regarding

Should replacement be required, replace only with the value originally used. - When replacing components identified by  $\hfill \square$  , make the necessary adjustments indicated. If results do not meet the specified value, change the component ed by 🖪 and re (Refer to R808,R809,R983 and R988 adjustment on Page 40 - 42.)

. When replacing the part in below table, be sure to perform the related adjustment.

Part replaced ( ( )	Adjustment ( 🖼 )
HVBlock C818, D804, D806, D809, D909, D912, Q915, R809, R855, R856, R857, R858, R883, R954, R955, R984, R988, R991, R995, R996,T801(FBT), T803 E BOARD	HV HOLD-DOWN (R809, R988)
HV Block, C918, C930, C934, C980, D920, Q909, R808, R851, R936, R939, R942, R944, R945, R946, R947, R950, R960, R965, R967, R971, R975, R976, R982, R983, R985, R998 E BOARD	HV Regulator (R808, R983)

- As to the voltage volue shown by the semiconductors on the Shematic Diagram, see the another list
- Readings are taken with a color-bar signal input.
- Readings are taken with a 10M $\Omega$  digital multimeter.
- · Voltages are dc with respect to ground unless otherwise noted. · Voltage variations may be noted due to normal production tolerances.
- · All voltages are in V.

- (Actual measured value may be different).
- : signal path.
- Circled numbers are waveform references.

## Reference information

RESISTOR : RN METAL FILM SOLID : RC : FPRD NONFLAMMABLE CARBON : FUSE NONFLAMMABLE FUSIBLE NONFLAMMABLE WIREWOUND : RW

NONFLAMMABLE METAL OXIDE : RS :RB NONFLAMMABLE CEMENT : **※** ADJUSTMENT RESISTOR

: LF-8L MICRO INDUCTOR TANTALUM CAPACITOR : TA

:PS STYROL :PP POLYPROPYLENE

> : PT MYLAR : MPS METALIZED POLYESTER MPP METALIZED

: ALB BIPOLAR


: ALT HIGH TEMPERATURE : ALR HIGH RIPPLE


Note: The symbol display is on the component side. The components identified by shading and mark 🛕 are critical for safety. Replace only with part number


The symbol indicate fast operating fuse. Replace only with fuse of same rating as maked.


Note: Les composants identifiés per un tramé et une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une piéce portant le numéro spécifié.


Le symbole indique une fusible a action rapide. Doit etre remplacee par une fusible de meme yaleur, comme maque.

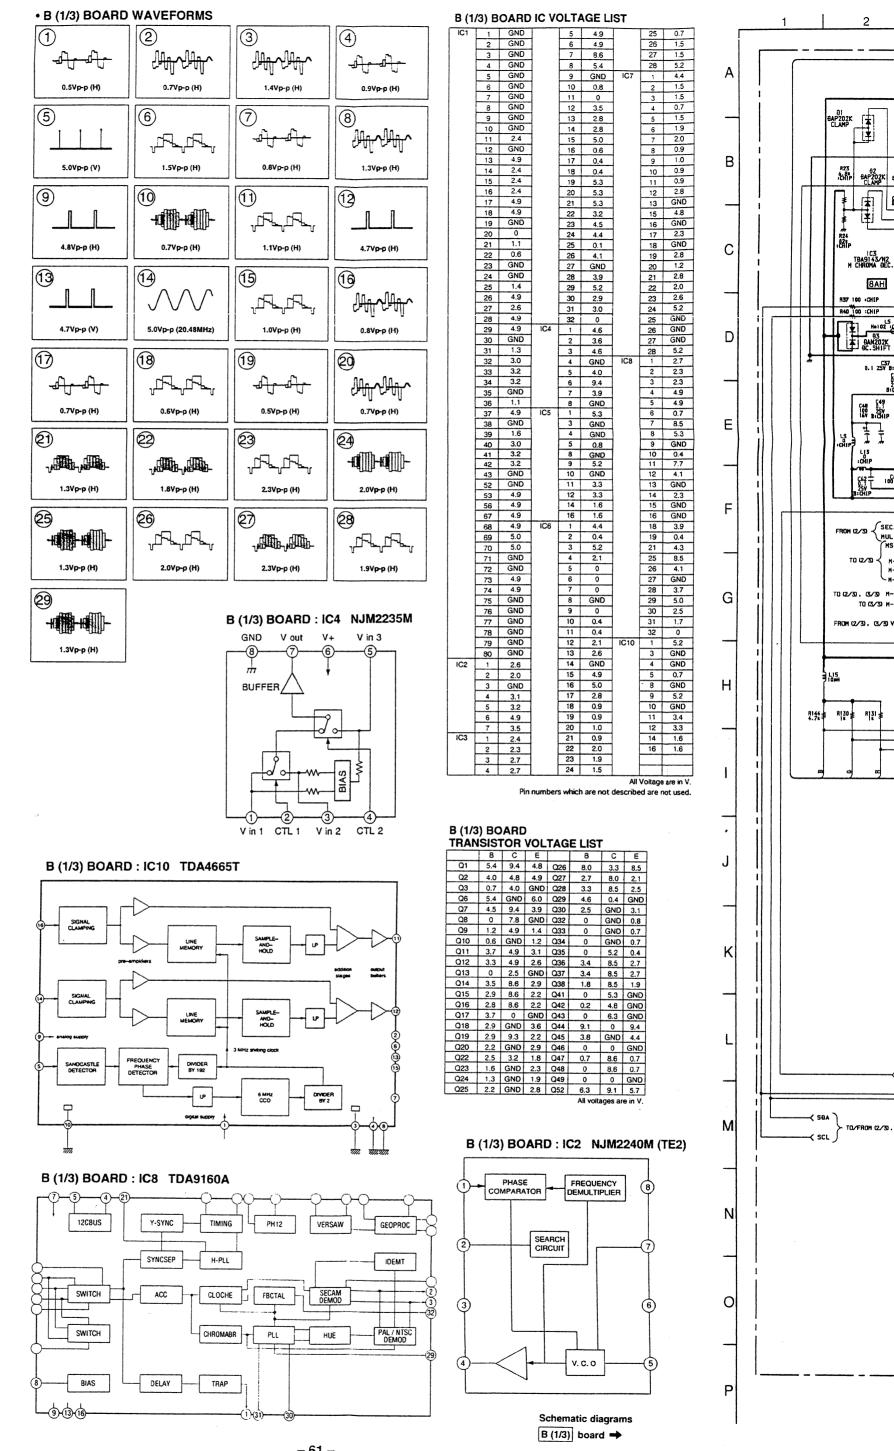


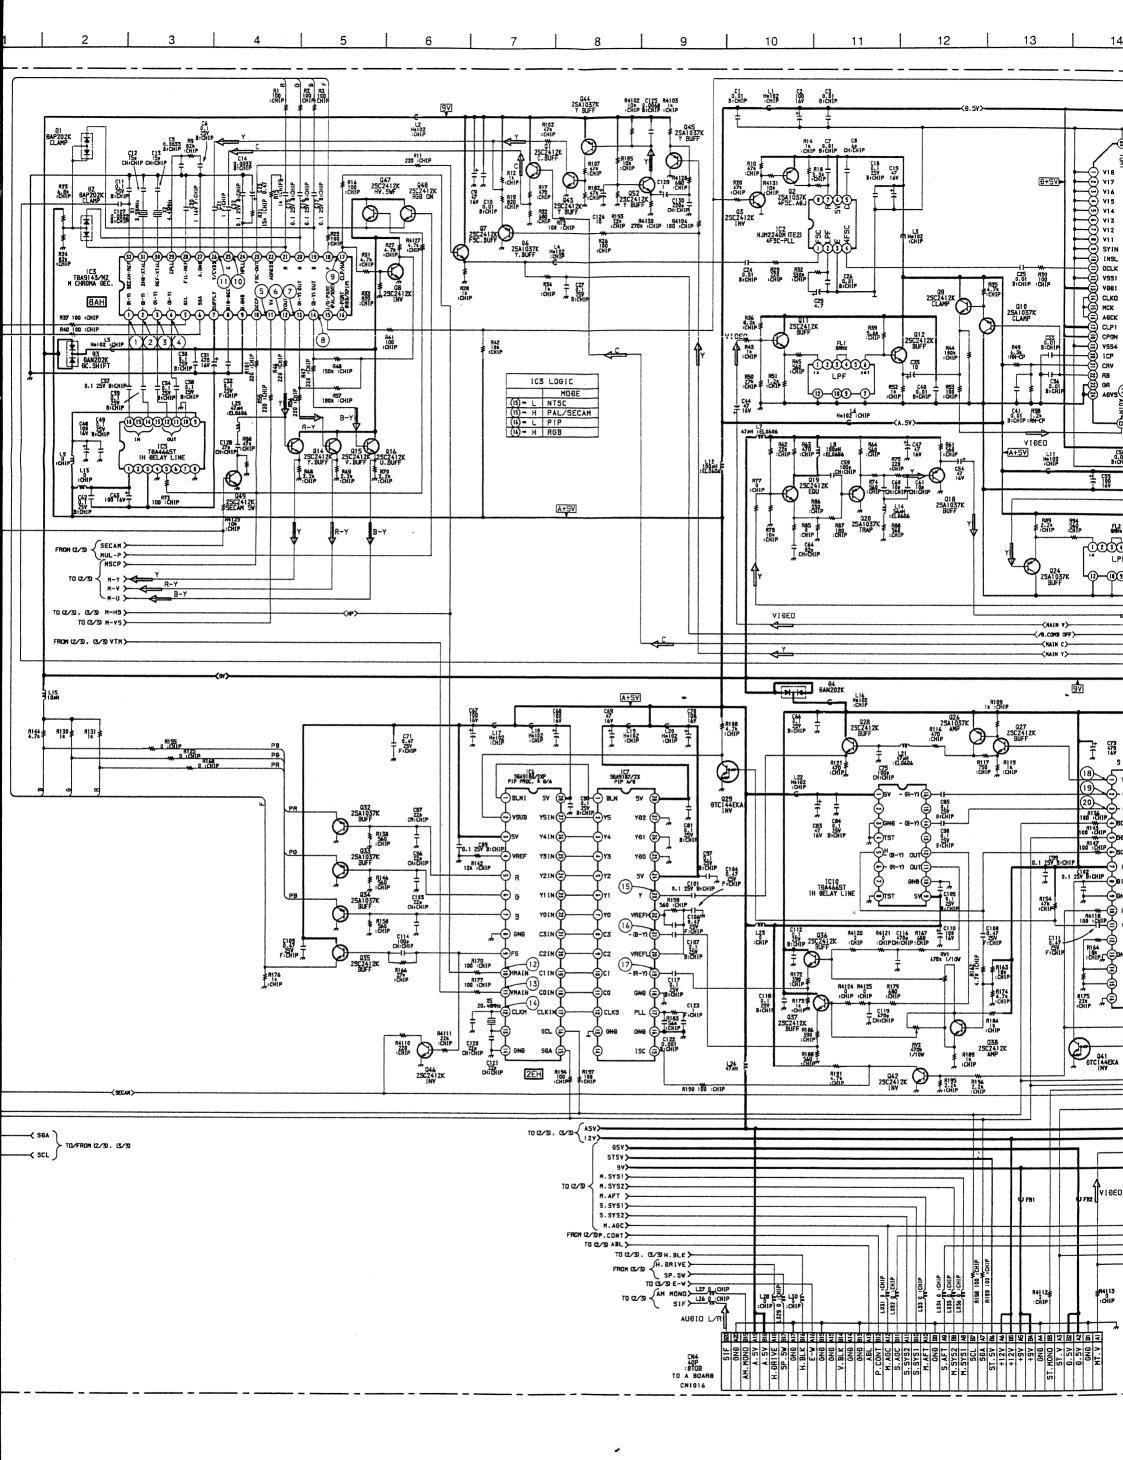

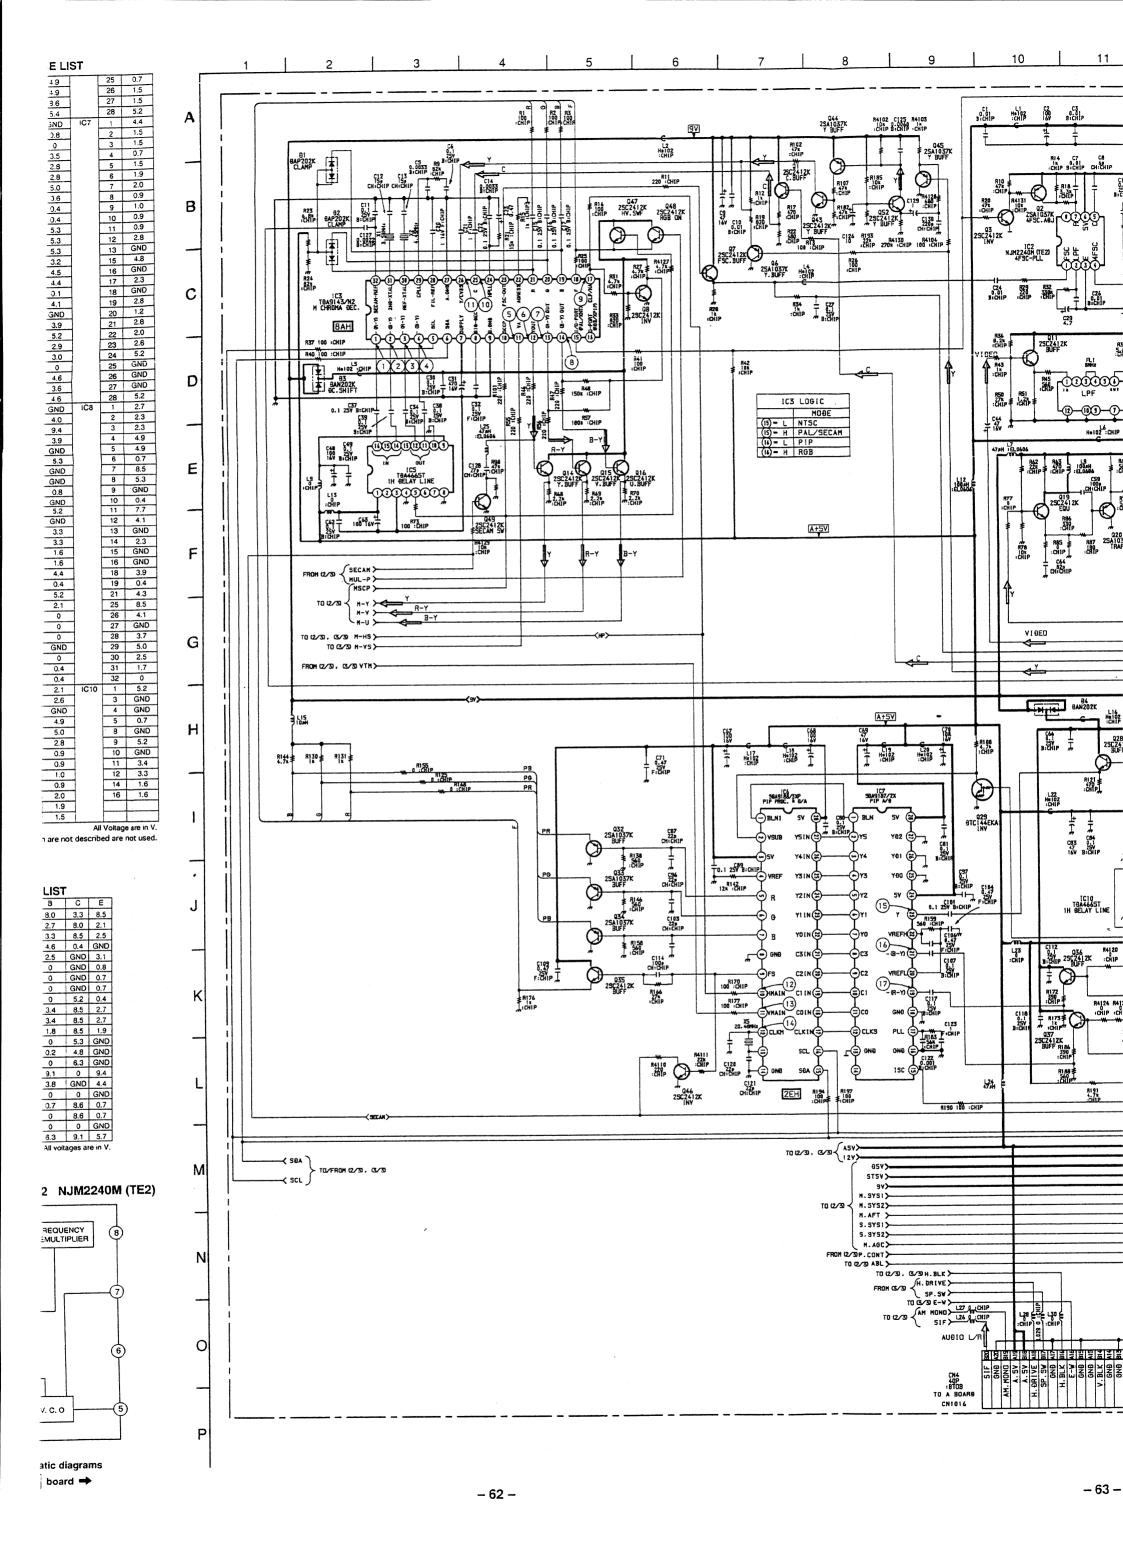

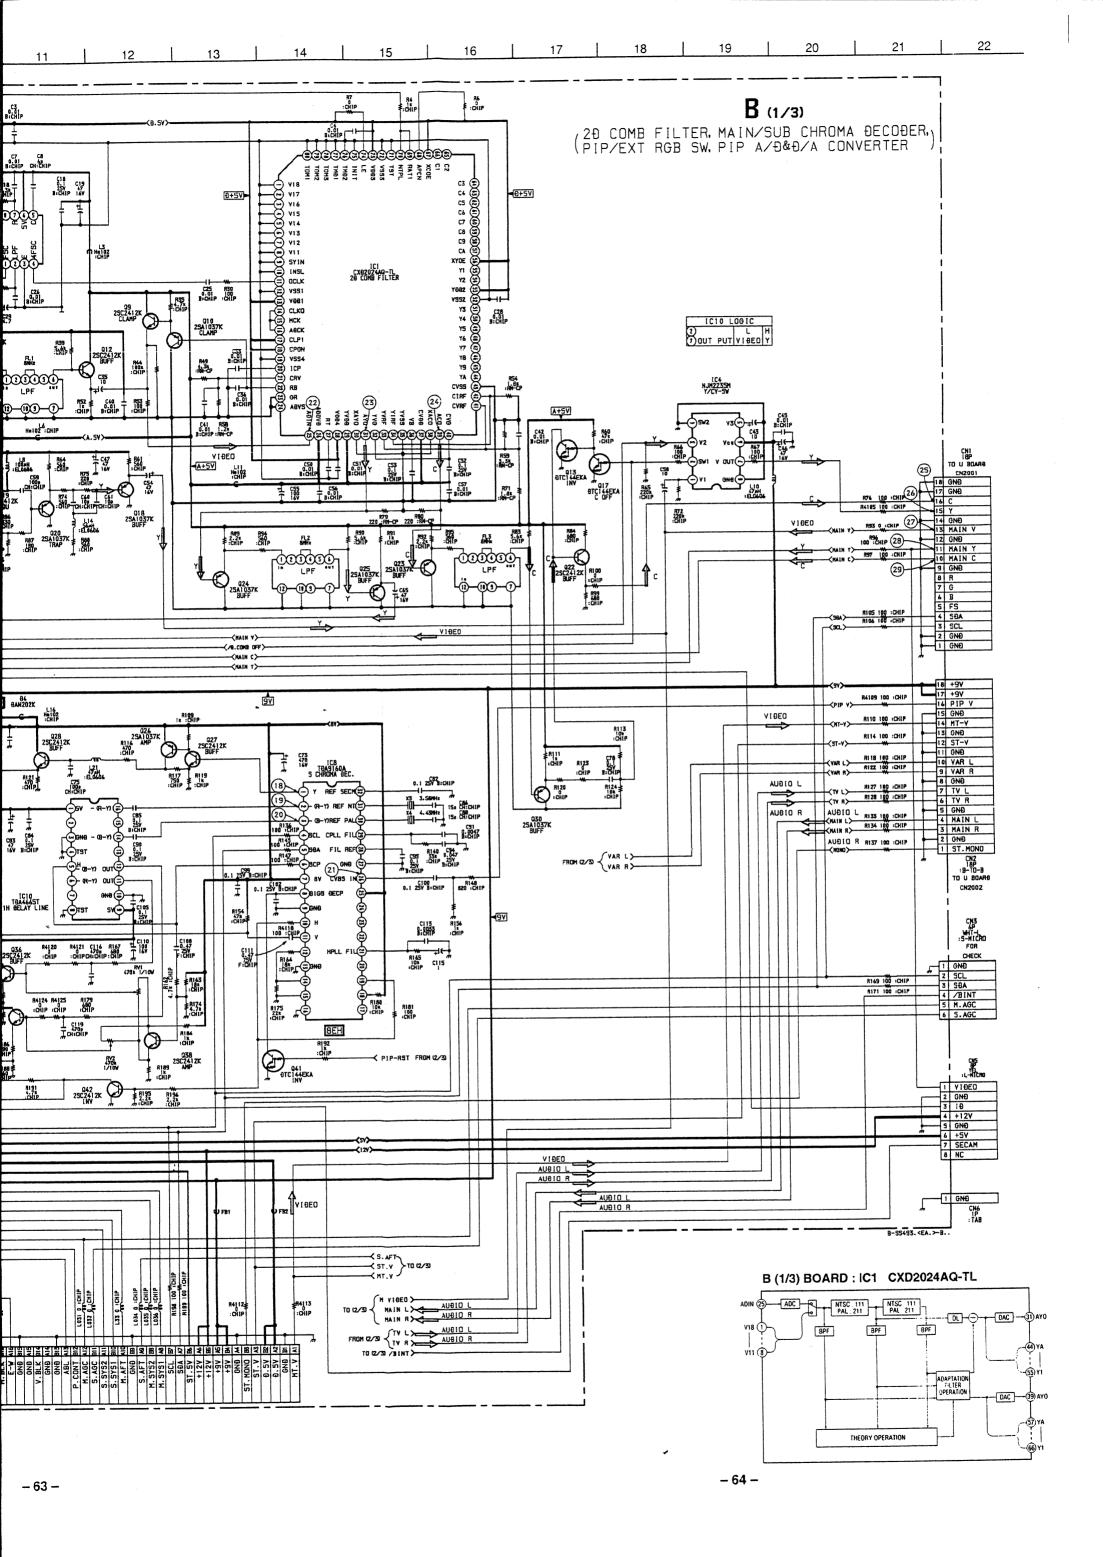


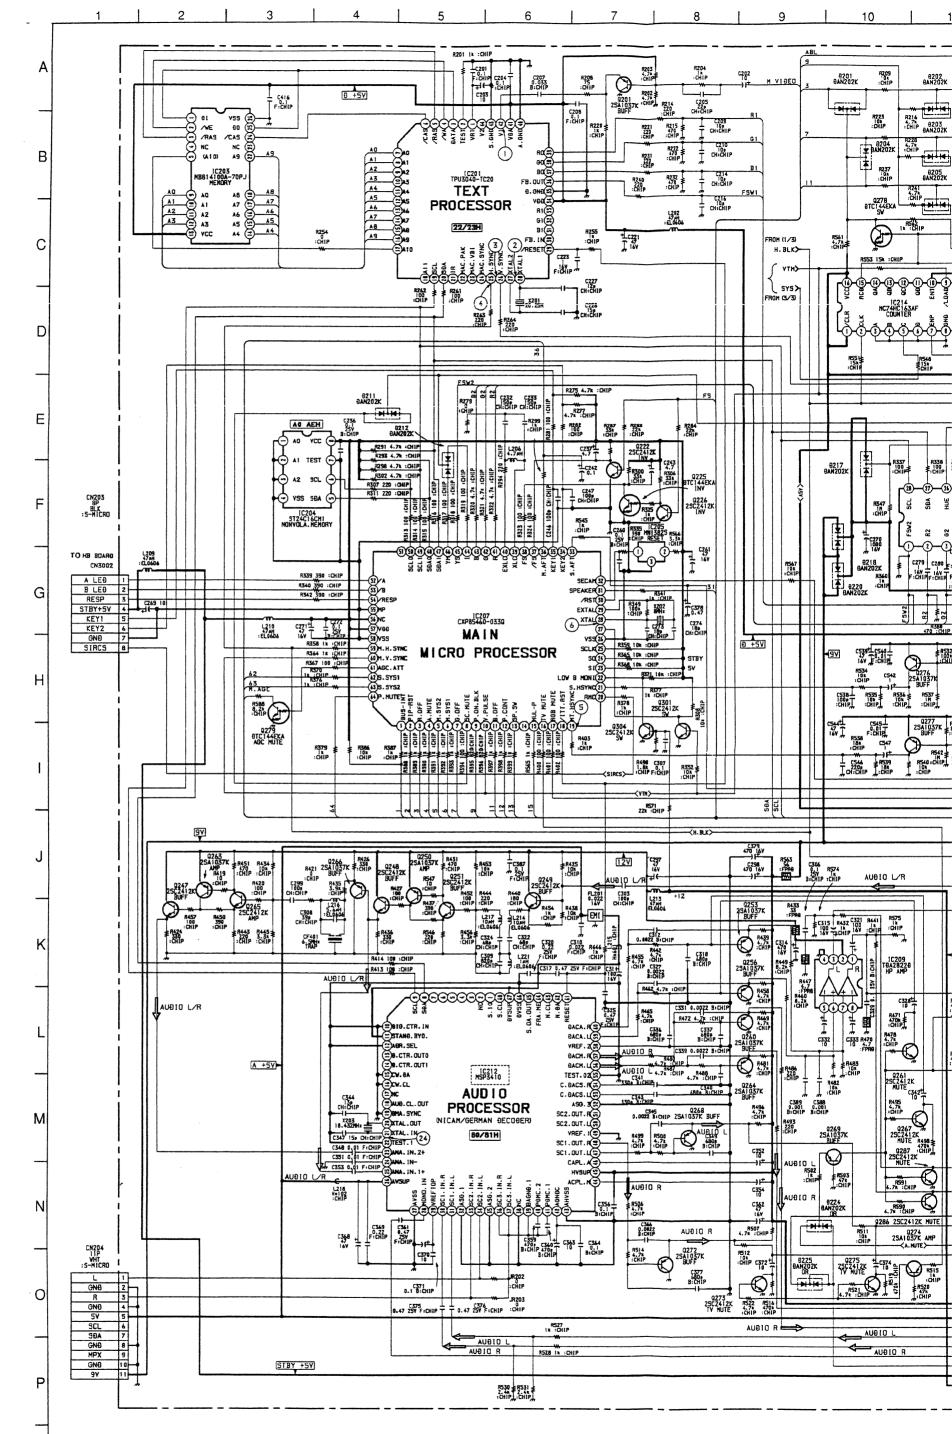

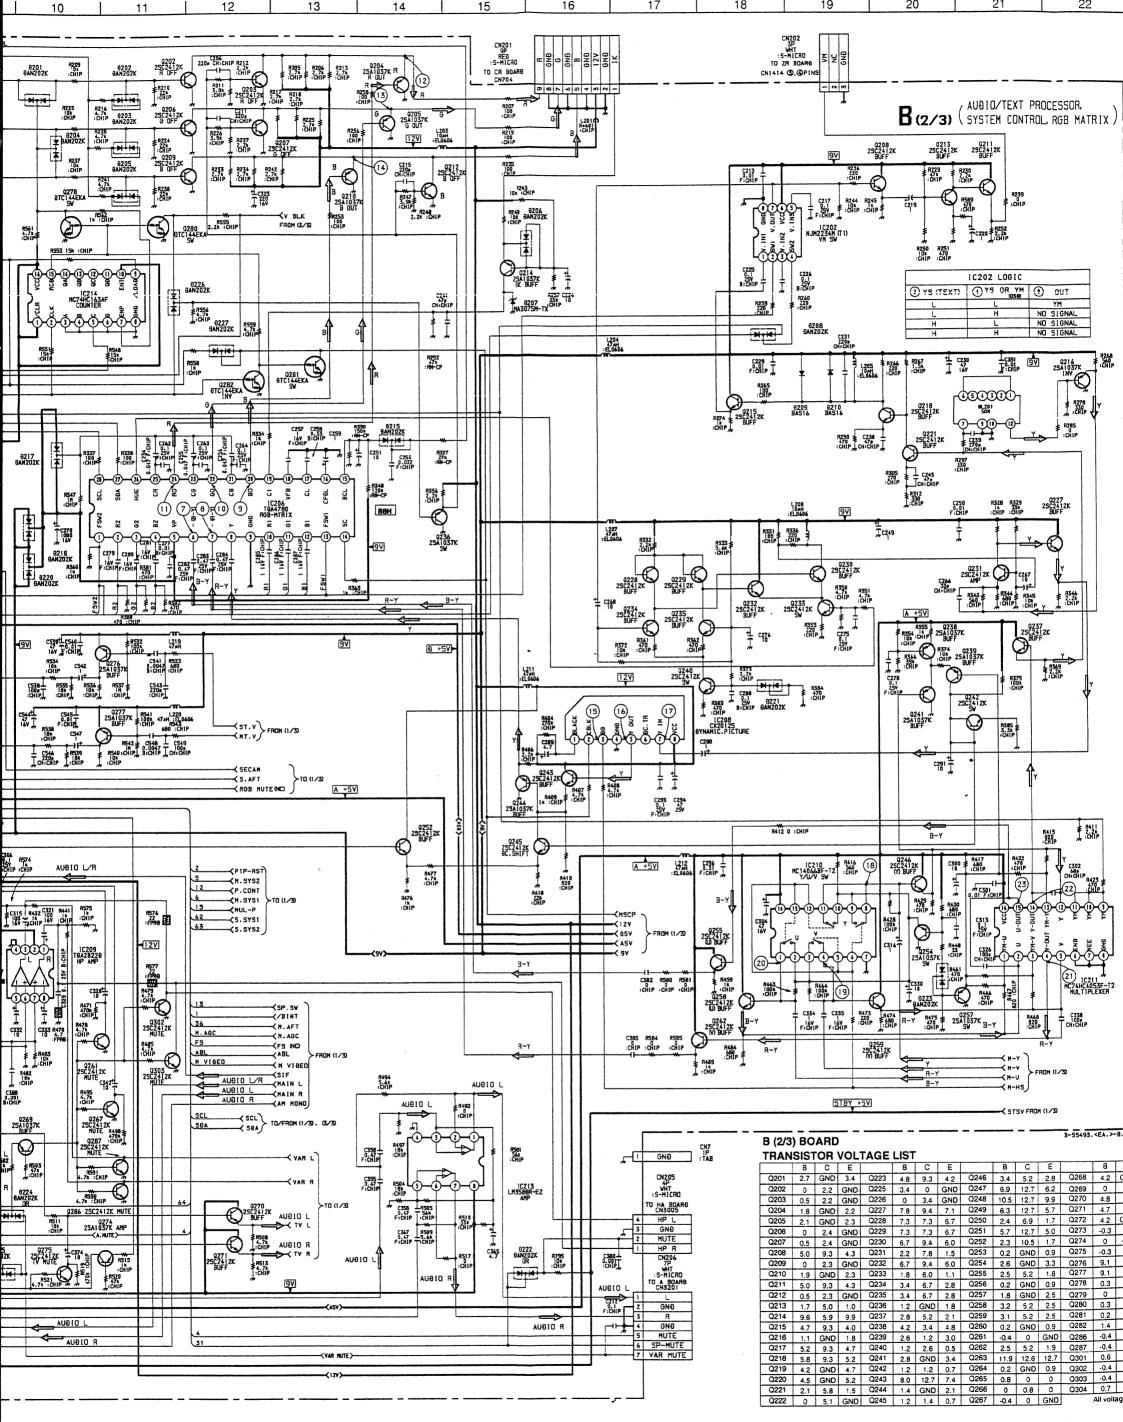

17

16

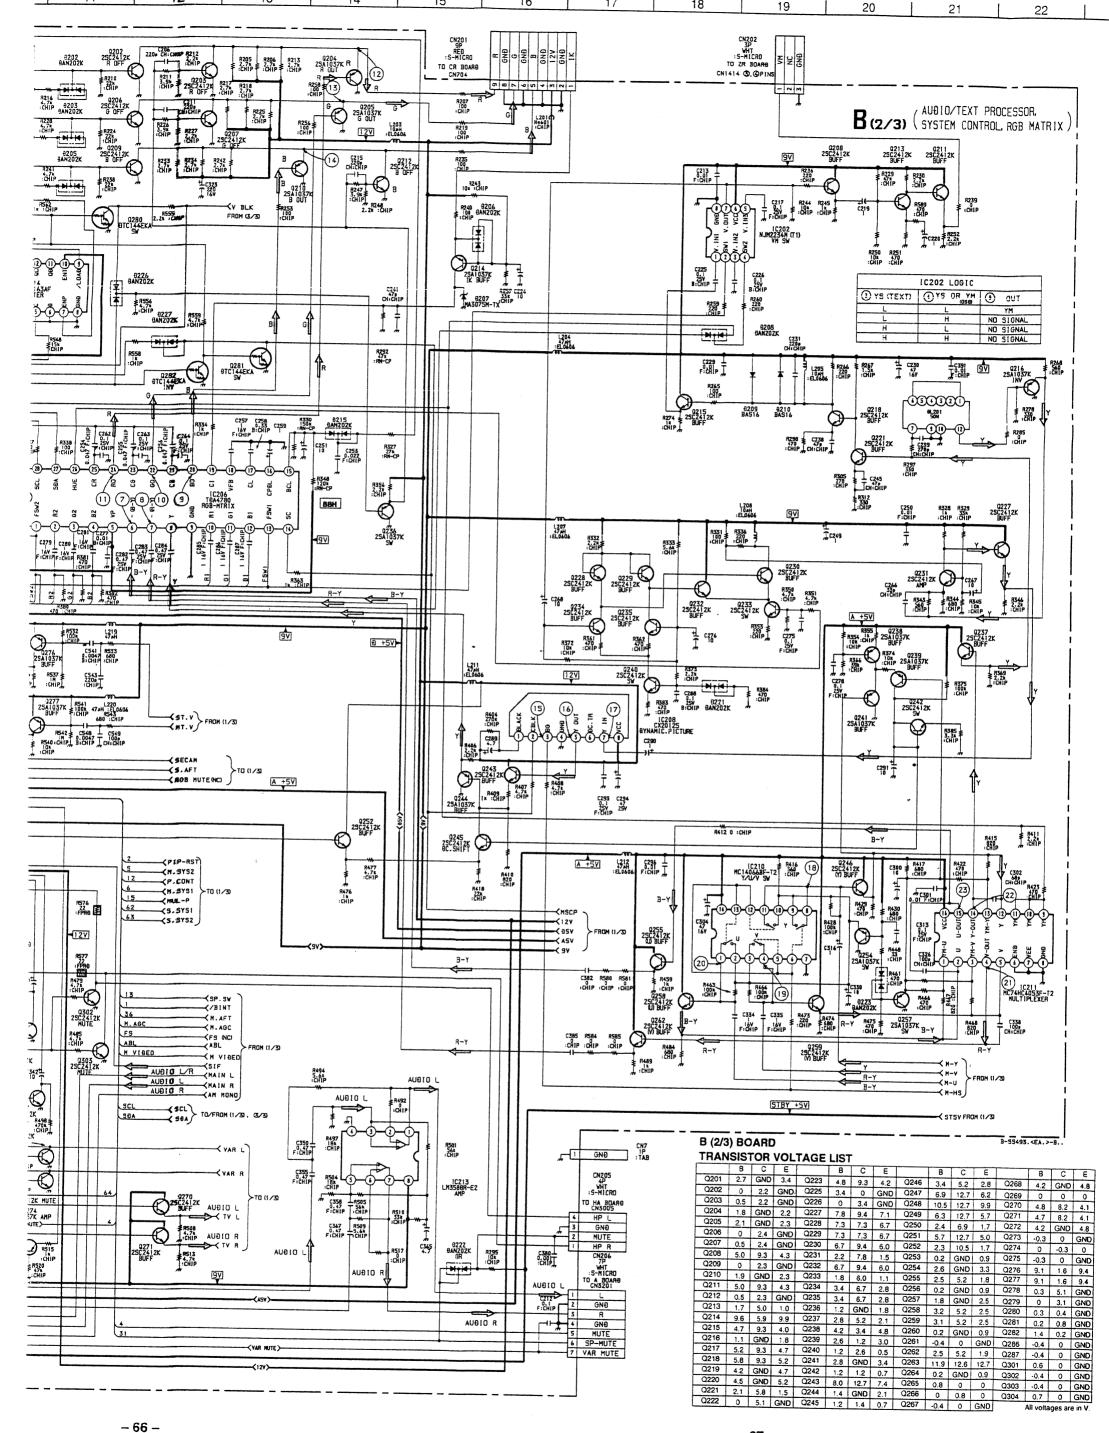

IC201	1	3.1		3	GND		43				_
,020,	2	0	IC206	1	0	-	43	0	-	11	+
	3	0.2	7	2	5.4	-	45	<del></del>	-	12	+
	4	5.2	1	3	5.4	-	46	0	$\dashv$	15	+
	5	5.1	1	4	5.4	-	47	4.9	-	16	+
	6	5.2	1	5	8.6	1	48	5.2	$\dashv$	19	+
	7	2.7	1	6	4.3	┥	49	4.9	-	20	+
	8	2.7	1	7	4.3	1	50	5.2	-	21	+
	9	2.7	1	8	4.1	1	52	4.0	-	22	+
	10	2.7	1	9	GND	1	53	4.0	-		+-
	11	2.7	1	10	5.4	1	54	4.0	4	24	+
	12	2.6	1	11	5.4	1	55	GND	-		+
	13	2.6	1	12	5.4	1	56	5.2	┥	26	+
	14	2.7	1	13	0	1	57	5.2	$\dashv$	27	+
	15	2.7	1	14	0.8	1	58	0	-	29	+-
	16	2.6	1	15	4.5	1	59	0.4	-	30	+-
	17	2.6	1	16	5.1	1	60	0.6	⊣	31	+-
	19	4.9	1	17	5.5	1	61	0	-	32	١,
	20	4.9	1	18	2.2	1	62	0	7	33	+
	25	0.4	1	19	5.8	1	63	0	1	34	+-
	26	0.6	]	20	1.9	1	64	0	1	35	1
	27	2.8		21	3.2	IC208	1	9.3	7	36	+-
	28	*		22	2.1	]	2	0.6	7	37	$\vdash$
	29	5.2		23	3.2		3	0.3	1	38	1
	34	5.2		24	1.8	]	4	GND	7	39	
	35	GND		25	3.0	]	5	8.0	7	40	
	36	0		26	3.5	!	Ģ	9.5		41	
}	37	0		27	5.0		7	6.1		42	
1	38	0		28	4.8		8	12.7		43	0
}	39	0	IC207	1	5.2	IC209	1	6.5		44	
}	40	GND		2	0	1	2	12.4	1	45	
}	41	5.2		3	0		3	6.6	1	46	
}	42	1.7	}	4	0		4	GND	4	47	
IC202	43	GND	1	5	0		5	1.4	4	48	_
-0202	2	5.7	}	6	0		6	0.9	-	49	G
}	3	5.8	}	7	0		7	0.9	4	52	G
ŀ	4	0	}	8 9	0	IC210	8	3.2	4	53	<u> </u>
1	5	5.7	H	10	0	10210	1	3.2	4	54	
- 1	6	9.3	ŀ	11	0.6		2	3.3	ł	55	G
r	7	5.0	-	12	5.1		3	3.1	1	56	-
1	8	GND	H	13	0		5	0.4	1	57	G
C203	1	0.2	h	15	0		6	0.4	1	58	9
- 1	2	5.2	ŀ	16	-		7	GND		59 60	
- 1	3	5.1	- t	17	0		8	3.4		61	
	5	0	r	18	5.2		9	3.3		66	G
Γ	9	2.7		19	0.2	1	10	3.3		67	
	10	2.7	r	20	5.2	1	11	3.4	IC213	1	1
	11	27	-	21	0.2			0.4			

26 GND

28 2.7

29 2.6

30 5.2

33 0 34 5.2

5.2 36 2.6 37 5.2

0

0

21 0.2

22

23 0

24

25 5.2

31 0

32

38 0

41

11 12

13 0.4

14

3

4

9

10

11

13 2.6

15 2.5

6 GND

7 GND

8 GND

14 2.8

8 5.0

0

5.2

0.4

2.5

2

4 GND

5 1.2

7 1.2

8 8.2

3 GND

4 GND

6 GND

9 0.5

10 5.2


15

16

5.2


0

• B (2/3) BOARD WAVEFORMS

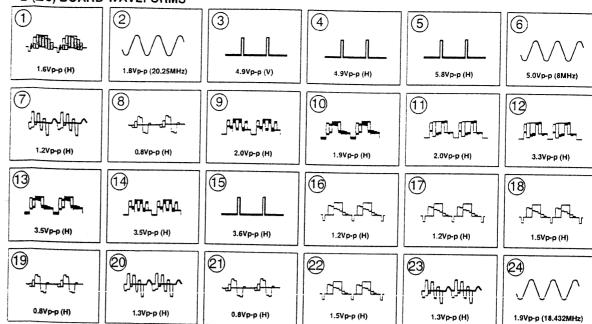

39 3.8 40 2.8 IC212 0 4.9 9 10 GND All Volta Pin numbers which are not described are not used.

B (2/3) BOARD : IC206 TDA4780

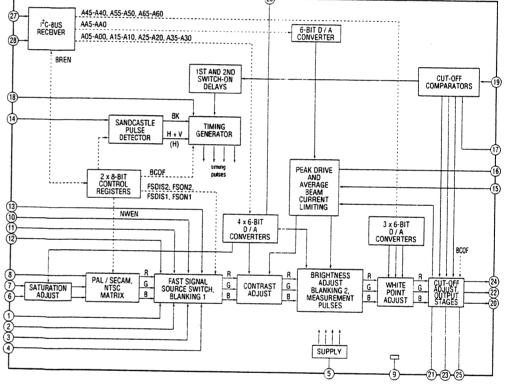

### B (2/3) BOARD : IC214 MC74HC163AF RIPPLE CARRY OUTPUT OUTPUTS о<sub>р</sub> RIPPLE OA oB $\circ_{\mathsf{C}}$ ENABLE OUTPUT LOAD ENABLE CLEAR CLOCK ENABLE GND ο,

DATA INPUTS

16 2.6

24 5.2

25 0.2

26 GND

1 GND

2 GND

3 GND

4 GND

6 5.2 7 GND

1 5.2

5.2

5.2

2.6

12


13 5.2

15 2.6

17


18 2.7

# B (2/3) BOARD : IC202 NJM2234M

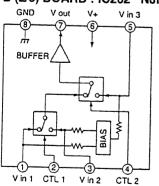


C E
SND 4.8
0 0 0
8.2 4.1
SND 4.8
0 GND
0.3 0 GND
1.6 9.4
1.6 9.4
1.6 9.4
1.6 9.4
0.1 GND
0.4 GND
0.4 GND
0.5 GND
0.5 GND
0.6 GND
0.7 GND
0.8 GND
0.9 GND
0.9 GND
0.1 GND
0.9 GND
0.1 GND
0.1 GND
0.1 GND
0.2 GND
0.3 GND
0.3 GND
0.4 GND
0.5 GND
0.5 GND
0.5 GND
0.6 GND
0.6 GND
0.7 GND

## B (2/3) BOARD : IC208 CX20125

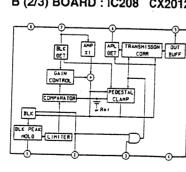


### B (2/3) BOARD : IC211 MC74HC4053F-T2

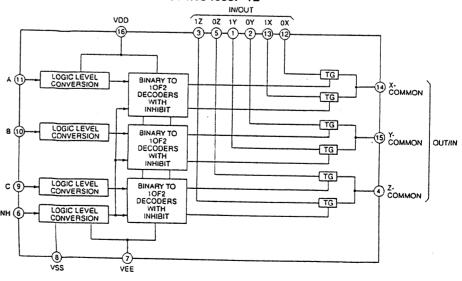


Schematic diagrams ← B (2/3) board


Schematic diagrams B (3/3) board →

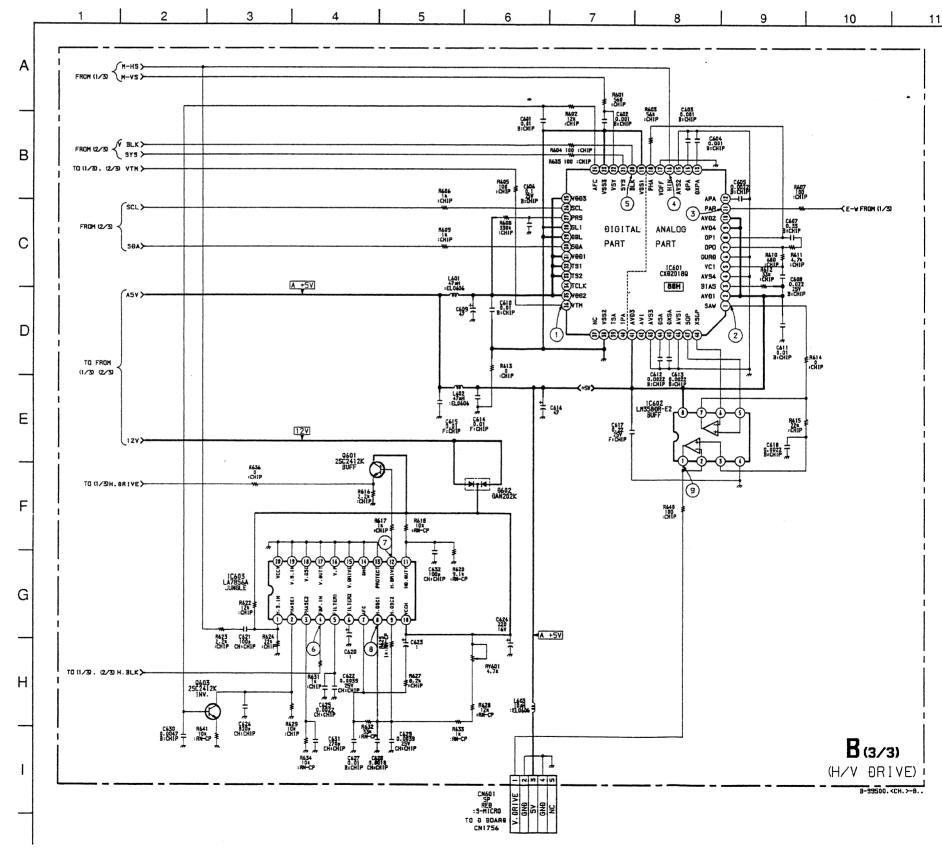

### D BOARD \* D1953 8-10 DIODE D1501 D1954 C-10 D1502 8-8 D-4 D-2 8-10 8-10 IC1501 IC1601 8-8 D1505 IC1602 D1551 IC1701 IC1702 A-6 D1553 8-10 E-7 C-9 C-5 C-6 E-8 IC1801 IC1802 IC1803 D1601 E-4 D1602 E-5 D1603 IC1804 IC1805 IC1806 D1604 D-1 D1803 C-9 D1812 B-5 IC1807 IC1808 E-5 D-5 E-10 D1814 B-5 D1825 D-6 IC1809 D1826 IC1931 IC1932 C-7 C-10 D-7 D1931 C-7 D1932 TRANSISTOR Q1501 8-8 Q1502 8-9 C-7 C-7 D1934 Q1501 D1935 C-7 Q1502 C-6 Q1551 D1936 C-10 Q1552 C-10 B-10 Q1701 D1942 D-7 D-6 C-10 B-5 D-6 Q1801 D1945 C-10 Q1802 D-10 Q1803 D1947 D-10 Q1804 C-7 Q1805 D1951

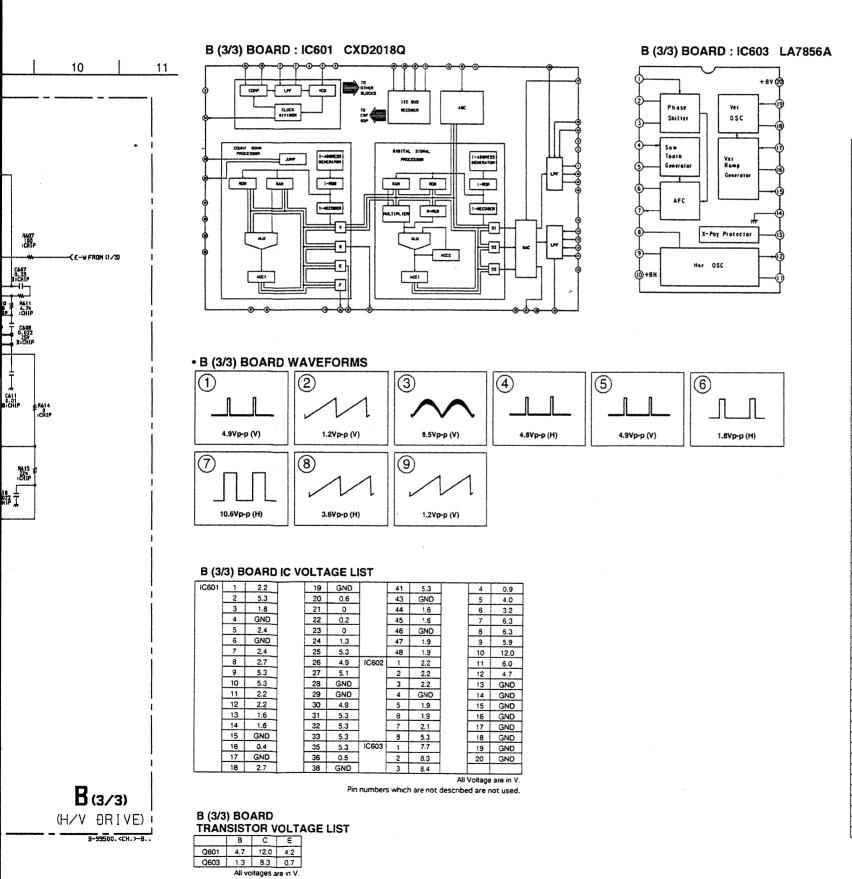

	ARD		0		1 -	00	
	IODE	*	Q11	F-3	@	Q232	D-6
D1	F-4	0	Q12	F-10	0	Q233	D-8
D2	F-4	0	Q13 Q14	G-4 E-4	0	Q234	D-6
D3	E-9 G-10	0	Q15	E-4	@	Q235 Q236	D-6 F-8
D201	G-8	0	Q16	E-3	0	Q237	E-6
D202	G-8	<b>®</b>	Q17	G-4	<b>②</b>	Q238	E-8
D203	G-8	0	Q18	G-10	0	Q239	E-8
D204	G-8	Õ	Q19	F-10	Õ	Q240	D-6
D205	G-8	Õ	Q20	G-10	Õ	Q241	E-6
D206	F-6	Õ	Q22	G-10	Õ	Q242	D-8
D207	F-6	0	Q23	G-4	@	Q243	D-9
D208	G-6	•	Q24	G-4	2	Q244	E-8
D209	E-6	•	Q25	G-4	②	Q245	D-8
D210	E-6	•	Q26	G-10	•	Q246	E-5
D211	B-5	•	Q27	G-11	•	Q247	A-10
D212	B-9	•	Q28	G-11	0	Q248	A-11
D215	G-5	•	Q29	F-11	1	Q249	B-11
D217	F-7	0	Q30	G-10	0	Q250	A-12
D218	E-6	0	Q32	F-11	0	Q251	A-12
D220	E-6	0	Q33	E-11	0	Q252	D-8
D221	D-6	0	Q34	E-11	0	Q253	B-11
D222 D223	A-10 D-8	0	Q35 Q36	E-3 F-2	@	Q254	D-9
D224	C-1	0	Q37	F-2	@	Q255 Q256	E-5 B-11
D225	C-2	0	Q38	F-2	0	Q257	D-8
D226	D-4	9	Q41	G-11	② ①	Q258	D-4
D227	E-4	0	Q42	G-12	0	Q259	E-5
D602	D-10	0	Q43	G-8	.0	Q260	C-3
D603	D-11	0	Q44	G-8	0	Q261	C-11
	IC		Q45	G-8	Õ	Q262	E-5
IC1	G-4		Q46	E-2	<u>@</u>	Q263	A-11
IC2	G-9		Q47	E-9	ŏ	Q264	C-2
IC3	F-4,F-9		Q48	E-9	Õ	Q265	A-11
IC4	G-11		Q49	E-9	0	Q266	A-11
IC5	E-4		Q52	G-8	1	Q267	8-11
IC6	F-2		Q201	B-8	1	Q268	8-11
IC7	F-2		Q202	G-8	1	Q269	C-12
IC8	G-2,G-11		Q203	G-6	2	Q270	B-2
IC10	F-3		Q204	G-6	3	Q271	B-2
IC201	B-6		Q205	G-6	<b>②</b>	Q272	B-11
IC202	G-6		Q206	G-8	0	Q273	B-12
IC203	A-6		Q207	G-6	0	Q274	B-12
IC204	A-8		Q208	G-7	0	Q275	B-12
IC205	C-9 F-6,F-8		Q209 Q210	G-8 G-8	0	Q276 Q277	C-8 C-9
IC207	B-5		Q211	G-7	0	Q278	D-9
IC208	D-5,D-9		Q212	G-6	@	Q279	8-9
IC209	B-3		Q213	G-7	0	Q280	D-4
IC210	D-5		Q214	F-6	3	Q281	E-4
IC211	E-5		Q215	D-7	Õ	Q282	D-4
IC212	B-2		Q216	D-8	0	Q286	C-2
IC213	8-10		Q217	D-6	@	Q287	C-2
IC214	D-4		Q218	E-7	Õ	Q301	B-9
IC601	D-2		Q219	D-7	0	Q302	A-11
IC602	E-2		Q220	D-6	3	Q303	A-11
IC603	E-3,E-10		Q221	E-6	2	Q304	C-10
	ISISTOR	*	Q222	8-8	0	Q601	E-11
Q1	F-9	0	Q223	D-6	@	Q602	D-11
Q2	G-9	•	Q225	D-9	0	VAF	RIABLE
Q3	G-9	0	Q226	8-5	3		ISTOR
Q6	F-8	•	Q227	D-8	0	RV1	F-2,F-12
Q7	F-9	0	Q228	D-6	2	RV2	F-2,F-12
Q8	F-10	0	Q229	D-6	3	RV601	D-3,D-10
Q9	F-10	0	Q230	D-8	0		

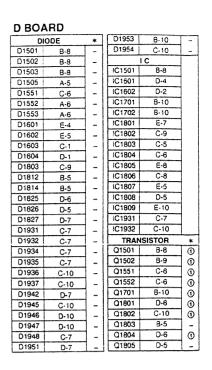

Α

В

С

D

Ε

Α

В

С

D

Ε


F


G

Η

В

CJ59

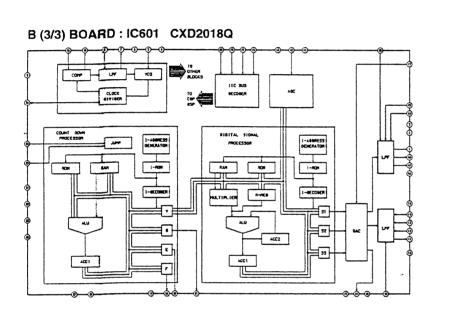

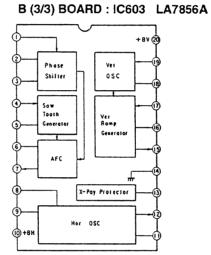

### • B (3/3) BOARD WAVEFORMS 4 (5) 2 3 6 1 4.8Vp-p (H) 1.2Vp-p (V) 4.9Vp-p (V) 0.5Vp-p (V) 4.9Vp-p (V) 1.8Vp-p (H) 7 8 9 1.2Vp-p (V) 10.6Vp-p (H) 3.6Vp-p (H)

B (3	/3) B	OARD	IC V	OLT	AGE LI	ST				
IC601	1	2.2		19	GND		41	5.3	4	0.9
}	2	5.3		20	0.6	]	43	GND	5	4.0
	3	1.8		21	0	İ	44	1.6	6	3.2
1	4	GND		22	0.2		45	1.6	7	6.3
	5	2.4		23	0		46	GND	8	6.3
	6	GND		24	1.3		47	1.9	9	5.9
1	7	2.4		25	5.3		48	1.9	10	12.0
	- 8	2.7		26	4.9	IC602	1	2.2	11	6.0
	9	5.3		27	5.1		2	2.2	12	4.7
	10	5.3		28	GND		3	2.2	13	GND
	11	2.2		29	GND		4	GND	14	GND
	12	2.2		30	4.9		5	1.9	15	GND
	13	1.6		31	5.3		6	1.9	16	GND
	14	1.6		32	5.3		7	2.1	17	GND


 $\label{eq:All Voltage are in V.} \mbox{Pin numbers which are not described are not used.}$ 


### B (3/3) BOARD TRANSISTOR VOLTAGE LIST


	8	C	E							
Q601	4.7	12.0	4.2							
Q603	1.3	8.3	0.7							
	All voltages are in V.									


16 0.4 17 GND


D	IODE	*	Q11	F-3	@	Q232	D-6	Γ
D1	F-4	0	Q12	F-10	Õ	Q233	D-8	1
D2	F-4	Õ	Q13	G-4	@	Q234	D-6	
D3	E-9	Õ	Q14	E-4	@	Q235	D-6	
D4	G-10	•	Q15	E-4	@	Q236	F-8	
D201	G-8	0	Q16	E-3	0	Q237	E-6	
D202	G-8	0	Q17	G-4	@	Q238	E-8	
D203	G-8	_	Q18	G-10	-	Q239	E-8	1
D204	G-8	0	Q19	F-10	0	Q240		1
	G-8	0	Q20	G-10	0		D-6	1
D205		0			0	Q241	E-6	1
D206	F-6	•	Q22	G-10	0	Q242	D-8	1
D207	F-6	•	Q23	G-4	@	Q243	D-9	-
D208	G-6	<b>③</b>	Q24	G-4	@	Q244	E-8	-
D209	E-6	•	Q25	G-4	@	Q245	D-8	
D210	E-6	9	Q26	G-10	0	Q246	E-5	1
D211	B-5	•	Q27	G-11	0	Q247	A-10	1
D212	B-9	•	Q28	G-11	0	Q248	A-11	
D215	G-5	•	Q29	F-11	0	Q249	B-11	
D217	F-7	•	Q30	G-10	0	Q250	A-12	
D218	E-6	•	Q32	F-11	0	Q251	A-12	1
D220	E-6	•	Q33	E-11	0	Q252	D-8	1
D221	D-6	•	Q34	E-11	0	Q253	B-11	1
D222	A-10	(8)	Q35	E-3	@	Q254	D-9	1
D223	D-8	•	Q36	F-2	<u> </u>	Q255	E-5	1
D224	C-1	<u>o</u>	Q37	F-2	0	Q256	8-11	1
D225	C-2	9	Q38	F-2	3	Q257	D-8	1
D226	D-4	0	Q41	G-11	Õ	Q258	D-4	1
D227	E-4	9	Q42	G-12	0	Q259	E-5	1
D602	D-10	-	Q43	G-8	0	Q260	C-3	i
D603	D-10	0	Q44	G-8		Q261	C-11	1
0603		<u> </u>	Q45	G-8	0	Q262		1
IC1	IC C.				0		E-5	1
	G-4		Q46	E-2	@	Q263	A-11	1
IC2	G-9		Q47	E-9	0	Q264	C-2	
IC3	F-4,F-9		Q48	E-9	0	Q265	A-11	1
IC4	G-11		Q49	E-9	0	Q266	A-11	
IC5	E-4		Q52	G-8	0	Q267	B-11	
IC6	F-2		Q201	B-8	] ①	Q268	B-11	
IC7	F-2		Q202	G-8	0	Q269	C-12	
IC8	G-2,G-11		Q203	G-6	3	Q270	8-2	
IC10	F-3		Q204	G-6	②	Q271	B-2	
IC201	B-6		Q205	G-6	3	Q272	B-11	
C202	G-6		Q206	G-8	•	Q273	B-12	
C203	A-6		Q207	G-6	②	Q274	B-12	1
C204	A-8		Q208	G-7	1	Q275	B-12	
C205	C-9		Q209	G-8	0	Q276	C-8	
C206	F-6,F-8		Q210	G-8	0	Q277	C-9	1
C207	B-5		Q211	G-7	0	Q278	D-9	1
C208	D-5,D-9		Q212	G-6	0	Q279	B-9	1
C209	B-3		Q213	G-7	0	Q280	D-4	1
C210	D-5		Q214	F-6	9	Q281	E-4	1
C211	E-5		Q215	D-7	-	Q282	D-4	1
C212	B-2		Q216	D-8	0	Q286	C-2	1
C213	B-10		Q216	D-6	0	Q287		1
C214	D-4		Q217 Q218	E-7	@	Q287 Q301	C-2 B-9	1
					0			1
C601	D-2		Q219	D-7	0	Q302	A-11	
C602	E-2		Q220	D-6	@	Q303	A-11	ļ
C603	E-3,E-10		Q221	E-6	@	Q304	C-10	
	ISISTOR	*	Q222	8-8	0	Q601	E-11	
Q1	F-9	0	Q223	D-6	3	Q602	D-11	L
Q2	G-9	•	Q225	D-9	0	VAI	RIABLE	1
Q3	G-9	1	Q226	B-5	②	RES	SISTOR	1
Q6	F-8	1	Q227	D-8	0	RV1	F-2,F-12	1
Q7	F-9	Õ	Q228	D-6	<u>3</u>	RV2	F-2,F-12	1
Q8	F-10	õ	Q229	D-6	@	RV601	D-3,D-10	1
Q9	F-10	0	Q230	D-8	0		·	-
	F-4	_	Q231	D-8	0			

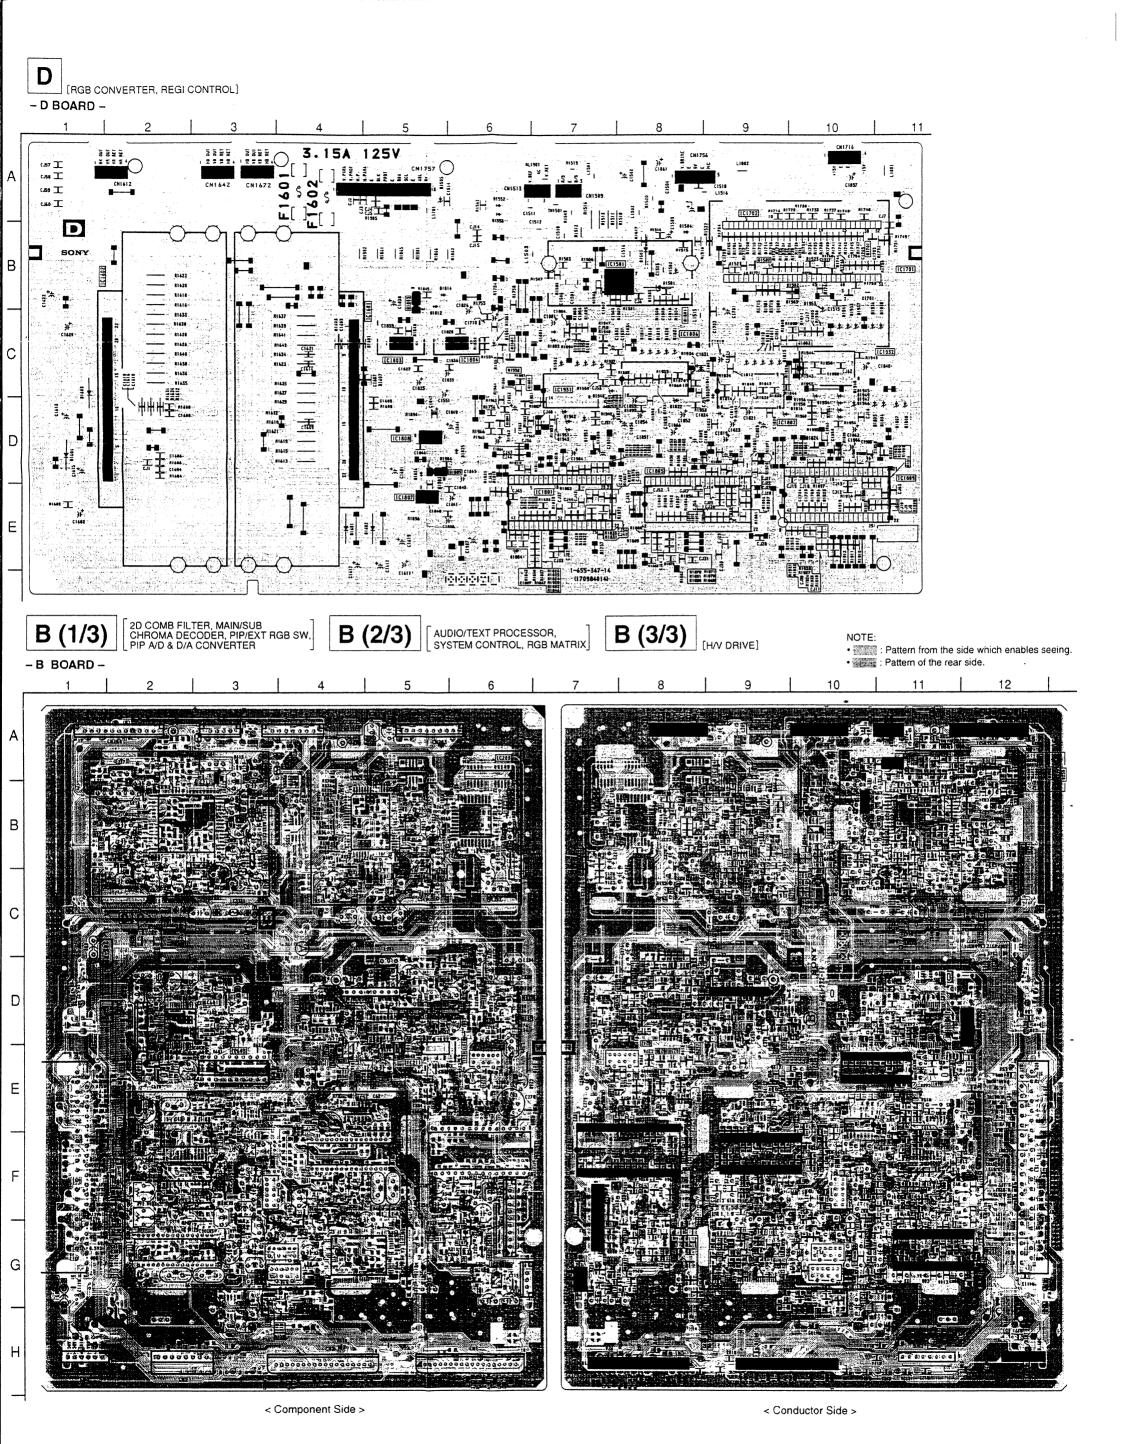


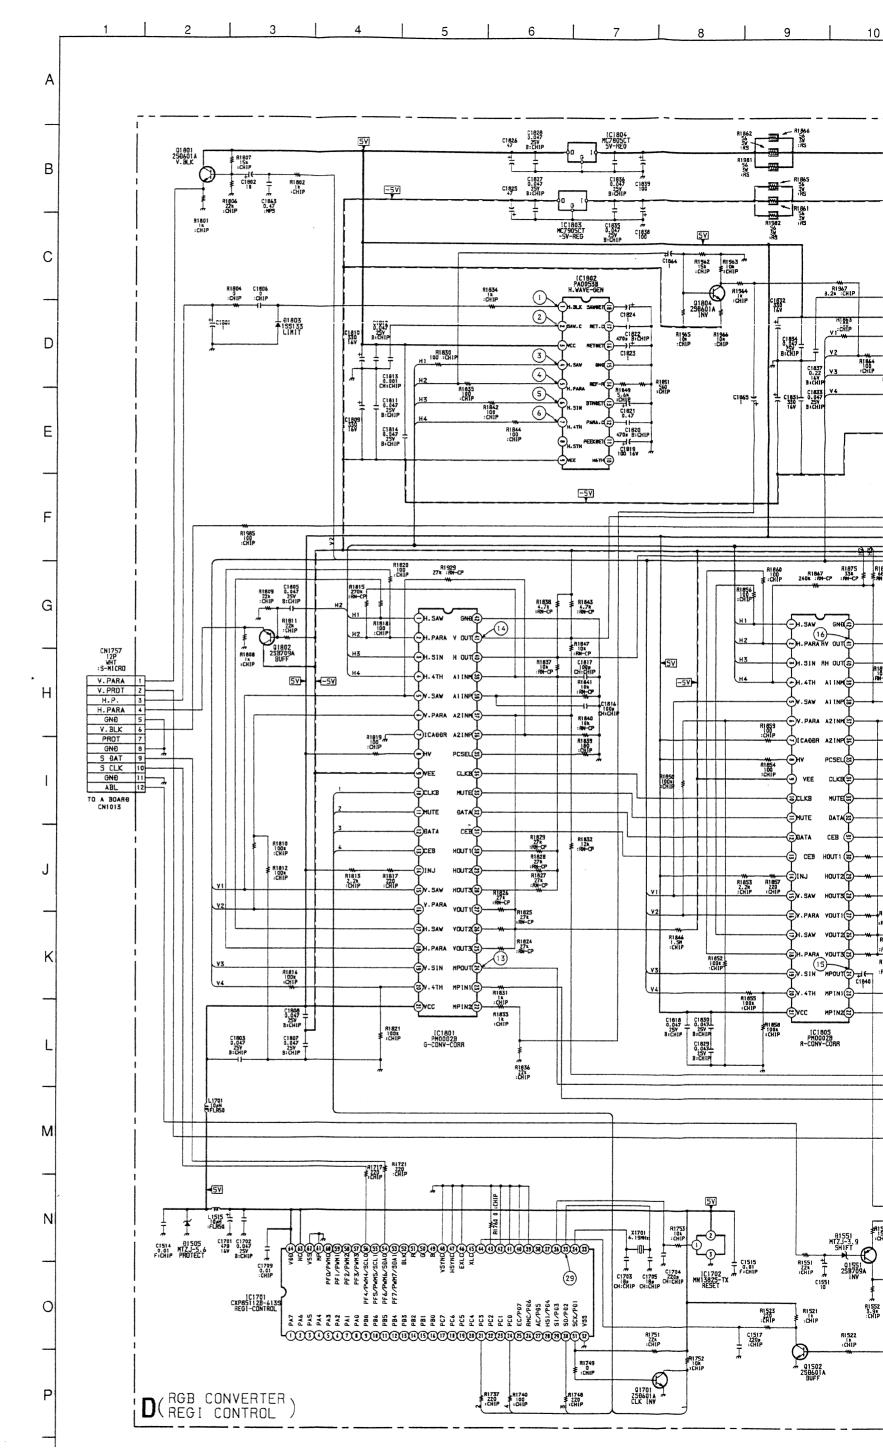


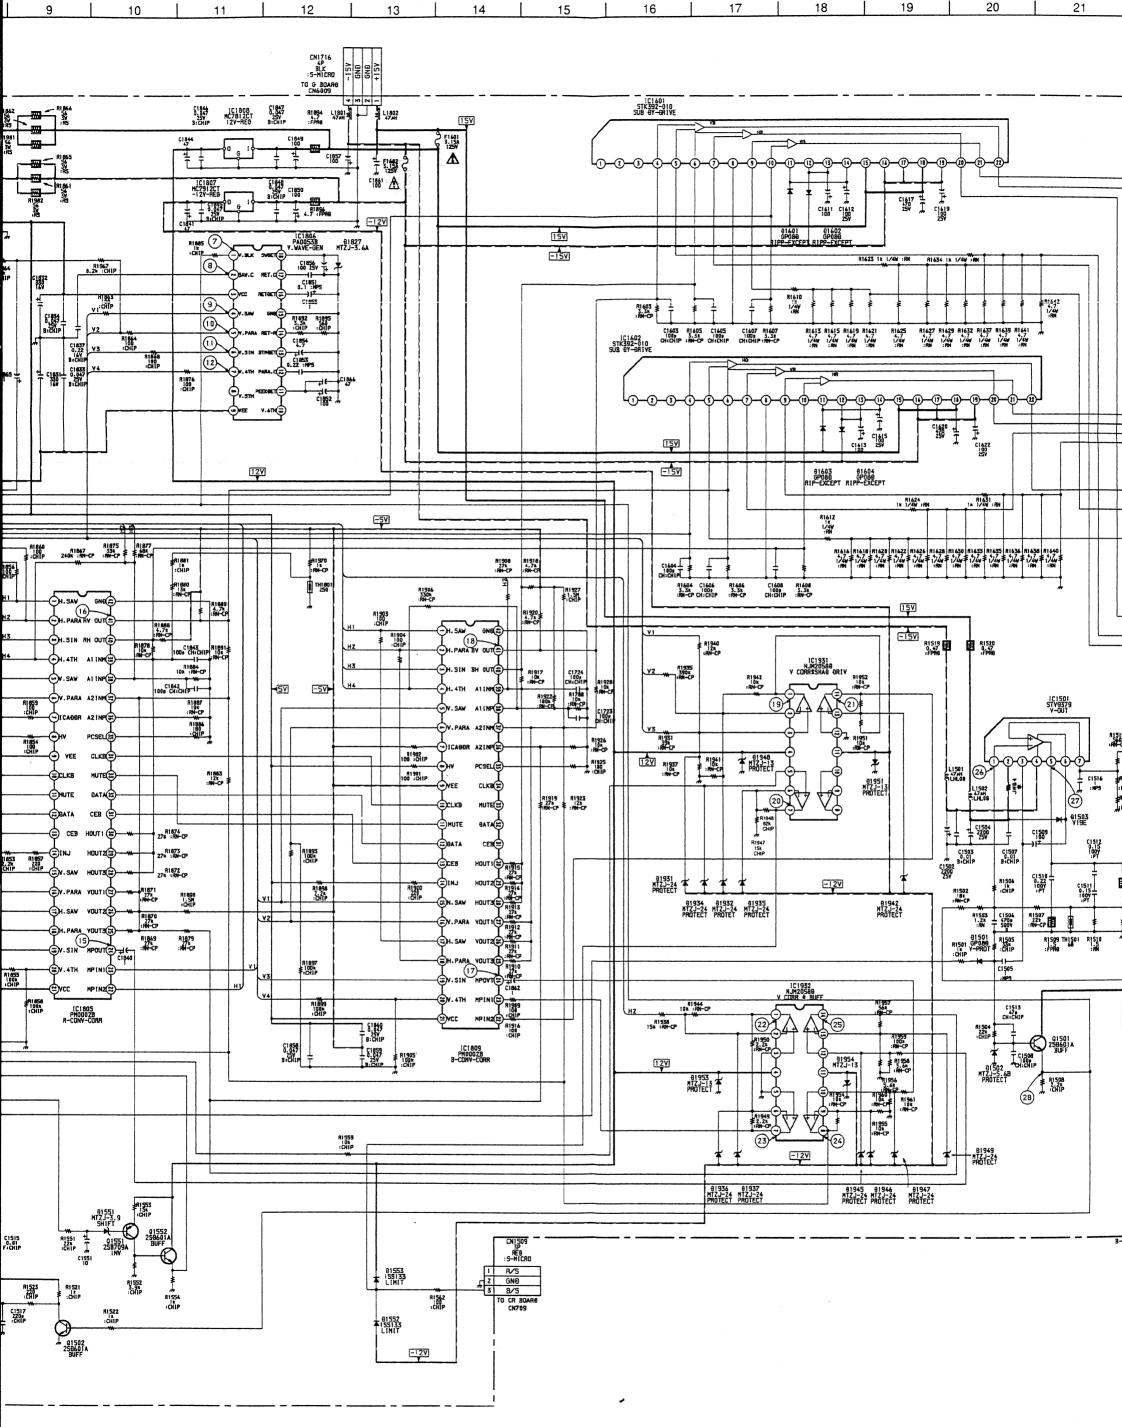


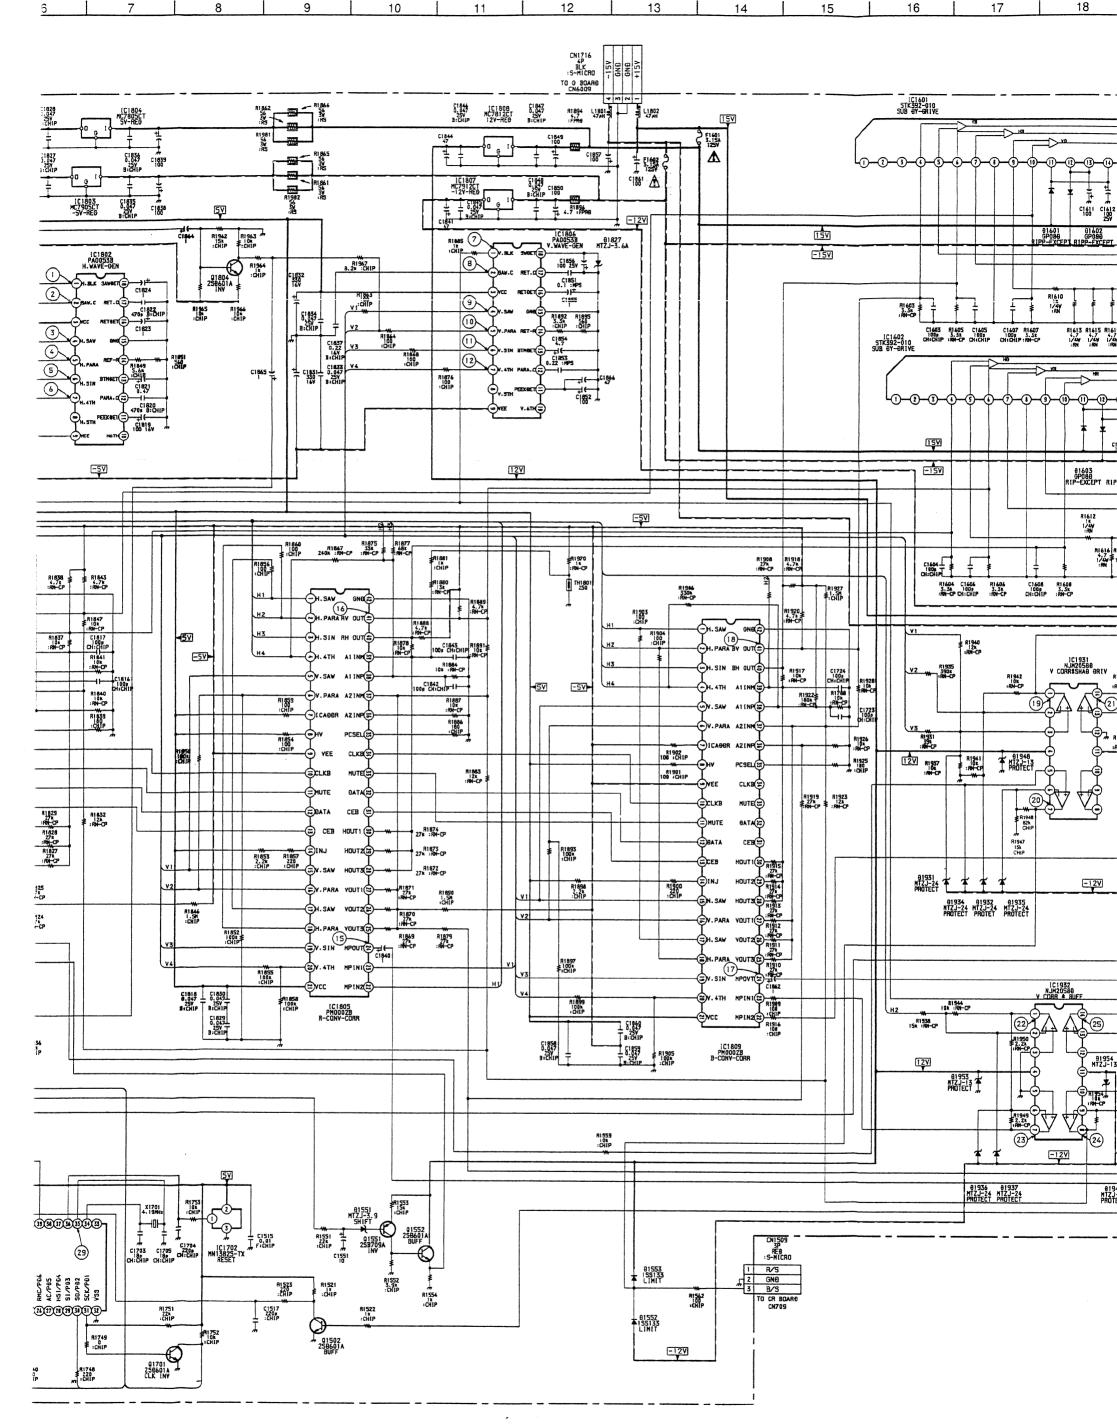


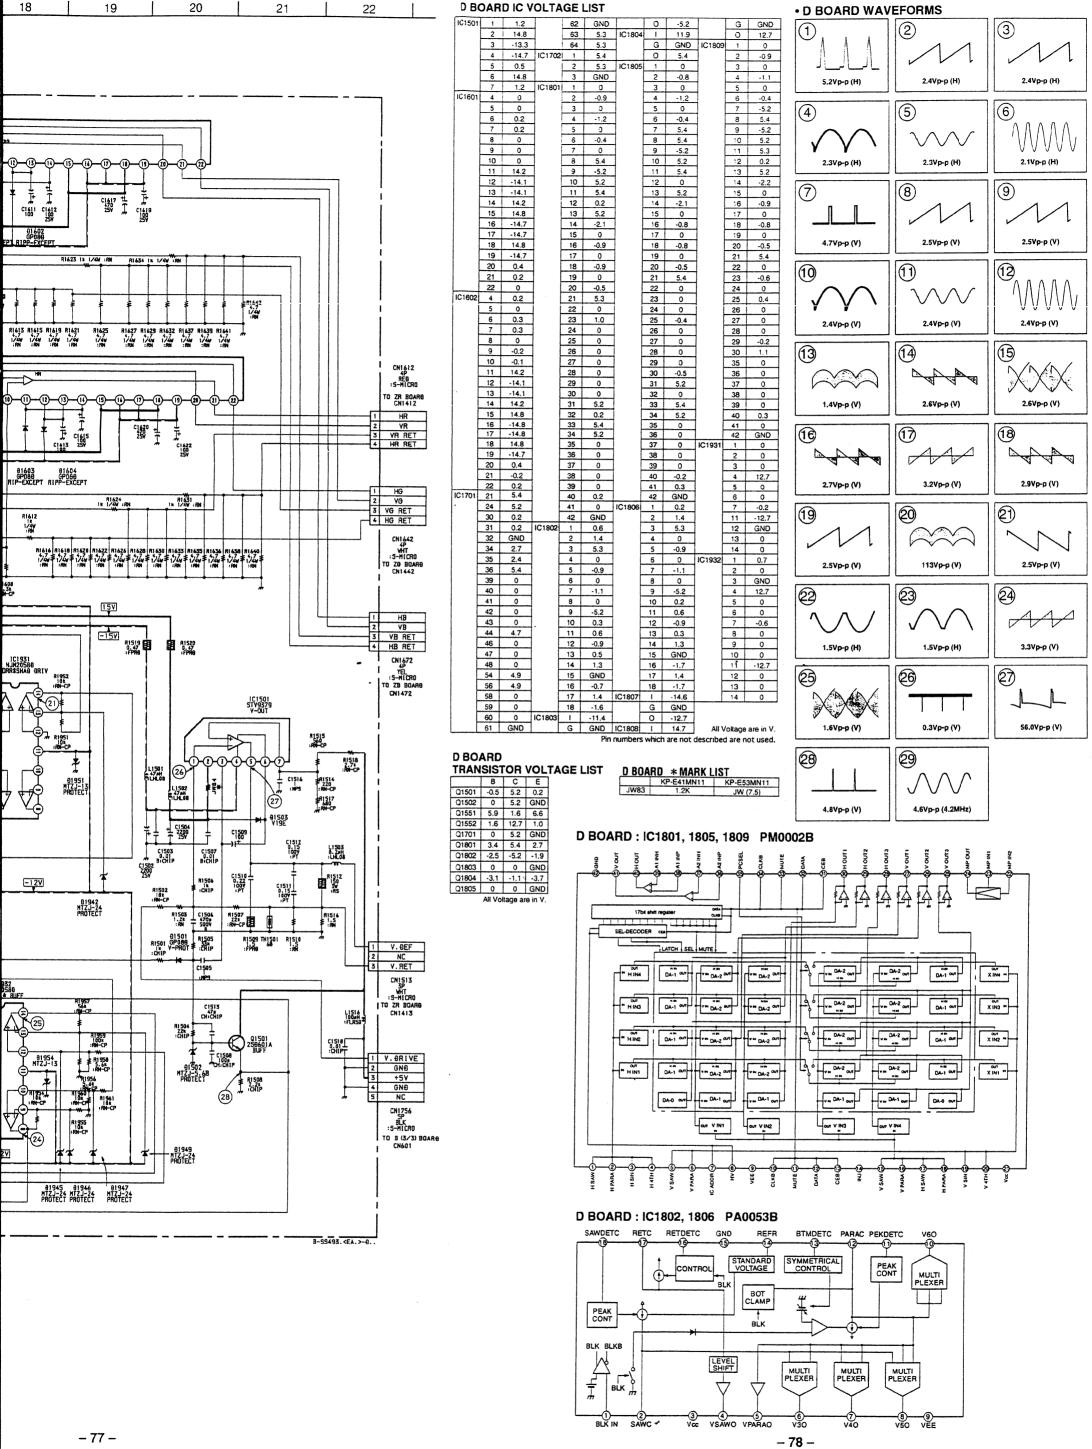


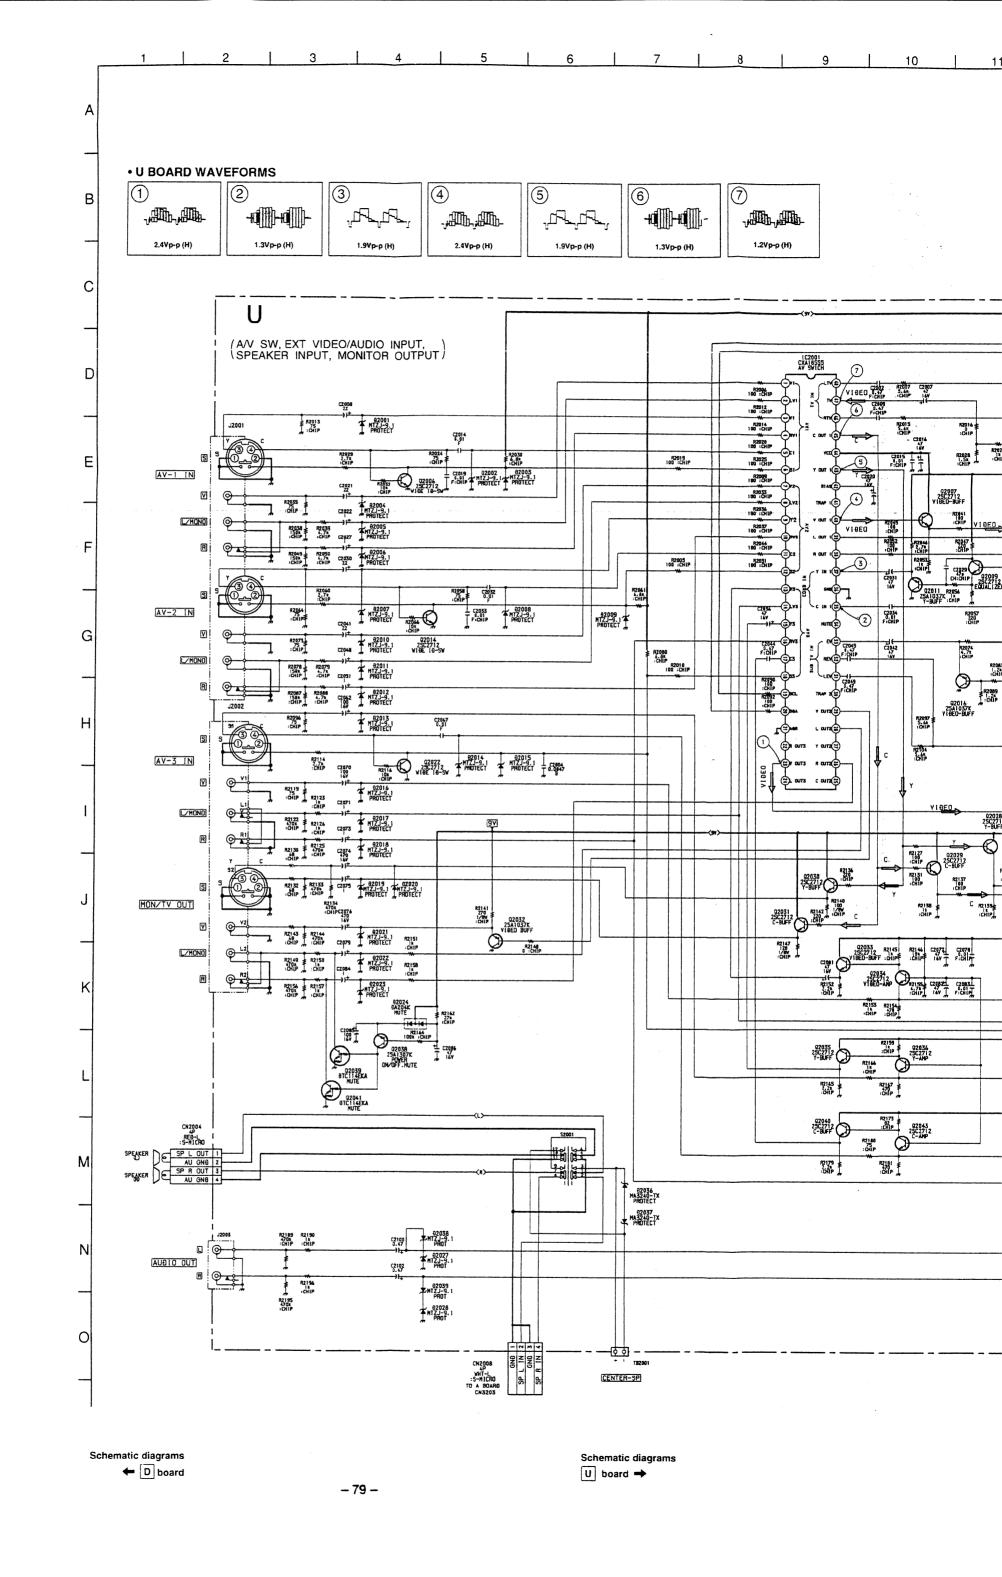


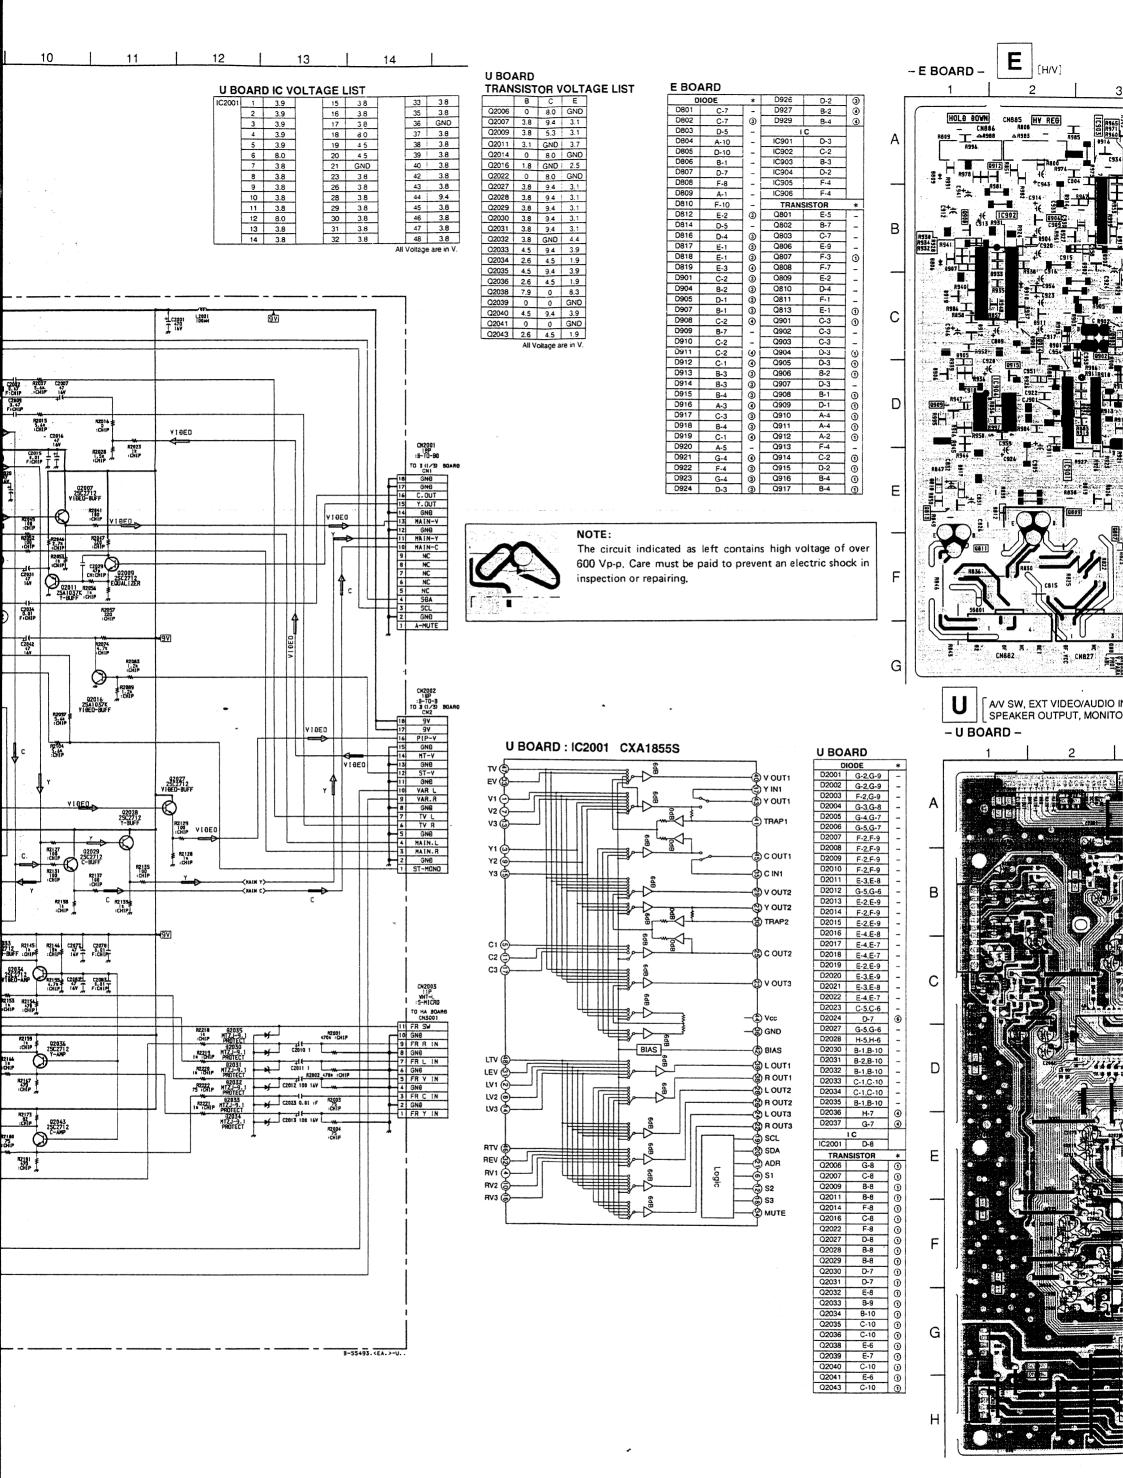


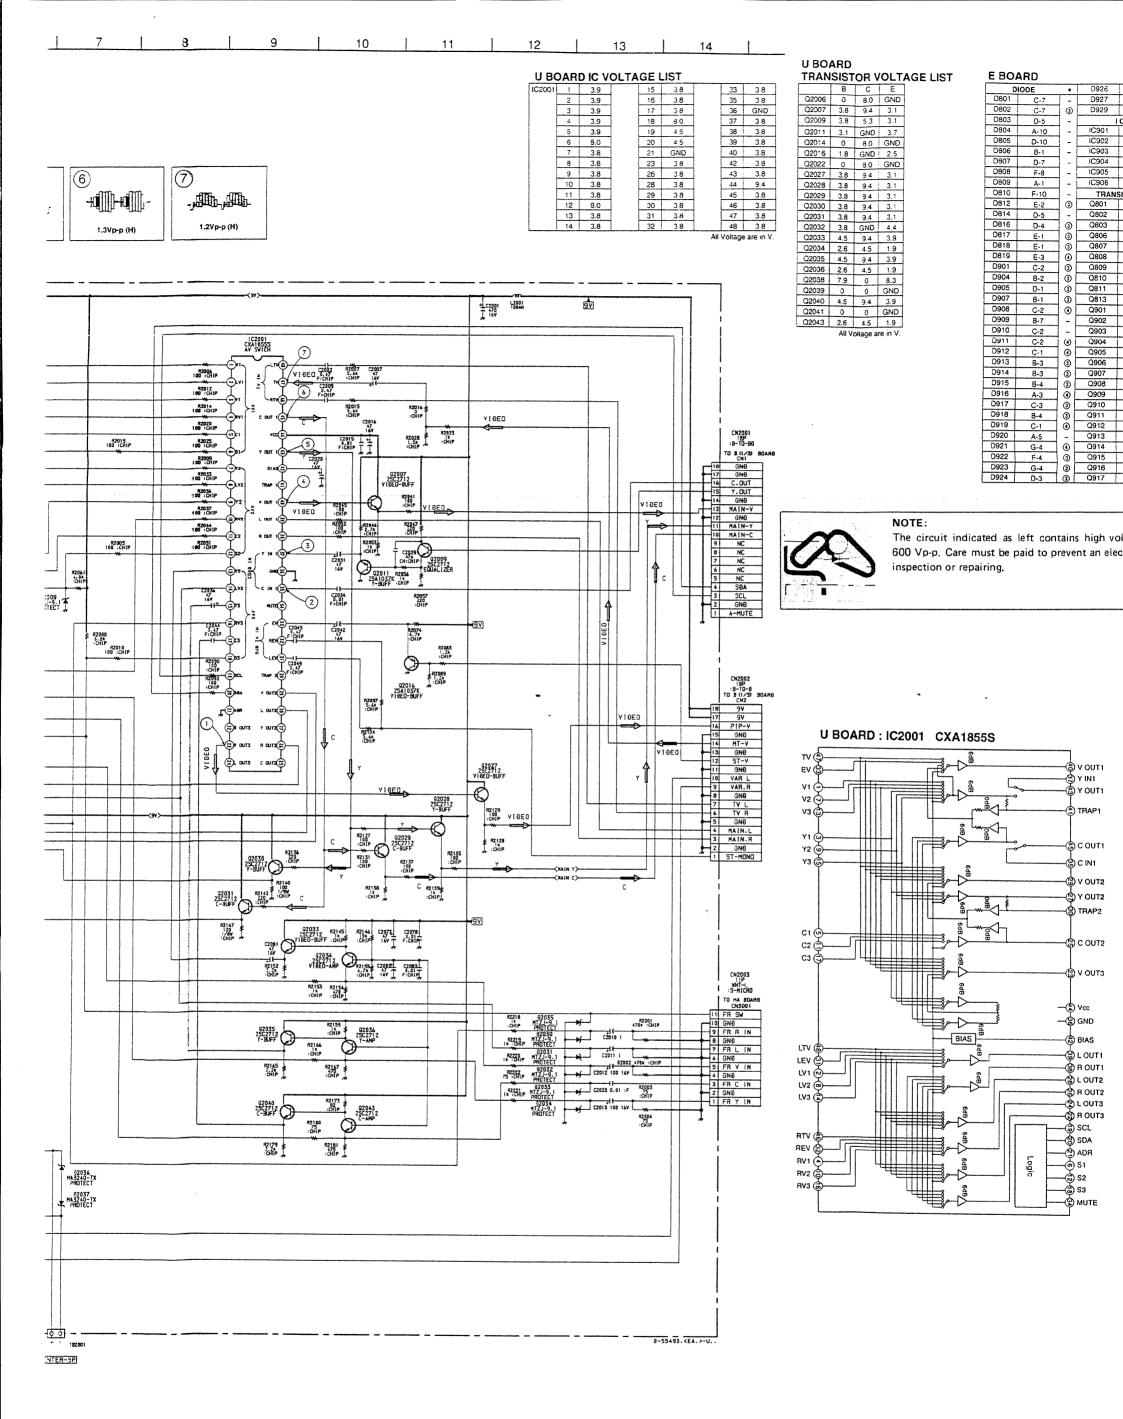


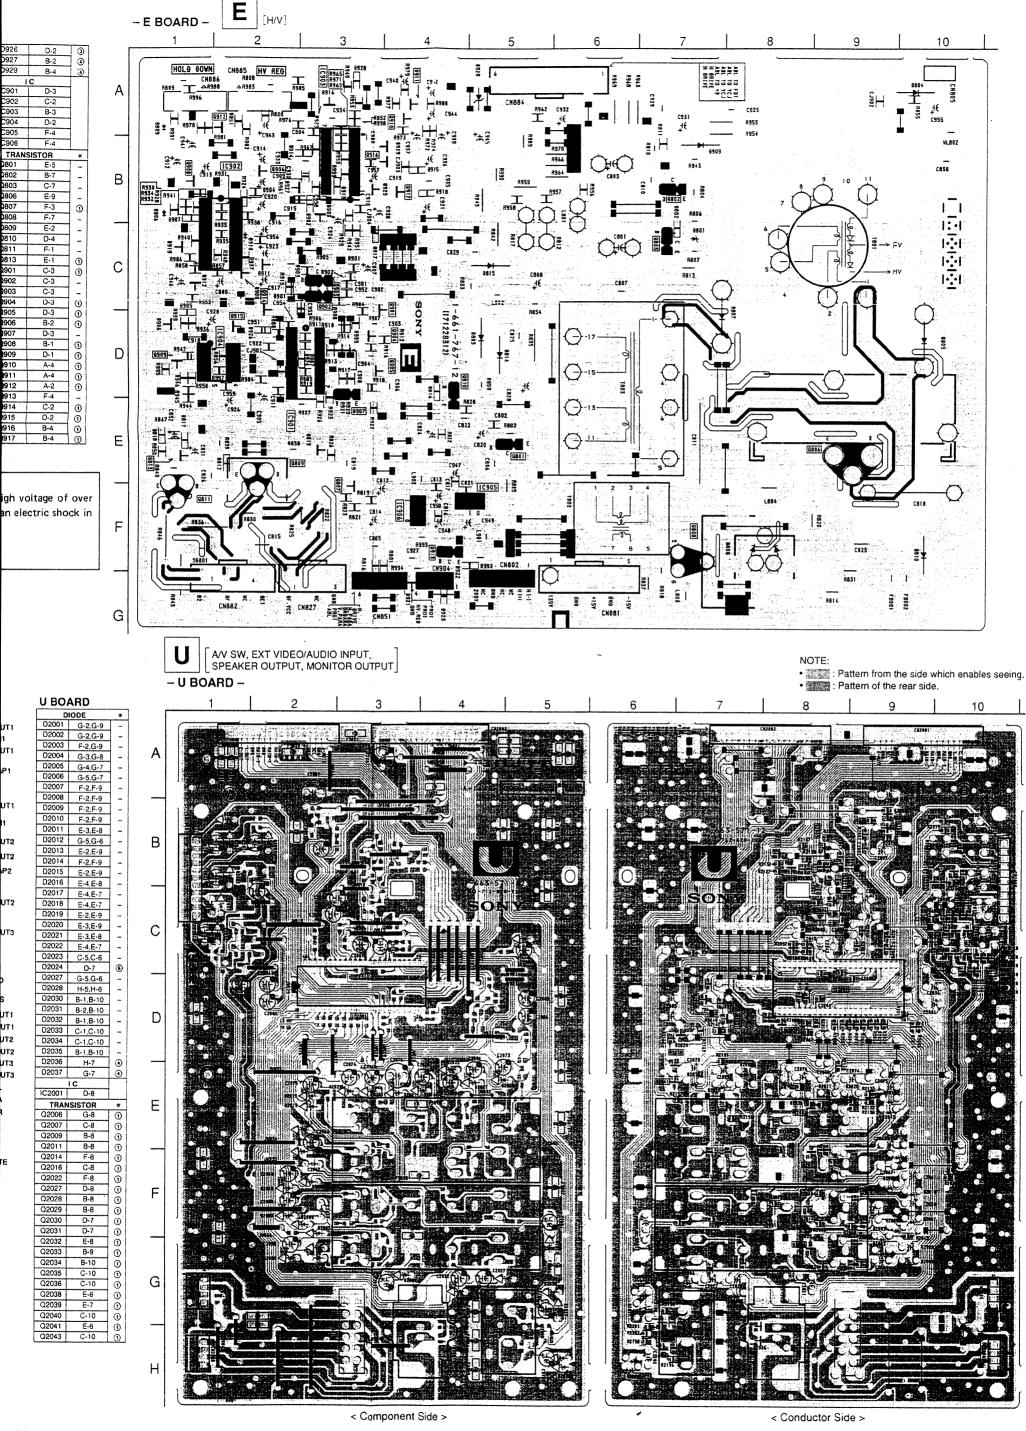


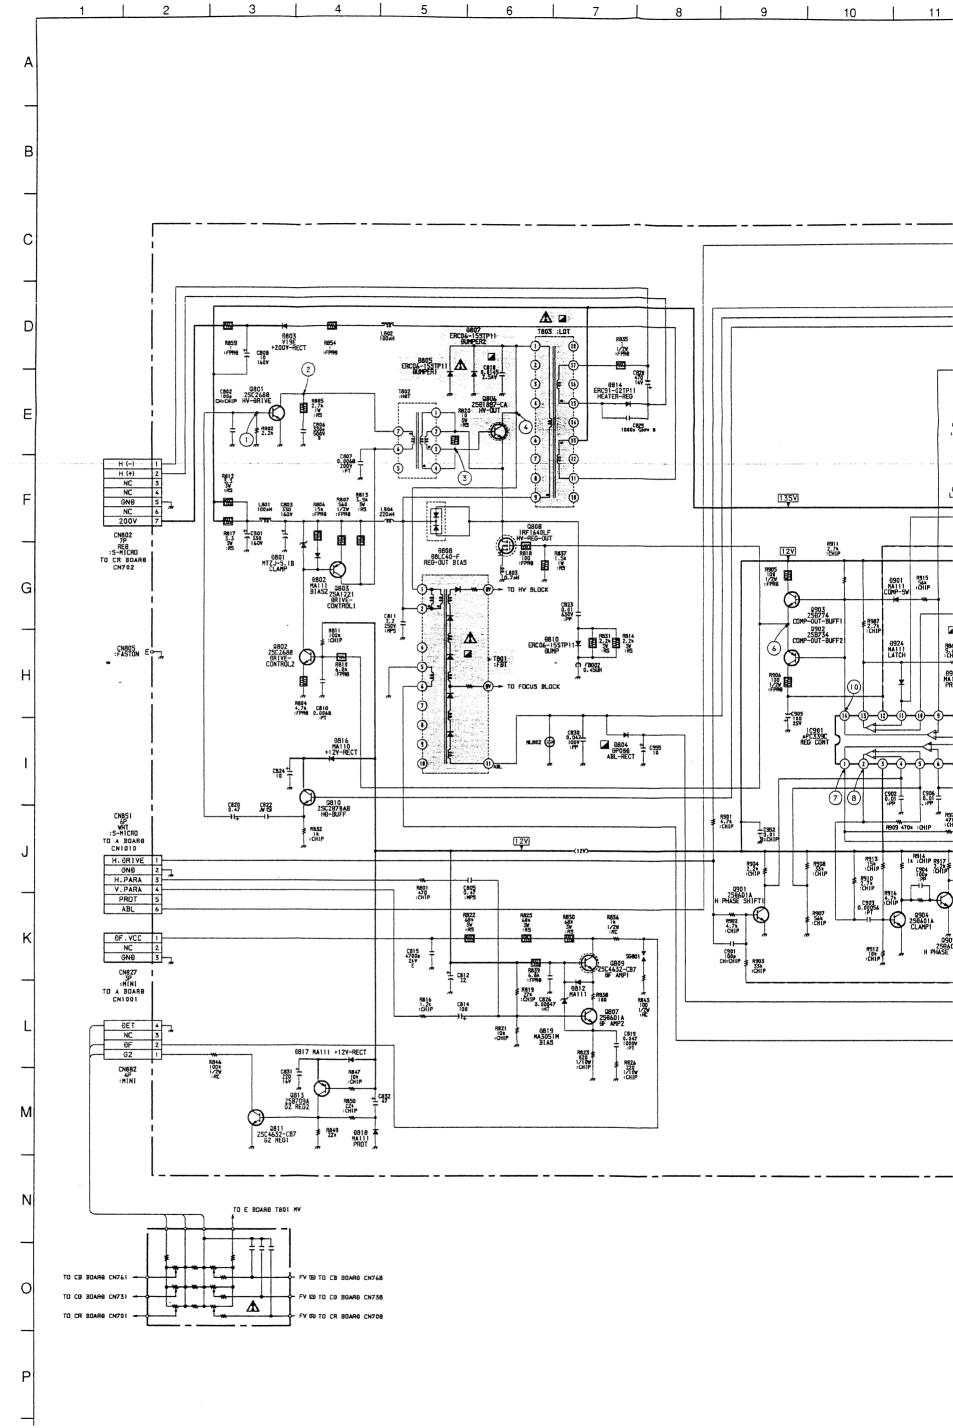

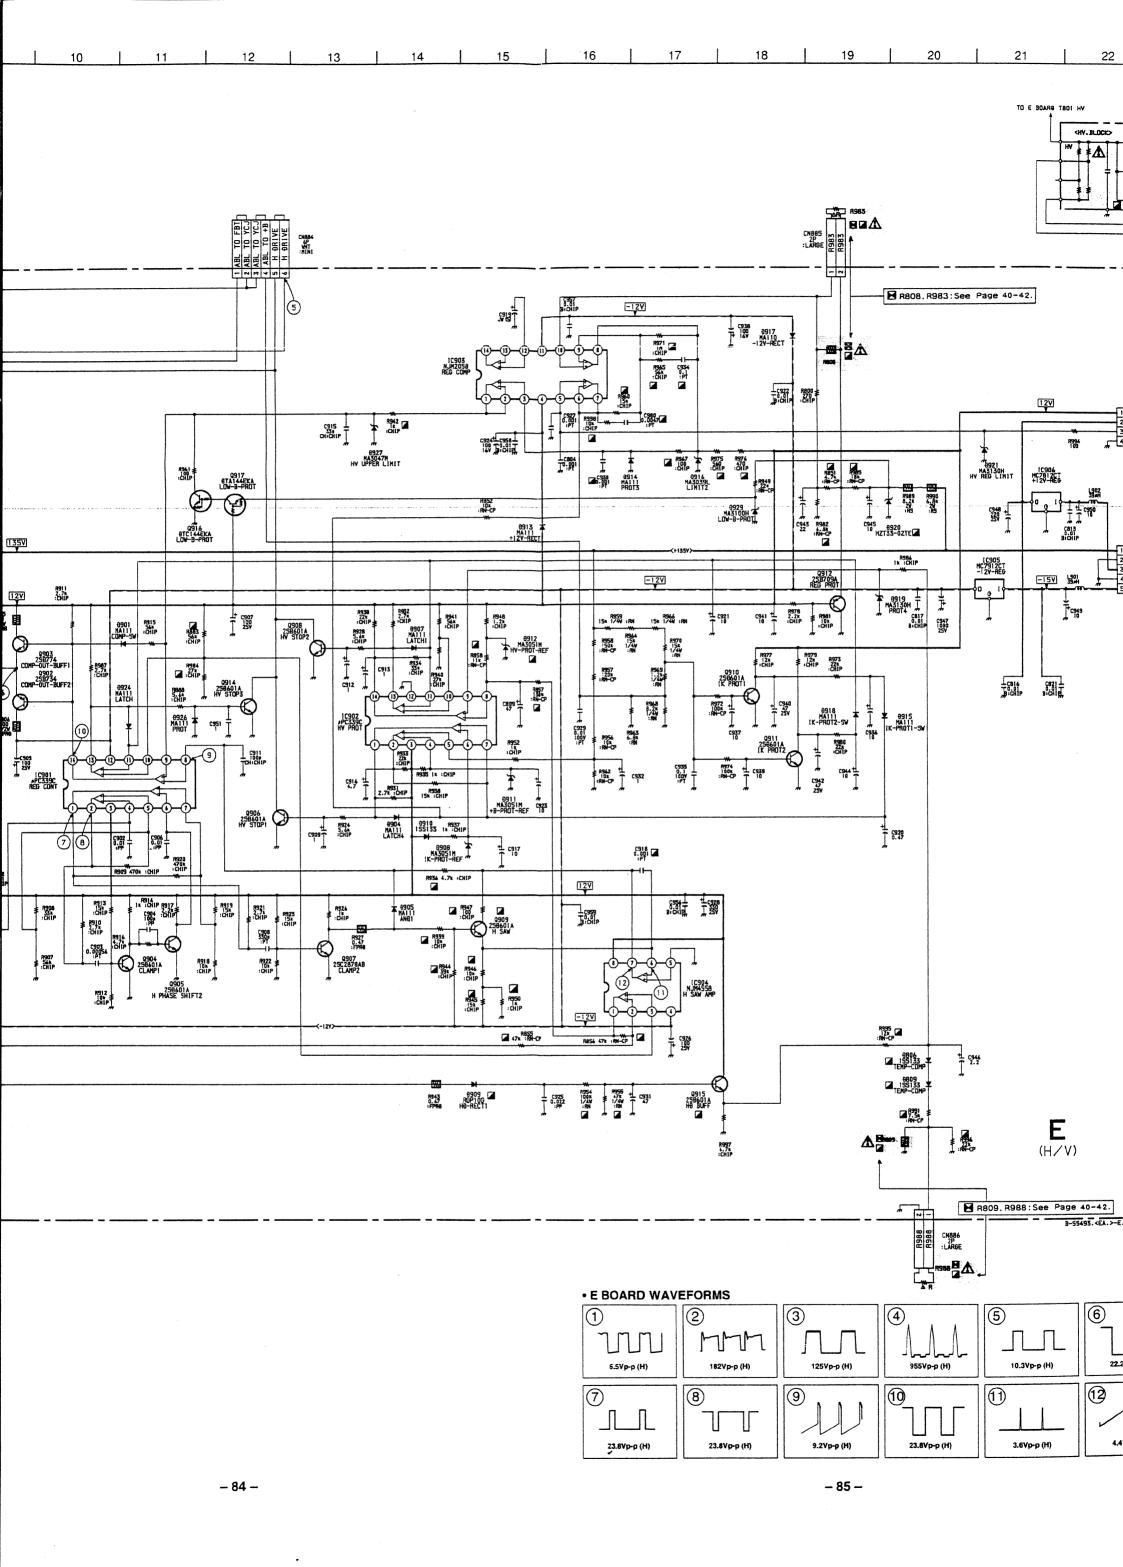

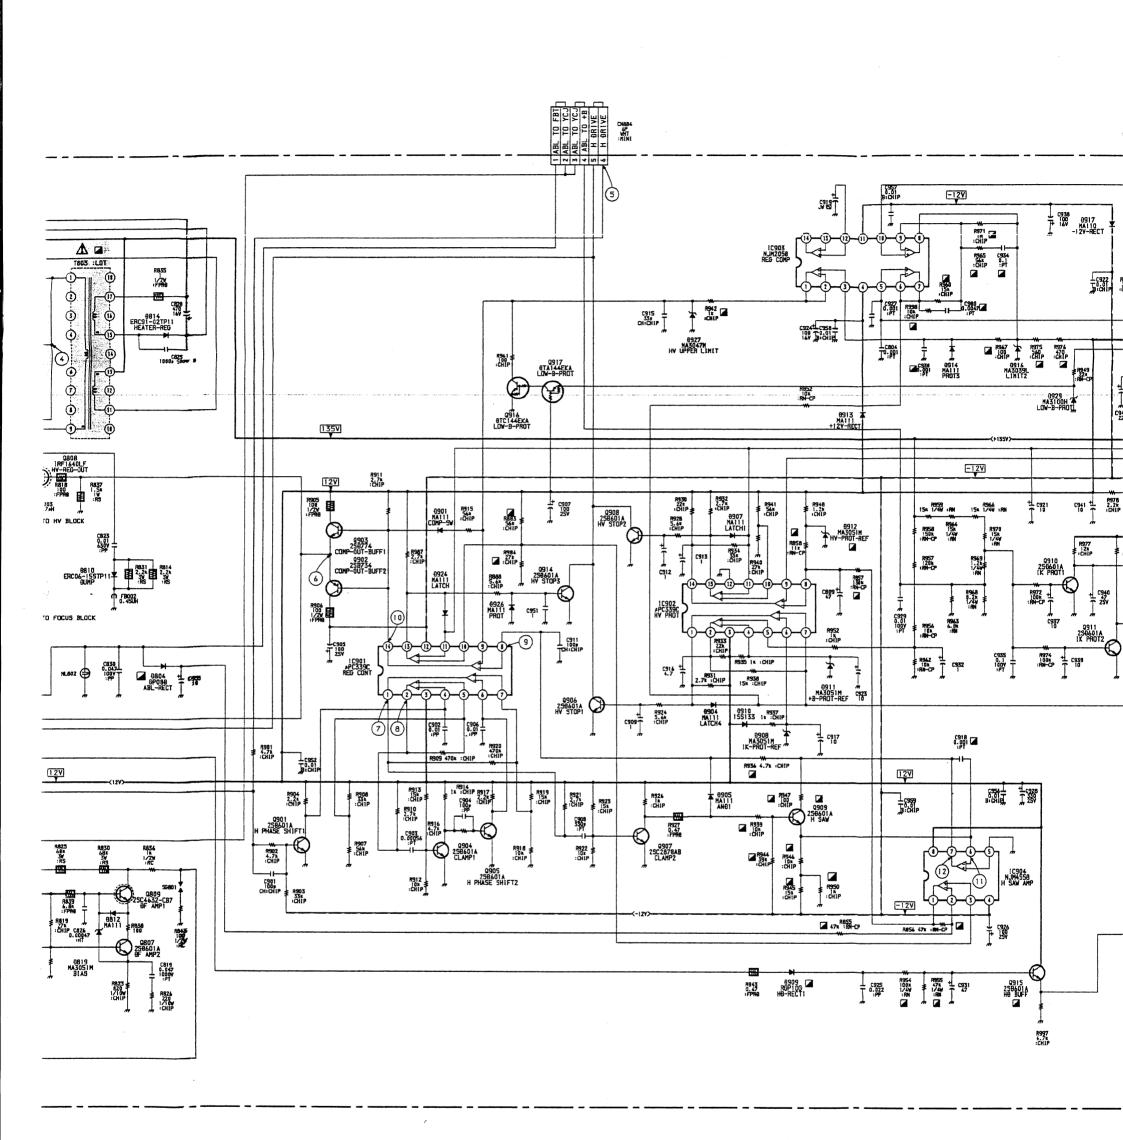

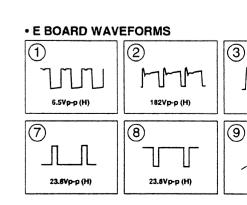

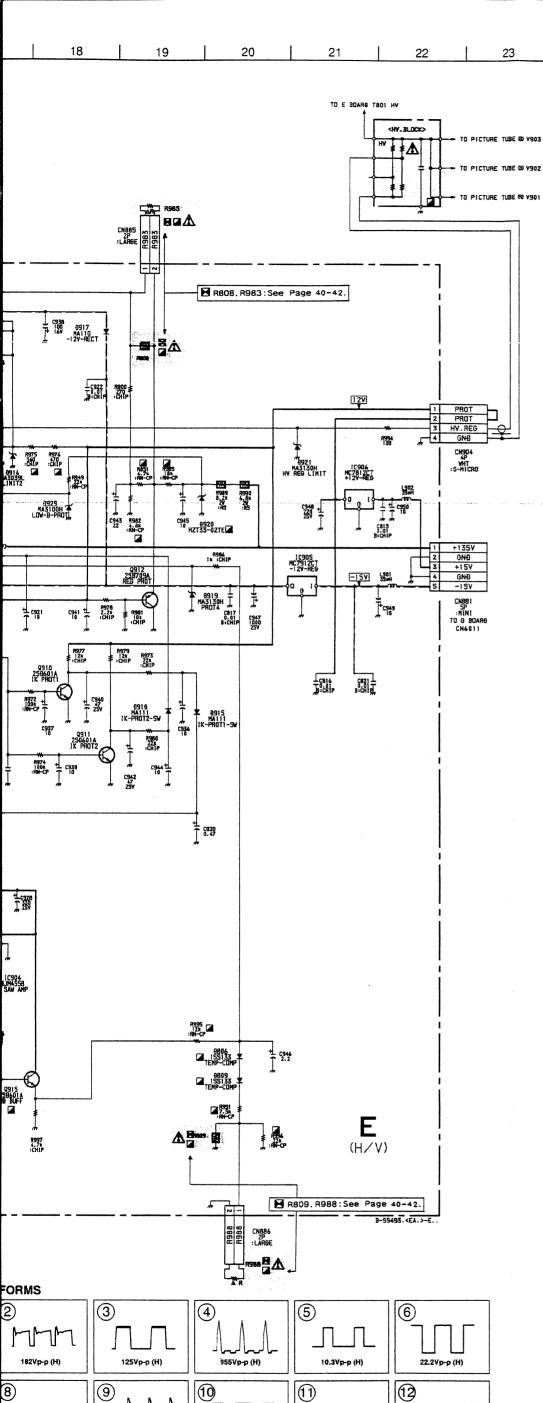

E BOARD IC VOLTAGE LIST
IC901 1 -5.7 IC902 1 0.2 2.4 2 3 4 5 4 -12.5 5 GND 2 6.8 2.4 3 12.8 6 0.2 7 2.3 8 12.7 4 5.4 5 5.0 4 3.8 12.0 5 8.0 7.9 6 7.5 7 5.0 6 7 7.9 1 -15.0 4.8 7.9 8 9 10 11 G GND
O -12.6
1 15.0 8 2.8 8 5.2 2.4 9 2.8 10 4.1 11 0 9 5.0 10 4.2 11 0 7.8 7.8 -11.8 G GND 12 -12.6 13 -12.3 14 2.4 12 GND 13 0.2 14 0 12 3.6 1 3.1 2 4.1 0 12.8 All Voltage are in V. Pin numbers which are not described are not used.

E BOARD
TRANSISTOR VOLTAGE LIST

TRAN	SIST	OR	VOL	T
	В	С	Ε	ı
Q801	-3.0	94.3	GND	
Q802	2.9	136.9	2.5	
Q803	136.9	94.6	137.5	
Q806	52.4	141.4	52.4	
Q807	2.2	5.3	1.6	
Q809	6.1	365.0	5.6	
Q810	4.2	12.0	5.9	
Q811	0	722.0	GND	
Q813	12.7	0	12.7	
Q901	-0.8	3.8	GND	
Q902	2.4	-12.1	2.3	
Q903	2.3	12.1	2.3	
Q904	0.5	0.9	GND	
Q905	0.2	7.5	GND	
Q906	0.2	4.2	GND	
Q907	0.5	0.7	GND	
Q908	0.2	4.2	GND	
Q909	-2.2	2.3	0.2	
Q910	0.7	0	GND	
Q911	0.7	0	GND	
Q912	10.4	GND	11,1	
Q913	-0.5	0	GND	
Q914	-0.6	4.2	GND	
Q915	8.8	12.8	8.1	
	S	G	D	
Q808	0	2.3	52.4	

All Voltage are in V.

9.2Vp-p (H)


23.8Vp-p (H)

(1)

3.6Vp-p (H)

4.4Vp-p (H)

23.8Vp-p (H)

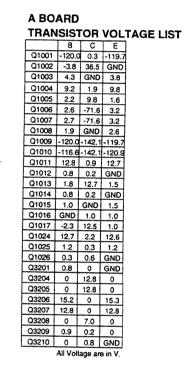

A E

IC100

IC1003


IC1004

IC1005

IC1006


IC3201

A BOARD : IC3201 TDA7265

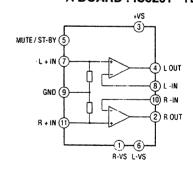


• A BOARD WAVEFORMS 1 2


5.2Vp-p (H)

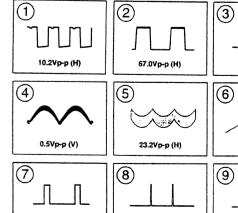


5.2Vp-p (H)


Schematic diagrams **← E** board

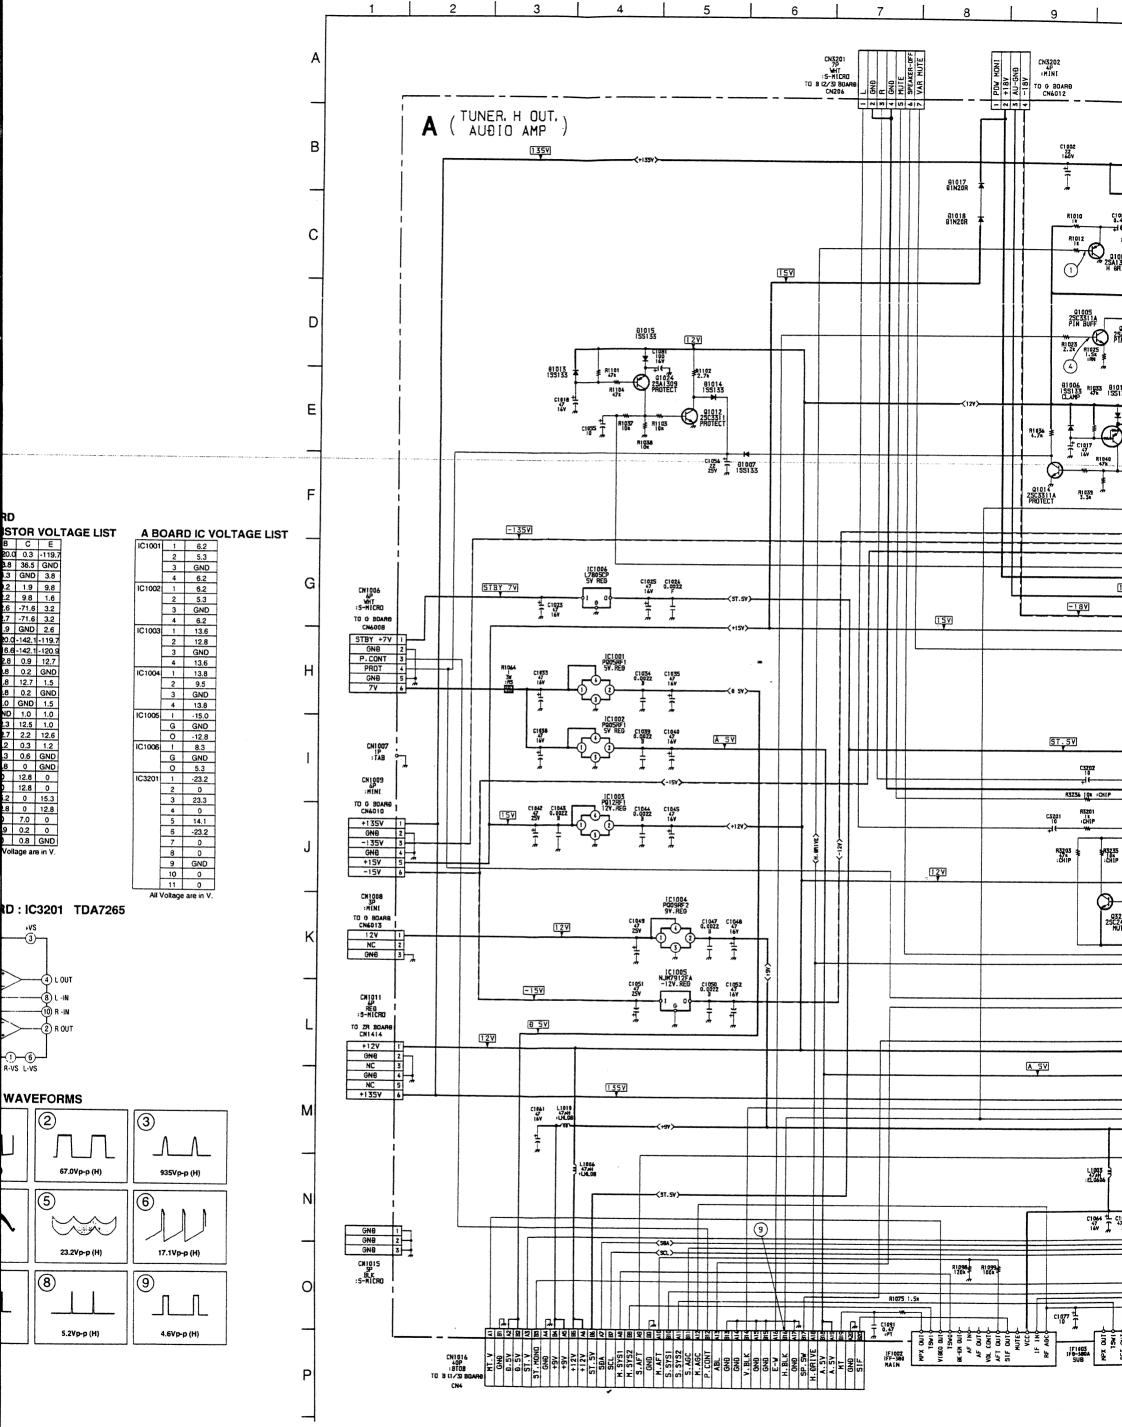

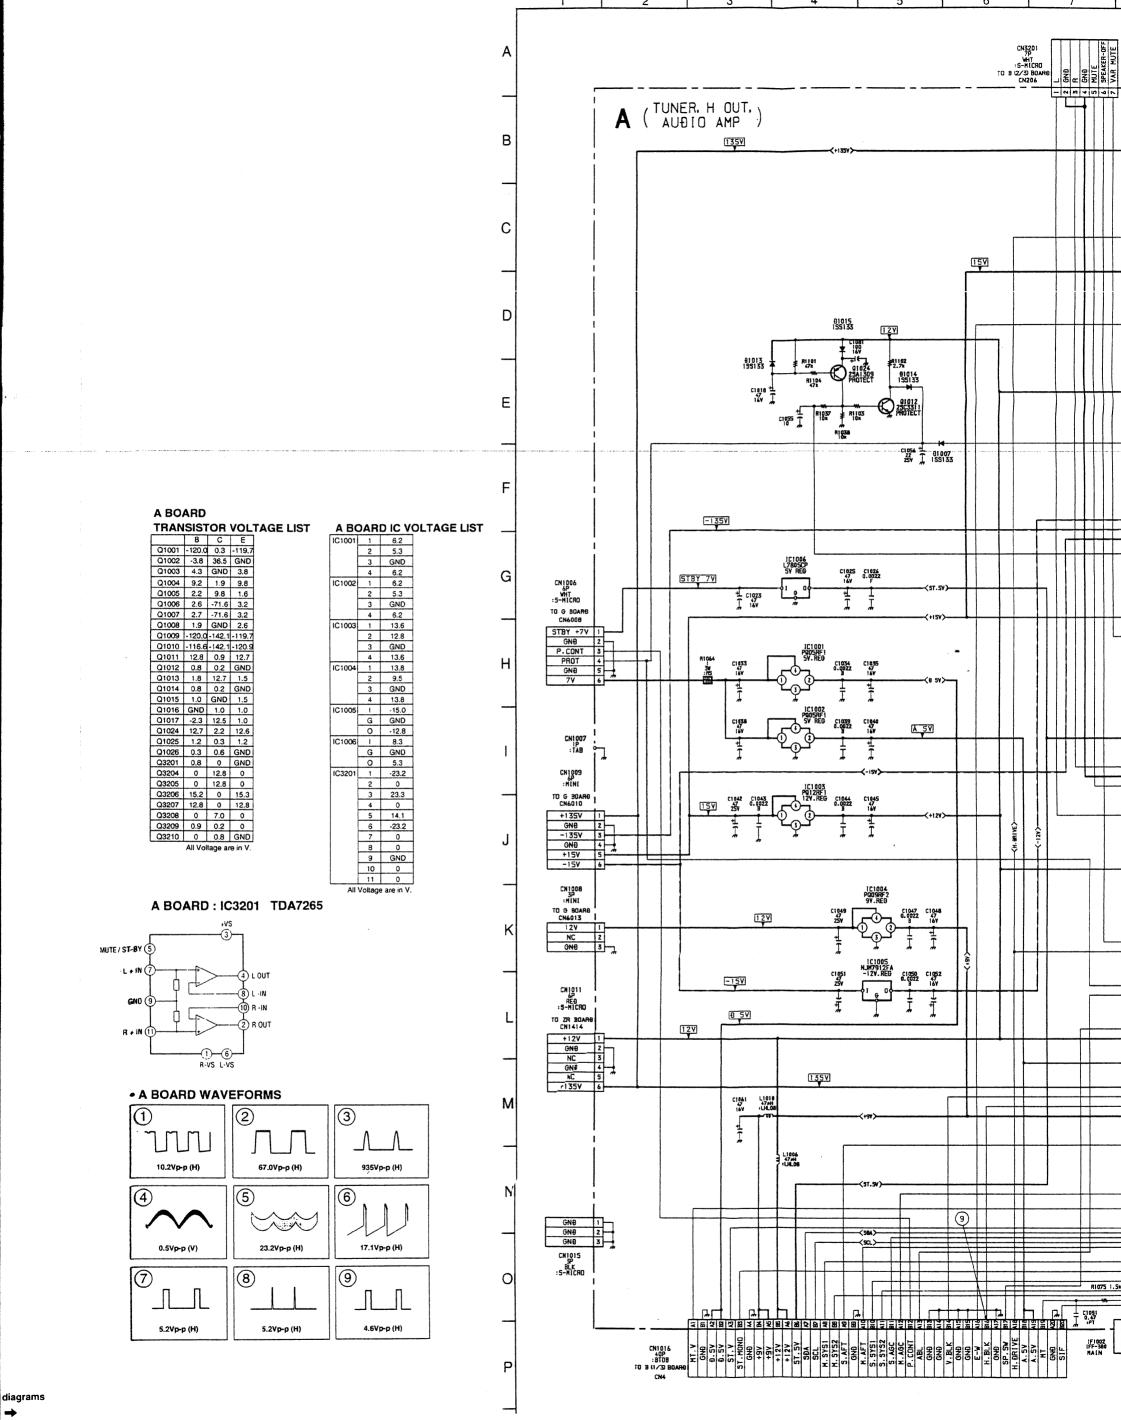

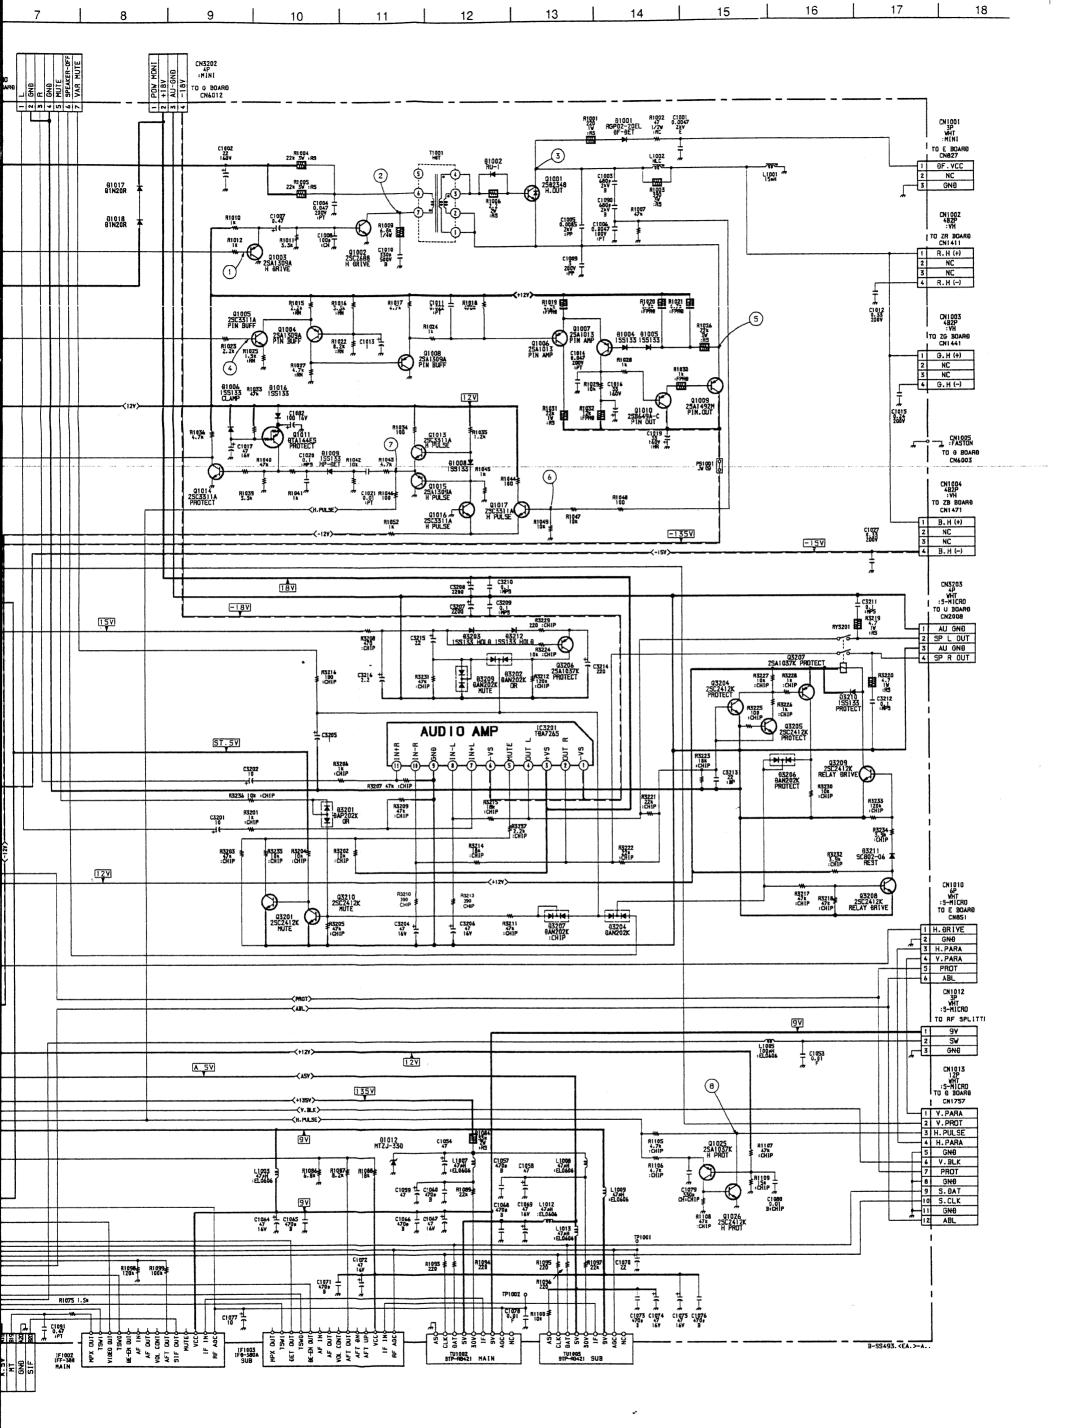





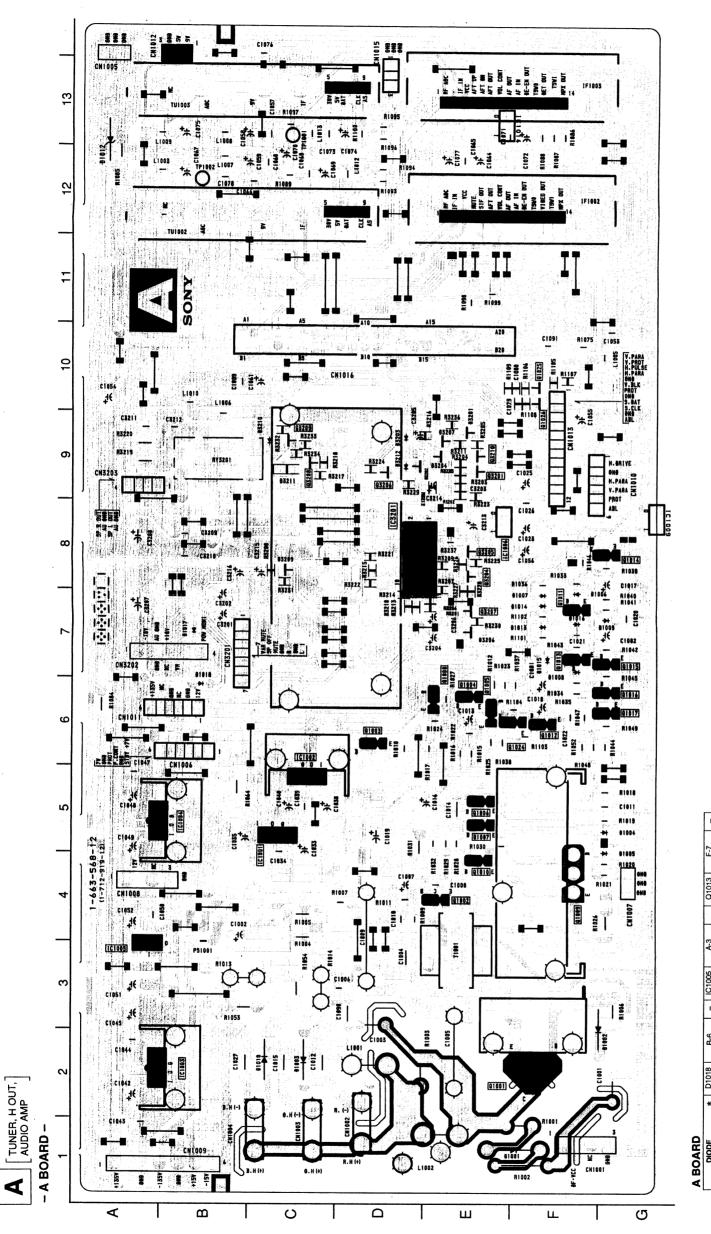



1	1	1	1	ł	ı	Θ	Θ	Θ	Θ	Θ	Θ	Θ	Θ	Θ	Θ
ì	6-8	C-5	9-5	9-5	F-6	F-10	F-10	E-9	E-8	E-8	6-Q	E-7	ပိ	6-5	E-9
5000	Q1014	Q1015	Q1016	Q1017	Q1024	Q1025	01026	03201	03204	03205	03200	Q3207	03208	03200	Q3210
			*	1	1	1	1	1	1	1	1	1	٠,	1	١
2.4	8-3	D-8	<b>IRANSISTOR</b>	F-2	E-4	D-6	E-6	E-6	E-5	E-5	E-6	<u>7</u>	E-4	F-7	F-6
2	101006	IC3201	TRAP	01001	Q1002	Q1003	01004	Q1005	Q1006	Q1007	01008	01009	01010	01011	Q1012
1	(2)	0	1	•	⊚	•	•	1	0	١					
9-9	E-9	6-O	6-Q	E-9	E-7	E-9	84 25	6-5	6-5	6-Q	ပ	င်း	C-5	B-2	A-5
חוחוח	D3201	D3505	D3203	D3204	90780	D3207	D3209	D3210	D3211	D3212		IC1001	IC1002	IC1003	IC1004
*	-	1	1	,	1	1	1	1	ı	ı	1	1	1	1	1
JOUE	Ξ	6-2	C-2	6-5	6-4	F-7	F-7	F-7	G-7	A-12	F-7	F-7	F-7	F-7	B-7
5	D1001	D1002	D1003	D1004	D1005	D1006	D1007	D1008	D1009	D1012	D1013	D1014	D1015	D1016	D1017




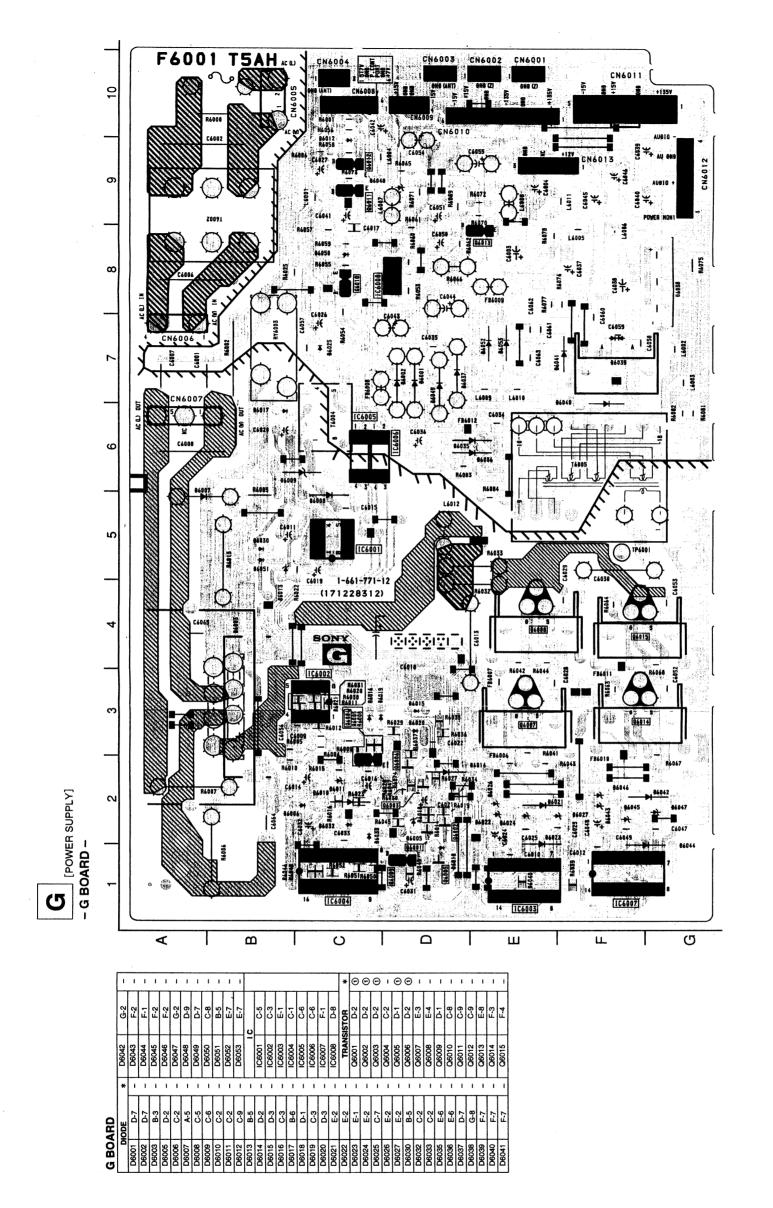


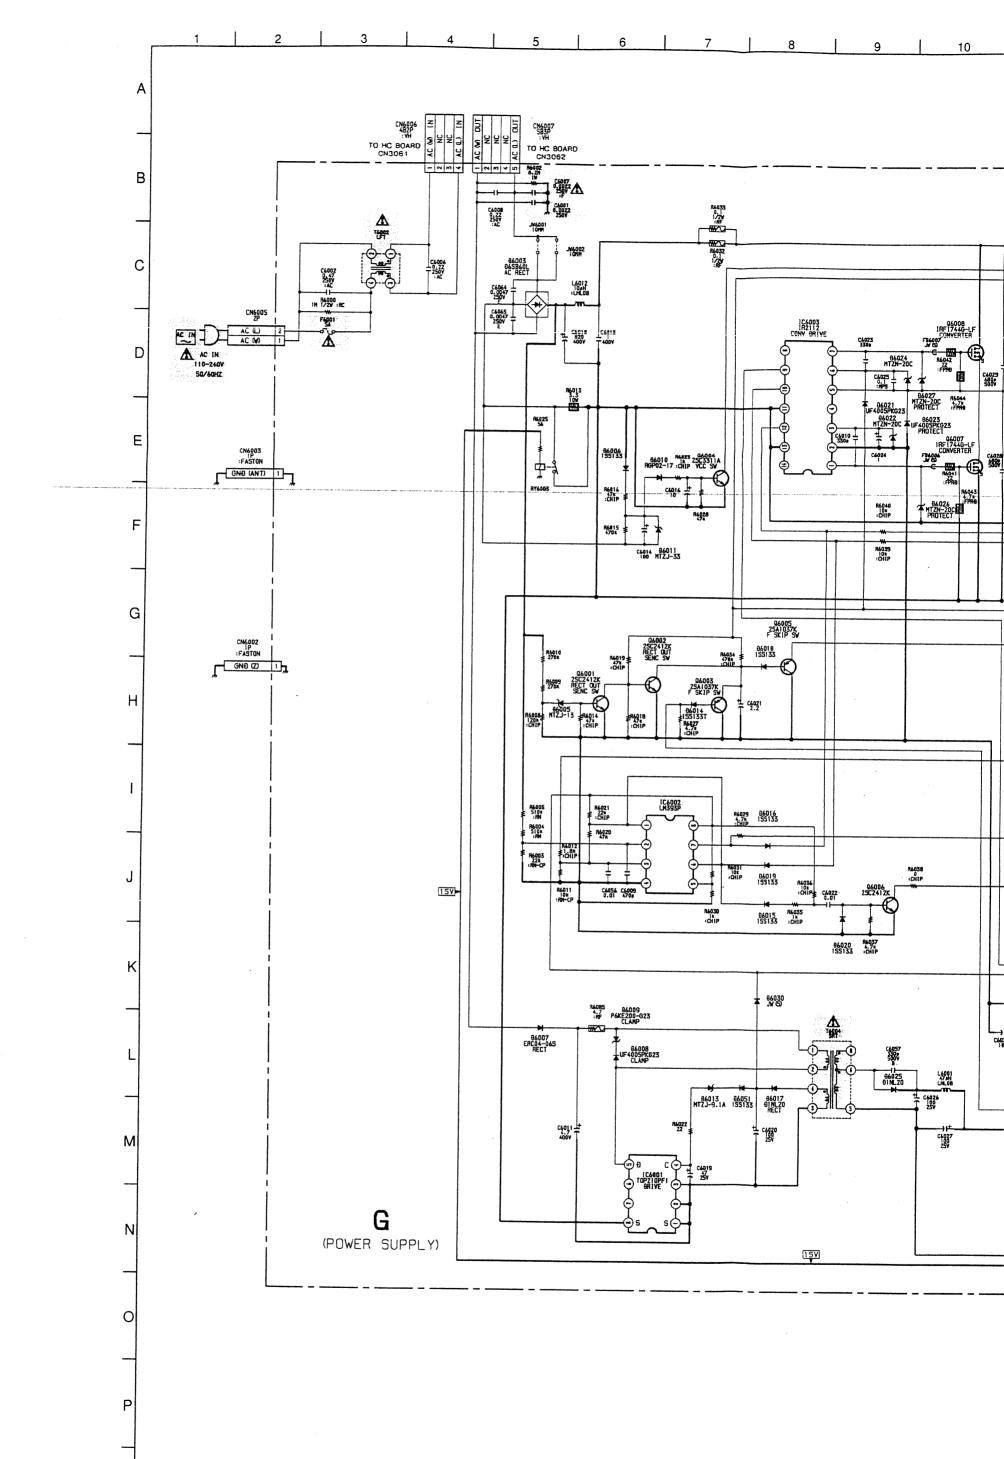


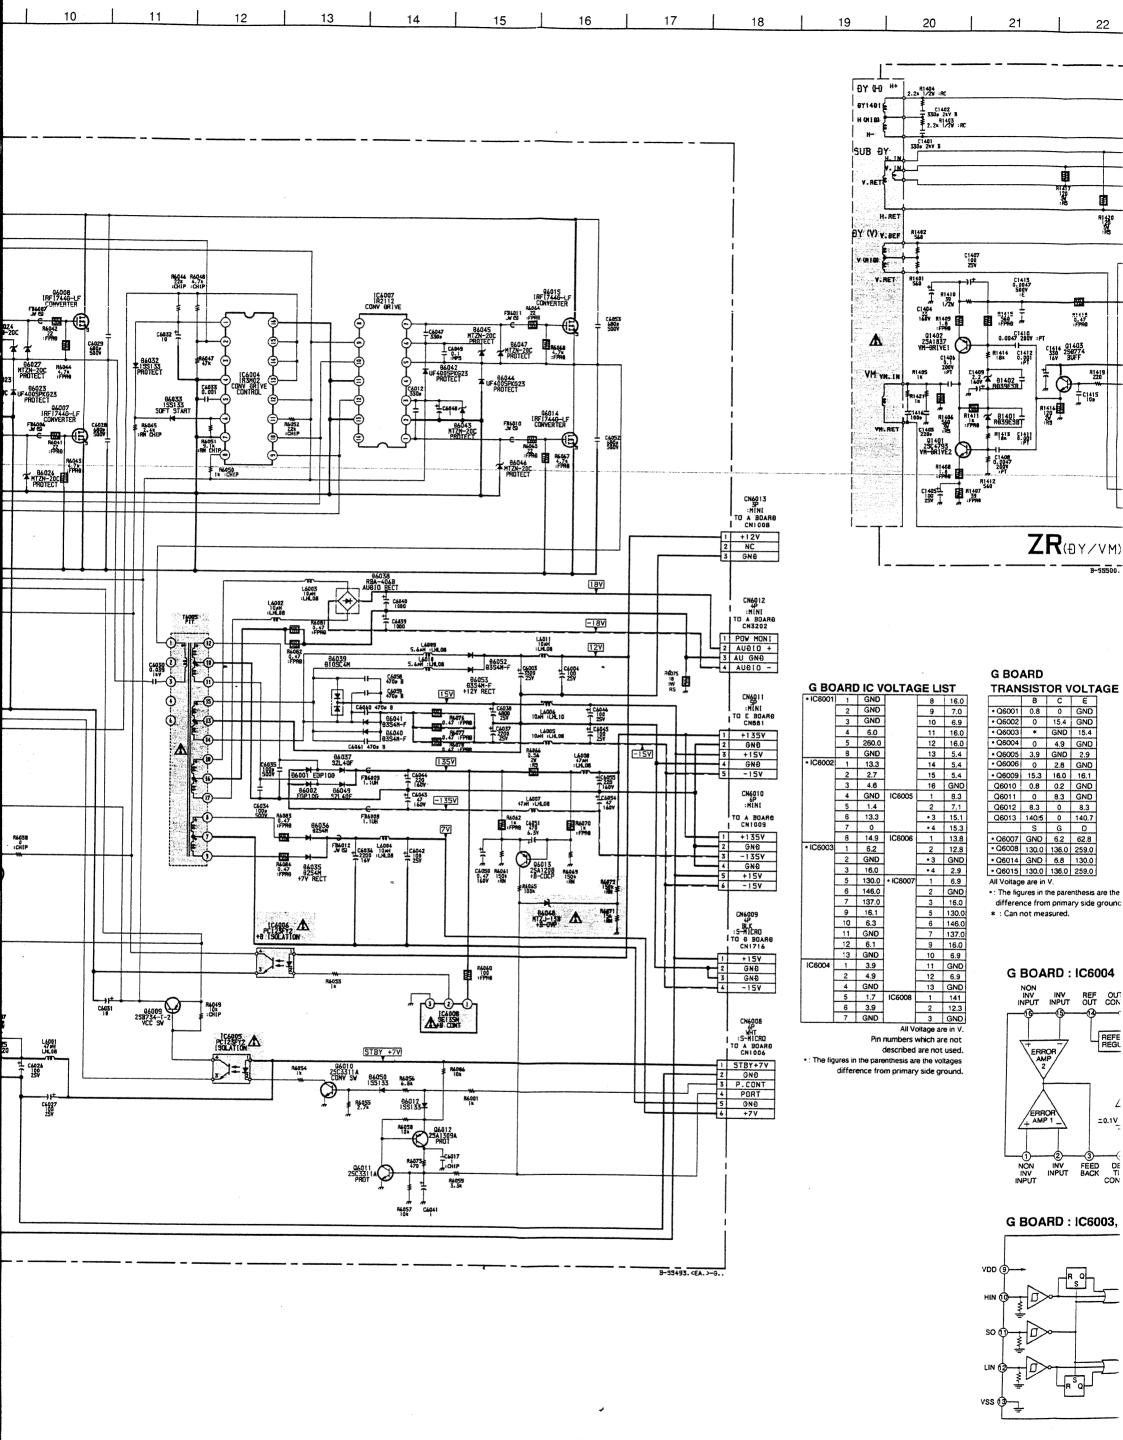


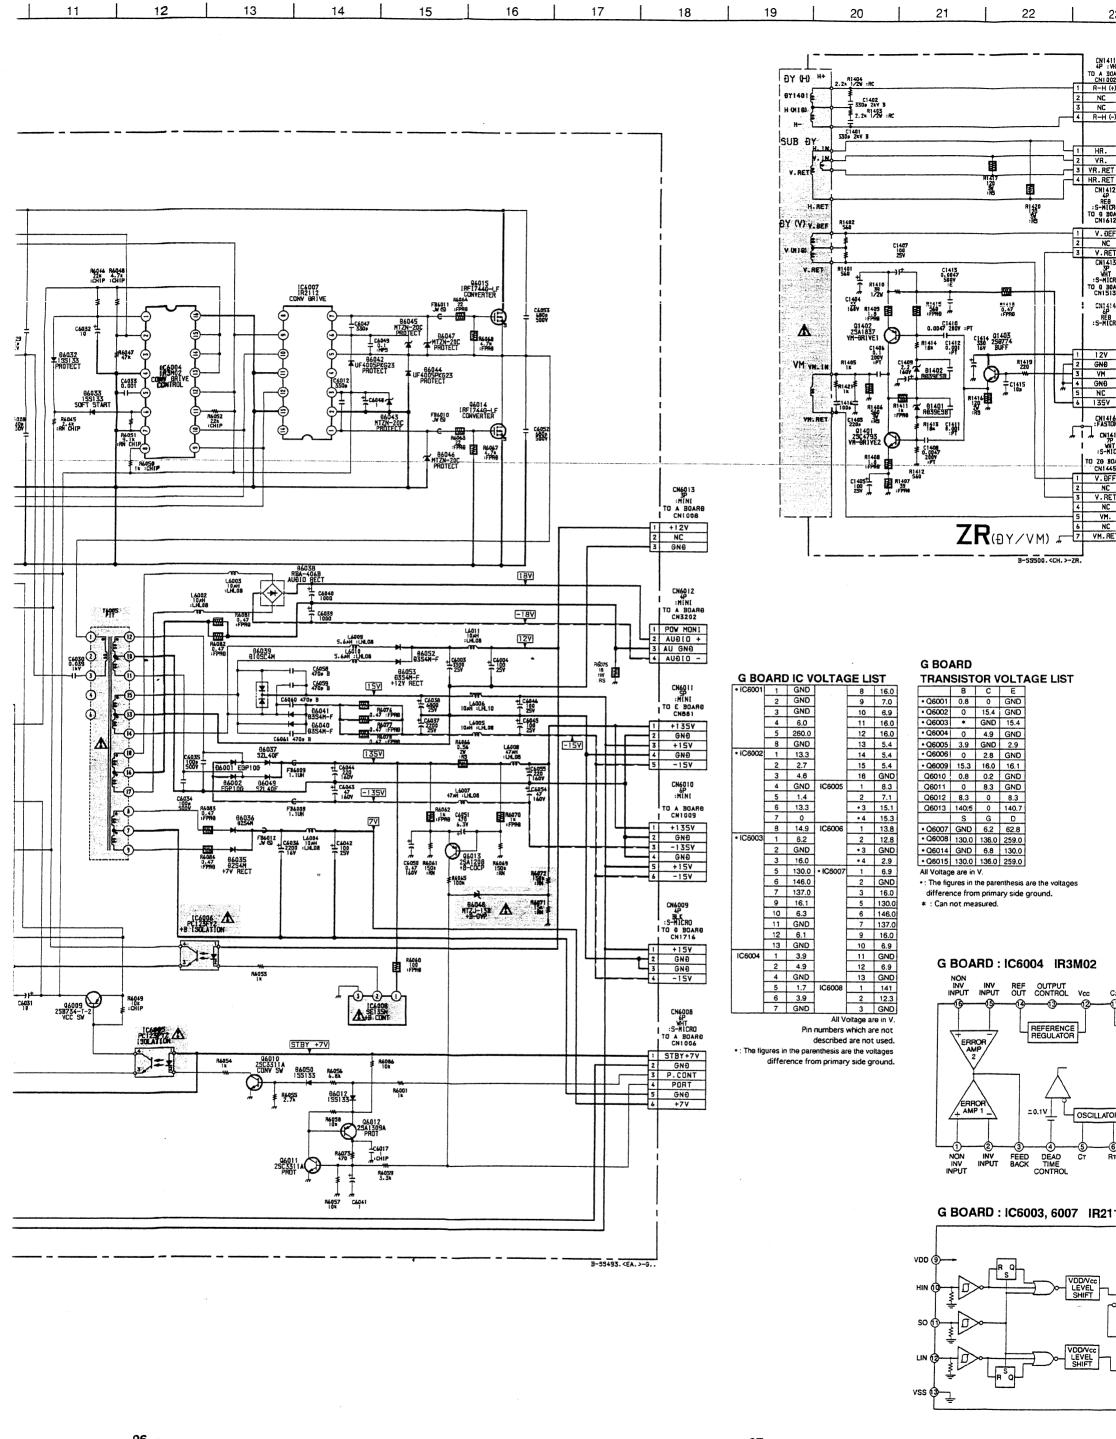


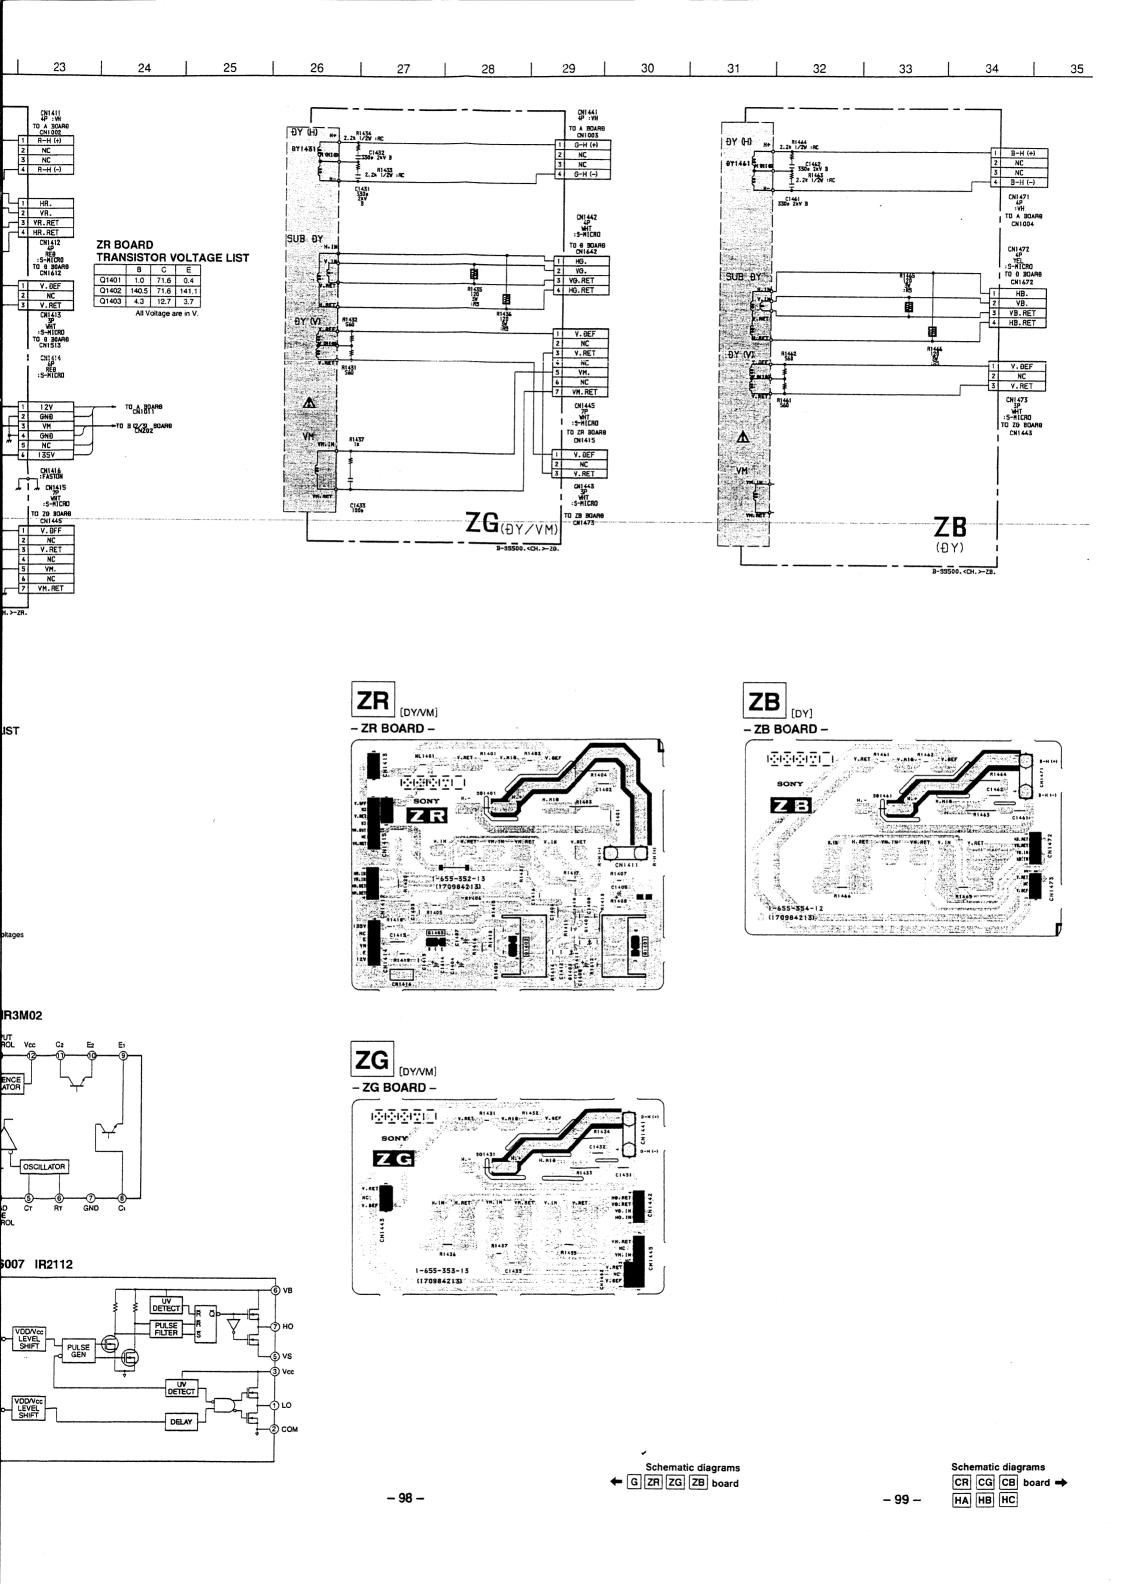


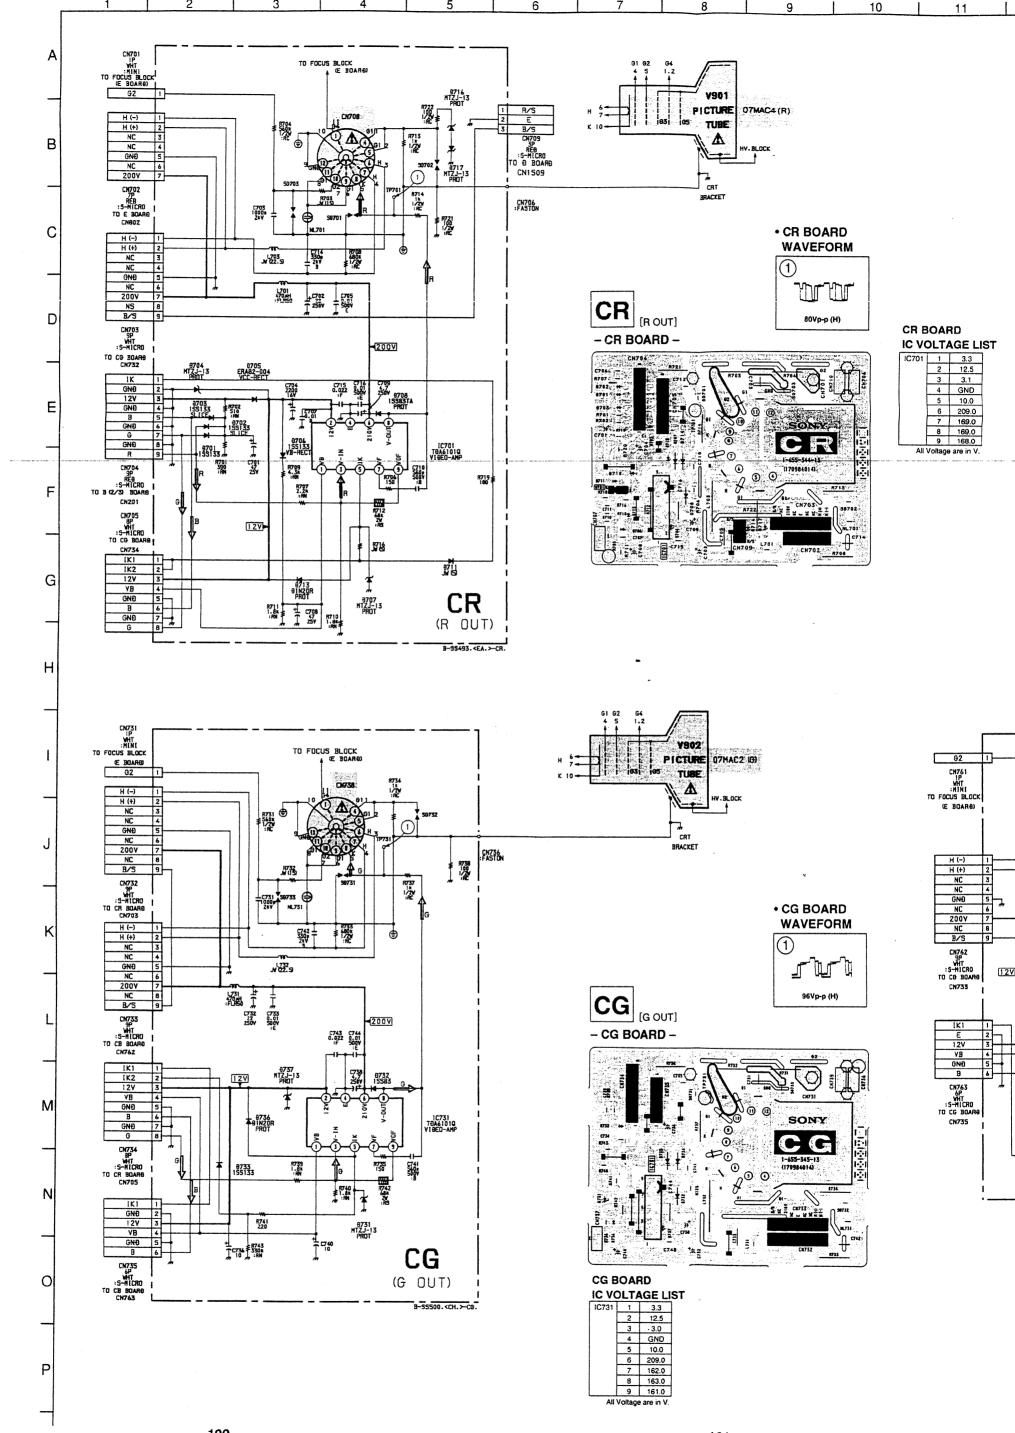


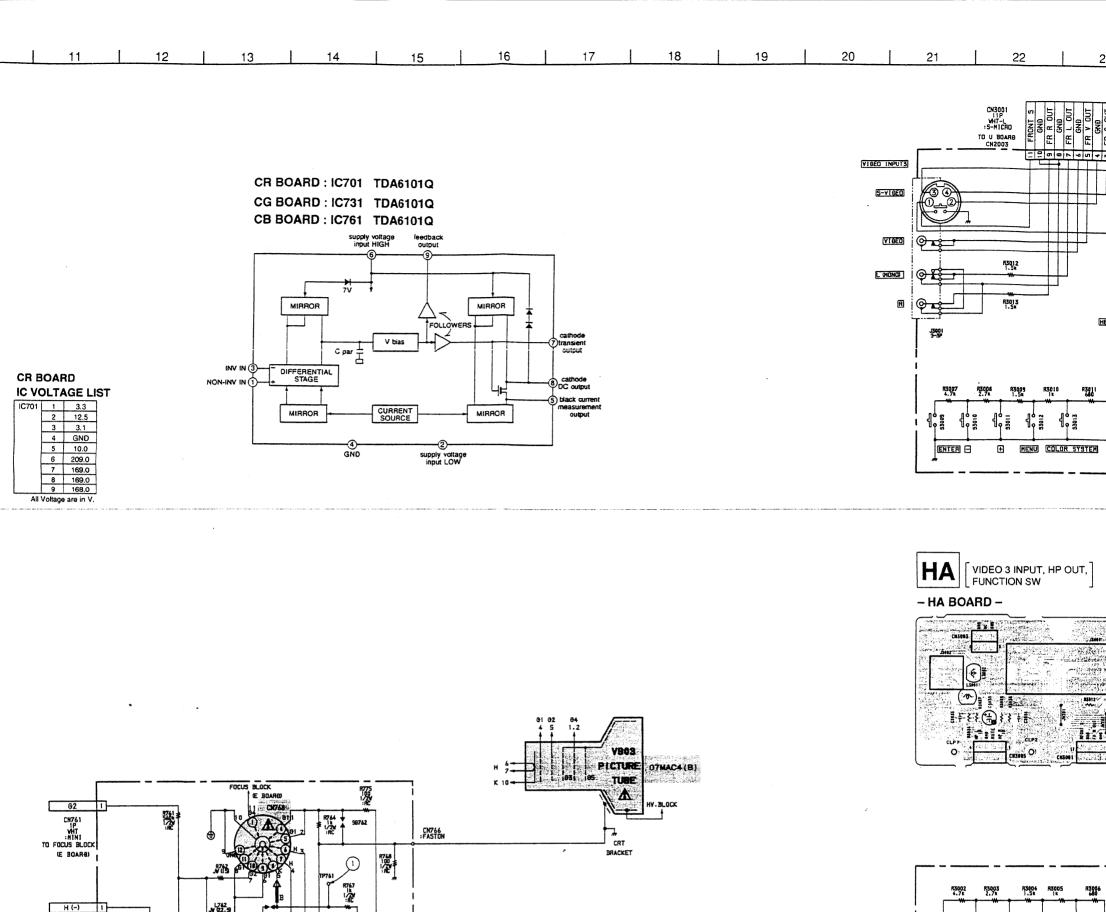


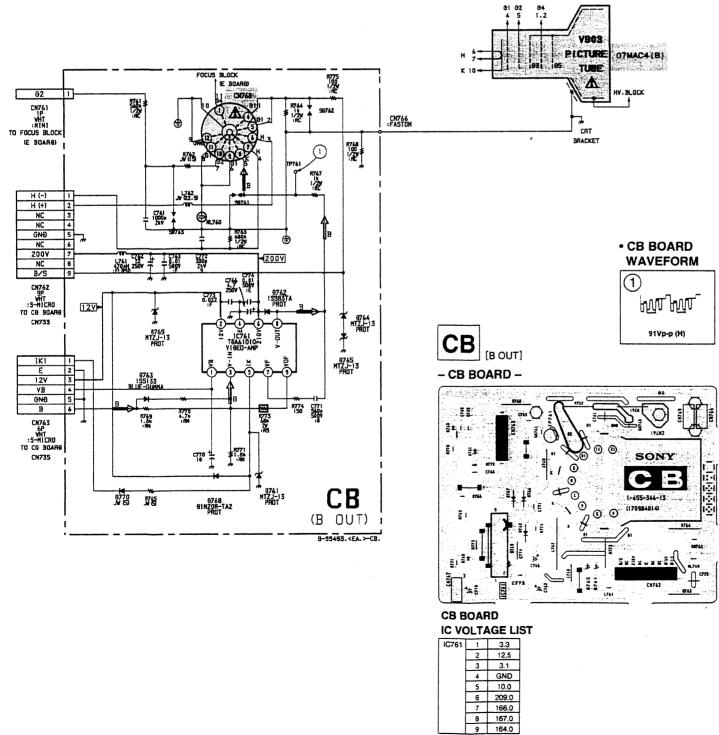


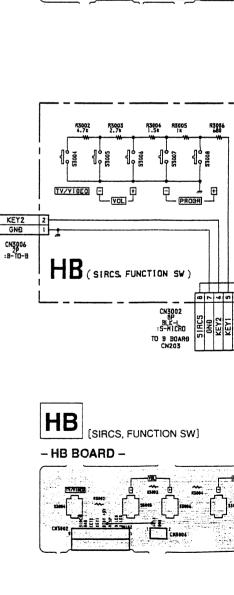


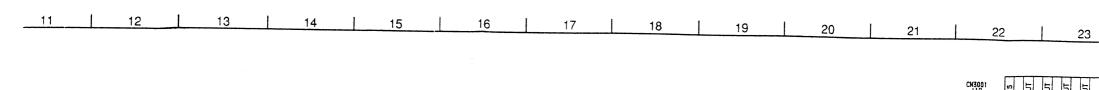


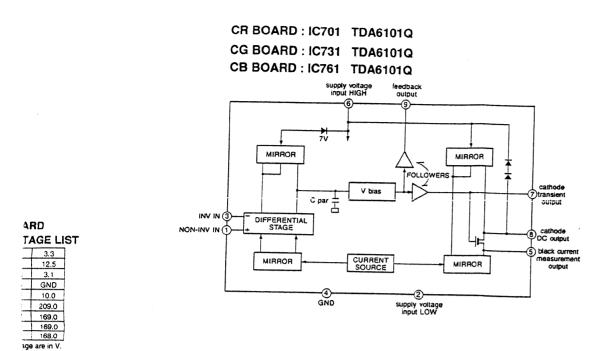


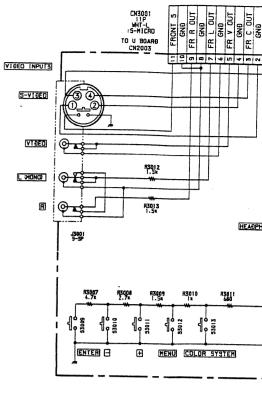


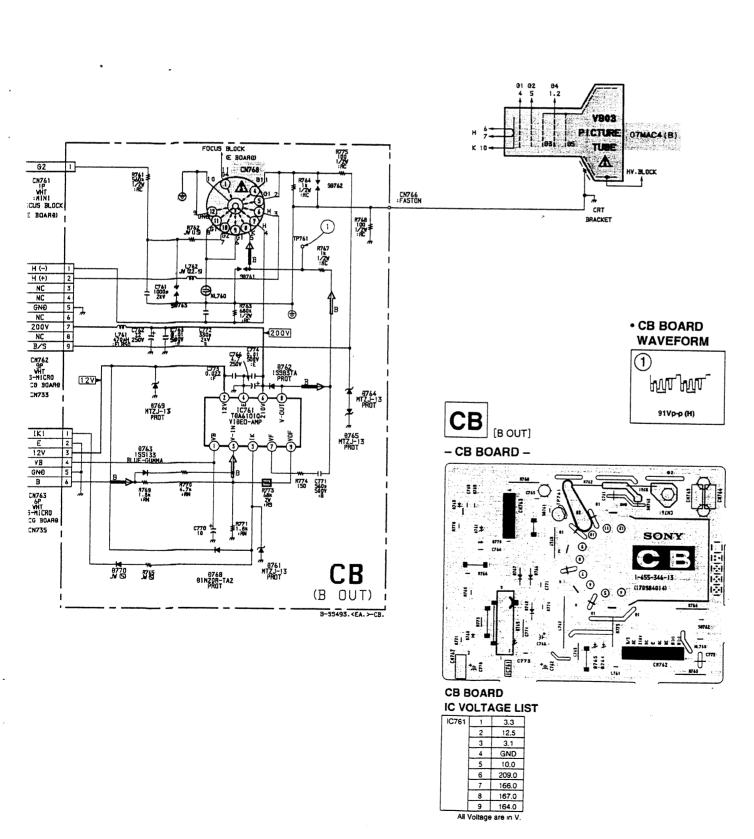


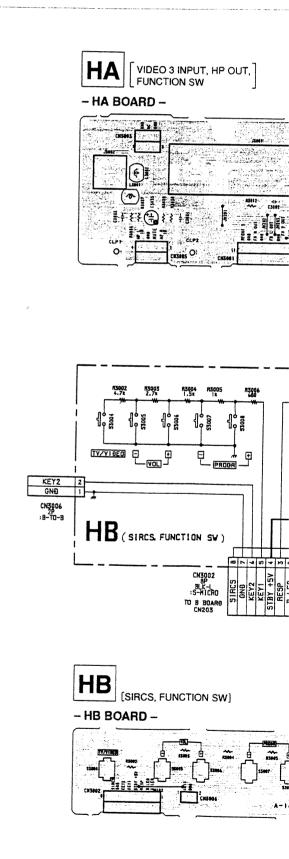


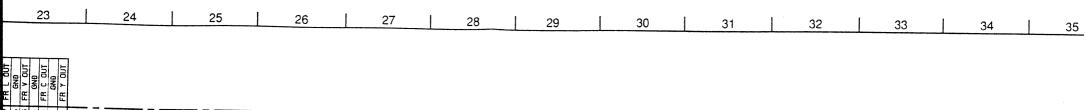


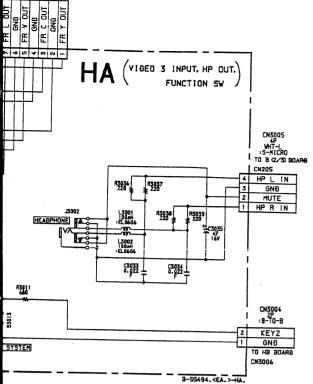


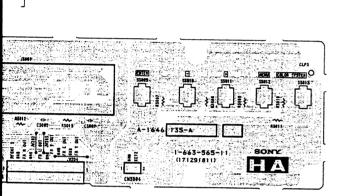

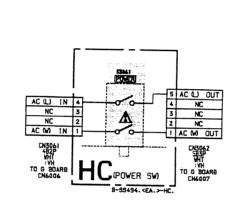


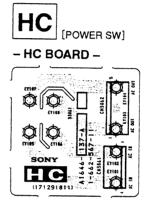


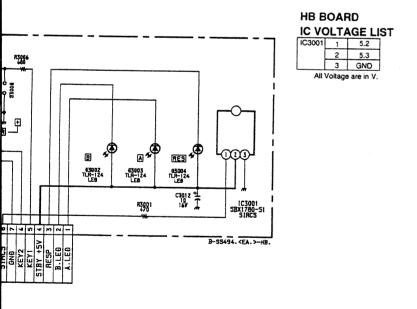


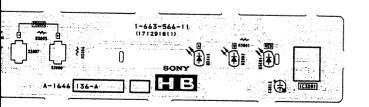

# 6-5. SEMICONDUCTORS CX20125 MARKING SIDE VIEW 8 pin CXA1855S TOP VIEW 48 pin CXD2018Q TOP VIEW 48 pin CXD2024AQ TOP VIEW a0 pin CXP85112B-613S

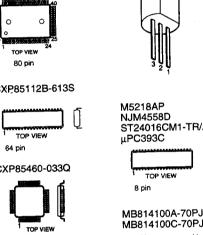

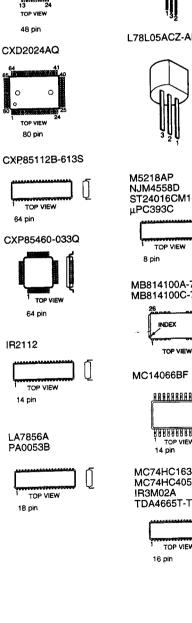

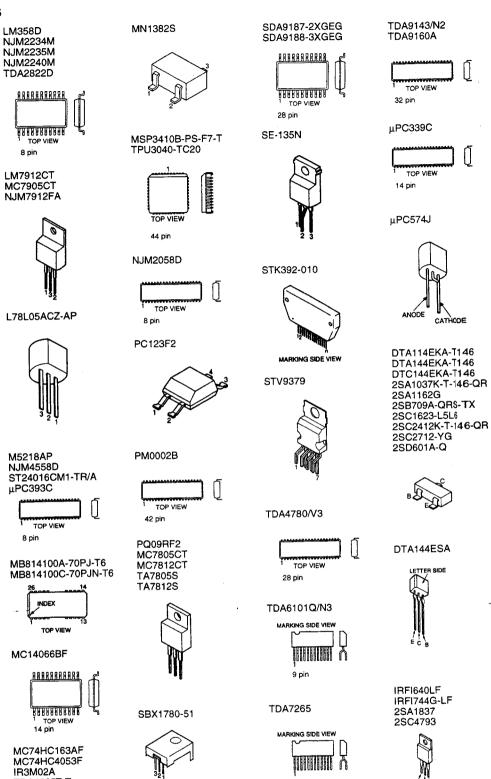

11 pin

TOP VIEW 16 pin

2SA1013-O 2SA1208



2SA1175-HFE 2SA1039A-QRSTA 2SC2785-HFE 2SC3311A-QRSTA



2SA1221-L 2SB733-34 2SB734-B4 2SD774-34



2SA1492M-OPY



2SB649A 2SC2668-LK



2SC2878-AB



2SC4632LS-CB7 2SD1887-CA



2SD2348LBSONY



BAS16



D10SC4M



D1N20R ERA82-004TPS MTZJ-13 MTZJ-3.6A MTZJ-T-77-24 RD13ES-B2 RD20ES-B1 RD3.9ES-B1 RD33ES-B2 RD5.6ES-B2 RD5.6ES-B2 RD5.6ES-B2 RD9.1ES-B1 1SS119-25 1SS119-25 1SS133T-72 11EQS04



D2S4M



D3S4M-F EGP10D ERC04-06S ERC06-15S ERC91-02 RU-IC S2LA20F



D6SB60L RBA-4068



D8LC40



DAN202K



DAP202K



D1NL20-TR EL1Z GP08D(GP08DPKG23) RGP10GPKG23 RGP02-17EL-6433 RGP02-20EL-6394 S2L40F UF4005PKG23 1SS83



ERC38-06 U05G V19E-T52



MA111



MA3039-L-(TX) MA3043-M-TX MA3051M-TX MA3075-TX MA3100H-TX MA3130H-TX RD13M-B3 RD3.9M-B1 RD5.1M-B2 RD7.5M-B2




MA3240-TX



SC802-06



TLR124

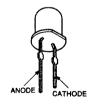

DA204K-T-147 1SS226



# SECTION 7 EXPLODED VIEWS

#### NOTE:

 Items with no part number and no description are not stocked because they are seldom required for routine service.


#### 7-1. COVER

• : 7-685-648-79 +BVTP 3X12

- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked " \* " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The componants identified by shading and mark  $\hat{\mathbb{A}}$  are critical for safety. Replace only with part number specified.

Les composants identifies par une trame et une marque & sont critiques pour la securite. Ne les remplacer que par une piece portant le numero specifie.

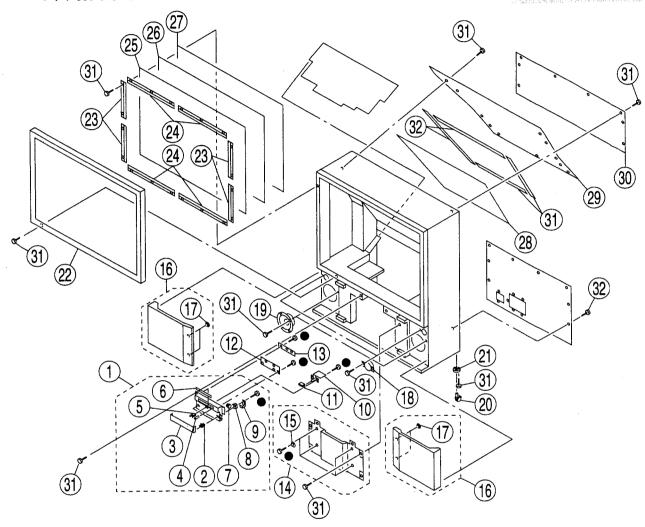

REF. NO	PART NO.	DESCRIPTION	REMARK	REF. NO	PART NO.	DESCRIPTION	REMARK
1	X-4033-941-1	PANEL (53) ASSY, CONTROL	2-9	17	4-838-438-00	LATCH	
, 1	3-703-035-11	SHAFT, LID		18	1-505-703-11	SPEAKER (5CM)	
2		LID, FINAL CONTROL		19	1-505-704-11	SPEAKER (16CM)	
3		GUIDE (L), LIGHT	İ	20	4-040-508-01	CASTER	
4		CATCHER, PUSH	į				
3	4-04/-404-01	CATCHER, I COIT	į	21	4-030-850-01	SOCKET, CASTER	
	4-055-637-01	PANEL, INDICATOR	1	22	X-4034-426-1	FRAME (61) ASSY, SCREEN	
9		DAMPER, OIL		23	4-044-727-01	HOLDER (S), SCREEN	
/		HOLDER, DAMPER		24	4-044-726-01	HOLDER (L), SCREEN	
8	4-036-513-01	SPRING, LID		25	4-058-538-01	SCREEN (61), CONTRAST	
9		HC BOARD, COMPLETE					
10	* A-1040-13/-A	HC BOARD, COMILETE		26	4-040-124-11	PLATE (L), DIFFUSION	
	4-051-888-01	POWER BUTTON		27	4-040-123-11	PLATE (F), DIFFUSION	
11		HA BOARD, COMPLETE		28	4-058-871-01		
		HB BOARD, COMPLETE		29	4-058-535-01	COVER (61), MIRROR	
	* A-1040-130*A	COVER (61) ASSY, FRONT	15		* 4-058-533-01	PLATE (61), TOP	
14	X-4034-429-1	STRIKE	. 13	50	+ 030 333 01	12.112 (01), 101	
15	4-843-806-00	SIKIKE		31	4-378-522-31	SCREW, TAPPING, HEXAGON H	EAD
	Nr. 4004 400 1	CDULE (41) ACCV CDEAVED	17		* 4-058-527-01	HOLDER, MIRROR	
16	X-4034-428-1	GRILLE (61) ASSY, SPEAKER	17	. 22	T-030-327-01	1102021,	

RM-90


RM-901

.

The componants identified by shading and mark  $\hat{J}_{L}$  are critical for safety.
Replace only with part number specified.

Les composants identifies par une trame et une marque \( \Delta\) sont critiques pour la securite. Ne les remplacer que par une piece portant le numero specifie.

#### 7-2. CHASSIS

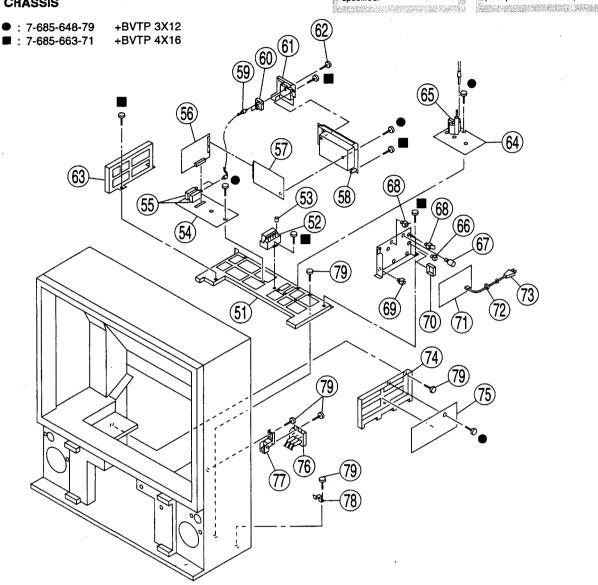

REF. NO	O. PART NO.	DESCRIPTION	REMARK	REF. NO	). PART NO.	DESCRIPTION	REMARK
51	* 4 047-949-12	BRACKET, MAIN PC BOARD		68	* 3-703-141-00	HOLDER, PCB	
		BLOCK ASSY, HIGH-VOLTAGE		69	* 3-659-682-11	HOLDER, PC BOARD	
53		CAP (Z), RUBBER	***************************************	70	* 4-316-015-00	HOLDER, WIRE	
54		A BOARD, COMPLETE					
55		TUNER, ET BTP-RG421		71		G BOARD, COMPLETE	
				72	4-389-201-11		
56	* A-1621-061-A	B BOARD, COMPLETE		73	▲ 1-574-358-12	CORD, POWER (WITH O	
57	* A-1647-004-A	U BOARD, COMPLETE					5A/250V (KP-E61SN11)
58	4-055-642-01	TERMINAL BOARD (A) (53)		,	<b>∆ 1-690-270-21</b>	CORD, POWER (WITH O	
59	* 1-555-400-00						H11(ME)/KP-E61MN11)
60	1-251-249-11	DISTRIBUTOR, RF			₾ 1-769-609-21	CORD, POWER (WITH	
							(KP-E61MH11(HK))
61		TERMINAL BOARD (B) (53)			+ 4 054 004 01	DD + GWET (D)	
62		SCREW (M3X10), P, SW (+)		74	* 4-054-834-01	BRACKET (D)	
63	* 4-054-833-01		1	75		D BOARD, COMPLETE	LVOLTACE)
64		E BOARD, COMPLETE	€thetershaubi (i.e.t.)(sait)e			RESISTOR ASSY (HIGH	
65	<b>△</b> 1-453-189-11	TRANSFORMER ASSY, FLYBACK		77	* 4-054-825-01	BRACKET, FOCUS PAC	.K
- N N N N N N N N.		(N	X-2631//A4S)	78	4-051-889-01	HOLDER, AC	
66	± 4 202 040 01	HOLDED DCB		79	4-378-522-31	SCREW, TAPPING, HEX	CAGON HEAD
67	* 4-382-848-01	HOLDER, PCB SPACER, PC BOARD SPACE		13	4-370-322-31	SCILLIT, TAIT ING, ILLA	TAGON ILLAND
0/	··· 3-08/-342-41	SPACER, PC BOARD SPACE					

RM-901 RM-901

. The componants identified by shading and mark A are critical for safety. Replace only with part number


specified.

Les composants identifies par une trame et une marque  $\Delta$  sont critiques pour la securite. Ne les remplacer que par une piece portant le numero specifie.

•

#### 7-3. PICTURE TUBE

**1** : 7-685-663-71 +BVTP 4X16

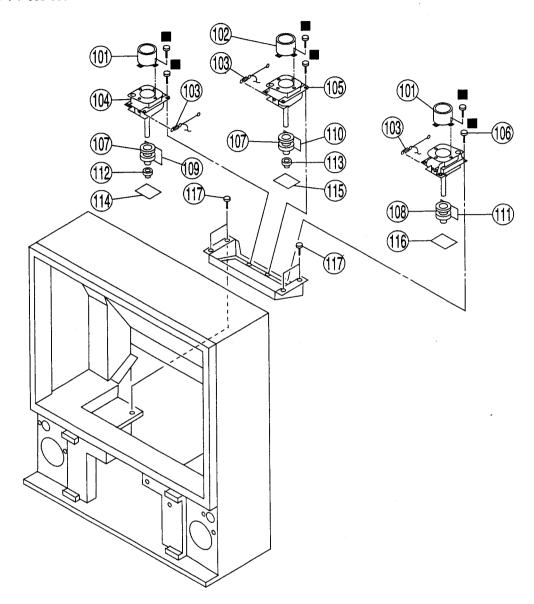

REF. NO. PART NO.	DESCRIPTION REMARK	REF. NO. PART NO.	DESCRIPTION	REMARK
101 4-040-131-01	LENS (LINNIT POINT 6)	110 * A-1390-595-A	ZG BOARD, COMPLETE	
102 4-040-131-21 103 4-048-142-11	LENS (LINNIT POINT 6)	111 * A-1390-596-A	ZB BOARD, COMPLETE	
104 △ 8-733-508-05	PICTURE TUBE 07MAC4(R)	112 Δ1-452-790-21 113 Δ1-452-790-11		
105 ▲8-733-509-05	PICTURE TUBE 07MAC2(G)	114 * A-1331-532-A	CR BOARD, COMPLETE	Profesional States on consultant contract
106 △8-733-507-05	PICTURE TUBE 07MAC4(B)	115 * A-1331-533-A	CG BOARD, COMPLETE	
107	DEFLECTION YOKE Y829PA2N (R) (G) DEFLECTION YOKE Y829PA2N2 (B) A ZR BOARD, COMPLETE	116 * A-1331-534-A	CB BOARD, COMPLETE SCREW, TAPPING, HEXAGON	N HEAD



# SECTION 8 ELECTRICAL PARTS LIST

#### NOTE:

Les composants identifies par une trame et une marque  $\triangle$  sont critiques pour la securite. Ne les remplacer que par une piece portant le numero specifie.

The componants identified by shading and mark  $\triangle$  are critical for safety. Replace only with part number specified.

- The components identified by 

  in this manual
  have been carefully factory-selected for each set
  in order to satisfy regulations regarding X-ray
  radiation. Should replacement be required,
  replace only with the value originally used.
- Items marked " \* " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.

When indicating parts by reference number, please include the board name.

#### RESISTORS

- · All resistors are in ohms
- F : nonflammable
- CAPACITORS PF : μμ F
- There are some cases the reference number on one board overlaps on the other board. Therefore, when ordering parts by the reference number, please include the board name.

		200,0000						se include the bo			,,,,,,,,,,	,
REF. NO.	PART NO.	DESCRIPTION			REMARK	REF. NO.	PART NO.	DESCRIPTION		F	REMARK	
	* A-1331-532-A	CR BOARD, CO	OMPLETE					<resistor></resistor>				
C701	1-104-664-11	<capacitor></capacitor>	47MF	20%	25V	R701 R702 R704 R706 R707	1-215-411-00 1-215-414-00 1-202-847-00 1-249-407-11 1-215-429-00	METAL SOLID CARBON	390 510 560K 150 2.2K	1% 1% 20% 5% 1%	1/4W 1/4W 1/2W 1/4W 1/4W	
C702 C703 C704 C705	1-107-662-11 1-161-754-00 1-126-768-11 1-102-050-00	CERAMIC ELECT CERAMIC	22MF 0.001MF 2200MF 0.01MF	20% 10% 20%	250V 2KV 16V 500V	R708 R709 R710 R711	1-202-883-11 1-215-436-00 1-215-427-00 1-215-427-00	METAL METAL METAL	680K 4.3K 1.8K 1.8K	20% 1% 1% 1%	1/2W 1/4W 1/4W 1/4W 2W	F
C707 C708 C709 C710 C714	1-102-129-00 1-104-664-11 1-107-651-11 1-102-157-00 1-162-115-00	ELECT ELECT CERAMIC	0.01MF 47MF 4.7MF 560PF 330PF	10% 20% 20% 10% 10%	50V 25V 250V 500V 2KV	R712 R713 R714 R719 R721	1-202-818-00 1-202-818-00 1-247-807-31 1-202-549-00	SOLID CARBON	1K 1K 100 100	5% 20% 20% 5% 20%	1/2W 1/2W 1/2W 1/4W 1/2W	r
C715 C716	1-101-005-00 1-102-050-00		0.022MF 0.01MF		50V 500V	R722	1-202-549-00		100	20%	1/2W	
		<connector></connector>						<spark gap=""></spark>				
CN702 CN703 CN704	* 1-564-510-11 * 1-564-512-11 * 1-564-512-11	PIN, CONNECTO PLUG, CONNEC PLUG, CONNEC PLUG, CONNEC	OR (5mm P TOR 7P TOR 9P TOR 9P	ITCH) I	P	SG701 SG702 SG703	1-519-422-11	GAP, SPARK GAP, SPARK GAP, SPARK				
CN705 CN706		PLUG, CONNECTAB (CONTACT				*****	*****	******	******	******	******	*
CN708 Z	1-251-179-11	SOCKET, PICTU PLUG, CONNEC	RE TUBE				* A-1331-533-A	CG BOARD, C				
		<diode></diode>						<capacitor></capacitor>				
D701 D702 D703 D704 D705	8-719-991-33 8-719-991-33 8-719-921-86	DIODE ISS133T DIODE ISS133T DIODE ISS133T DIODE MTZJ-13 DIODE I I EQS04	7-77 7-77 3			C731 C732 C733 C736 C738	1-161-754-00 1-107-662-11 1-102-050-00 1-126-964-11 1-107-651-11	ELECT CERAMIC ELECT	0.001MF 22MF 0.01MF 10MF 4.7MF	10% 20% 20% 20%	2KV 250V 500V 50V 250V	
D706 D707 D708 D713 D716	8-719-921-86 8-719-901-83 8-719-510-48	DIODE 1SS133T DIODE MTZJ-13 DIODE 1SS83 DIODE D1N20R DIODE MTZJ-13	3			C740 C741 C742 C743 C744	1-126-964-11 1-102-157-00 1-162-115-00 1-101-005-00 1-102-050-00	CERAMIC CERAMIC CERAMIC	10MF 560PF 330PF 0.022MF 0.01MF	20% 10% 10%	50V 500V 2KV 50V 500V	
D717	8-719-921-86	DIODE MTZJ-13	3					<connector></connector>	>			
		<ic></ic>						PIN, CONNECTO		ITCH) I	P	
<b>IC</b> 701	8-759-346-42	IC TDA6101Q/N	13			CN733 CN734	* 1-564-512-11 1-564-511-11	PLUG, CONNEC PLUG, CONNEC PLUG, CONNEC PLUG, CONNEC	CTOR 9P CTOR 8P			
		<coil></coil>				CN736	1-695-915-11	TAR (CONTACT	<b>r</b> )	81612 C- *		arn;
L701	1-408-429-00	INDUCTOR 470	UH			CN738 Z	1-251-179-11	SOCKET, PICTU	JRE TUBE			糖
		<neon lamp=""></neon>				; ; ; ; ;						
NL701	1-519-108-99	LAMP, NEON				l						

### KP-E61MH11/E61MN11/E61SN11

The componants identified by shading and mark  $\Delta$  are critical for safety. Replace only with part number specified.

Les composants identifies par une trame et une marque  $\hat{\mathbb{A}}$  sont critiques pour la securite. Ne les remplacer que par une piece portant le numero specifie.



REF. NO.	PART NO.	DESCRIPTION			EMARK	REF. NO.	PART NO.	DESCRIPTION		R	EMARK	<u>-</u>
		<diode></diode>				D763 D764	8-719-991-33 8-719-921-86	DIODE 1SS133T- DIODE MTZJ-13	77			
D731	8-719-921-86 9 719 901-83	DIODE MTZJ-13 DIODE 18883				D765		DIODE MTZJ-13			٠	
D732 D733 D736	8-719-991-33	DIODE 188133T- DIODE D1N20R	-77			D768 D769		DIODE D1N20R DIODE MTZJ-13				
D737	8-719-921-86	DIODE MTZJ-13						10				
		<ic></ic>				105(1	0.750.246.42	<ic></ic>	•			
IC731	8-759-346-42	IC TDA6101Q/N	3			IC761	8-759-346-42	IC TDA6101Q/N3	•			
								<coil></coil>				
	1 400 400 00	<coil></coil>	mu			L761	1-408-429-00	INDUCTOR 470U	J <b>H</b>			
L731	1-408-429-00	INDUCTOR 470	OH					<neon lamp=""></neon>				
		<neon lamp=""></neon>			) ) ) )	NL760	1-519-108-99	LAMP, NEON				
NL731	1-519-108-99	LAMP, NEON			1 1 1 1							
		<resistor></resistor>						<resistor></resistor>	FCOV	20%	1/2W	
R731	1-202-847-00	SOLID	560K	20%	1/2W	R761 R763	1-202-847-00 1-202-883-11	SOLID	680K	20% 20% 20%	1/2W 1/2W 1/2W	
R733 R734	1-202-883-11 1-202-818-00	SOLID	680K 1K	20% 20%	1/2W 1/2W	R764 R767	1-202-818-00 1-202-818-00	SOLID	1 <b>K</b>	20% 20% 20%	1/2W 1/2W	
R735 R737	1-249-407-11 1-202-818-00		150 1K	5% 20%	1/4W 1/2W	R768 R769	1-202-549-00 1-215-427-00		1.8K	1%	1/4W	
R738	1-202-549-00		100	20% 1%	1/2W 1/4W	R770 R771	1-215-427-00 1-215-437-00 1-215-427-00	METAL	4.7K 1.8K	1% 1%	1/4W 1/4W	
R739 R740	1-215-427-00 1-215-427-00	METAL	1.8K 1.8K 220	1% 5%	1/4W 1/4W	R773 R774	1-215-903-11 1-249-407-11	METAL OXIDE		5% 5%	2W 1/4W	F
R741 R742	1-247-815-91 1-215-903-11	METAL OXIDE		5%	2W F	R775	1-202-549-00		100	20%	1/2W	
R743	1-215-481-00	METAL	330K	1%	1/4W							
		<spark gap=""></spark>				007(1	1 510 422 11	<spark gap=""> GAP, SPARK</spark>				
SG731	1-519-422-11	GAP, SPARK				SG761 SG762 SG763	1-519-422-11	GAP, SPARK GAP, SPARK				
SG732 SG733		GAP, SPARK GAP, SPARK				30703	1-317-422-11	OM, Strikk				
						******	*****	******	*****	*****	:*****	***
*****	*****	*********	*****	******	******		* A-1390-594-A	ZR BOARD, CO	OMPLETE			
	* A-1331-534-	A CB BOARD, C	OMPLETE				4 202 054 11			١		
						1 1 1 1 1	4-382-854-11	SCREW (M3X10	), P, SW (+	,		
		<capacitor></capacitor>		100%	283/			<capacitor></capacitor>				
C761 C762	1-161-754-00 1-107-662-11	ELECT	0.001MF 22MF 0.01MF	10% 20%	2KV 250V 500V	C1401 C1402	1-162-115-00 1-162-115-00		330PF 330PF	10% 10%	2KV 2KV	
C763 C766	1-107-651-11		4.7MF 10MF	20% 20%	250V 50V	C1403 C1404	1-102-978-00 1-107-638-11	CERAMIC	220PF 33MF	5% 20%	50V 160V	
C770	1-126-964-11	CERAMIC	560PF	10%	500V	C1405	1-104-665-11		100MF	20%	25V	
C771 C772 C773	1-162-115-00	CERAMIC CERAMIC CERAMIC	330PF 0.022MF	10%	2KV 50V	C1406 C1407	1-107-370-11 1-104-665-11	ELECT	0.1MF 100MF	10%	200V 25V	
C774		CERAMIC	0.01MF		500V	C1408 C1409	1-107-362-11 1-107-667-11	ELECT	0.0047MF 2.2MF	20%	200V 160V 200V	
		<connector< td=""><td>&gt;</td><td></td><td></td><td>C1410</td><td>1-107-362-11</td><td></td><td>0.0047MF 0.001MF</td><td>10%</td><td>50V</td><td></td></connector<>	>			C1410	1-107-362-11		0.0047MF 0.001MF	10%	50V	
CN761	* 1-508-784-2	I PIN, CONNECT	OR (5mm I	PITCH) I	P	C1411 C1412	1-137-364-11 1-137-364-11 1-161-830-00	FILM	0.001MF 0.0047MF	5%	50V 500V	
CN762 CN763	* 1-564-509-1	PLUG, CONNE PLUG, CONNE	CTOR 6P			C1413 C1414	1-101-830-00 1-104-661-91 1-102-947-00	ELECT	330MF 10PF	20% 0.5 <b>PF</b>	16V 50V	
CN766 CN768	1-695-915-1 ▲1-251-179-1	I TAB (CONTAC I SOCKET, PICT	URE TUBE			C1415	1-102-947-00		100PF	5%	50V	
		<diode></diode>				C1710	1 102-913-00					
D741	2 710 021 0	<pre><diode> 6 DIODE MTZJ-I</diode></pre>	13					<connector:< td=""><td></td><td></td><td></td><td></td></connector:<>				
D761 D762		3 DIODE ISS83				CN1411	* 1-580-689-11	PIN, CONNECT	OR (PC BC	ARD) 4		



REF. NO.	PART NO.	DESCRIPTION		į	REMARK	.	REF. NO.	PART NO.	DESCRIPTION		R	EMARK	-
CN1413 CN1414	*1-564-506-11 *1-564-509-11	PLUG, CONNEC PLUG, CONNEC PLUG, CONNEC PLUG, CONNEC	TOR 3P TOR 6P					•	zb Board, co **************	OMPLETE	*****	*****	**
CN1416	1-695-915-11	TAB (CONTACT	)						<capacitor></capacitor>				
		<diode></diode>					C1461 C1462	1-162-115-00 1-162-115-00		330PF 330PF	10% 10%	2KV 2KV	
D1401 D1402		DIODE RD39ESE DIODE RD39ESE					C1402	1-102-113-00					
D1402	0 /15 110 00						ON11471	* 1 500 600 11	<connector> PIN, CONNECTOR</connector>		A D (5)) A D		
O1401	8 720-017-06	<transistor> TRANSISTOR 25</transistor>					CN1472	* 1-564-507-11	PLUG, CONNEC PLUG, CONNEC	TOR 4P	-(KD) +1		
Q1401 Q1402 Q1403	8-729-017-05	TRANSISTOR 25 TRANSISTOR 25	SA1837						<resistor></resistor>				
		<resistor></resistor>					R1461	1-249-414-11	CARBON	560	5%	1/4W	
R1401	1-249-414-11	CARBON	560 560	5% 5%	1/4W 1/4W		R1462 R1463 R1464	1-249-414-11 1-202-822-00 1-202-822-00	SOLID	560 2.2K 2.2K	5% 20% 20%	1/4W 1/2W 1/2W	
R 1402 R 1403 R 1404	1-249-414-11 1-202-822-00 1-202-822-00	SOLID	2.2K 2.2K	20% 20%	1/2W 1/2W		R1465	1-216-475-11	METAL OXIDE	120	5%	3W	F
R1405	1-249-417-11	CARBON	1K	5%	1/4W 3W	-	R1466	1-216-475-11	METAL OXIDE	120	5%	3W	F
R1406 R1407 R1408	1-216-479-11 1-249-400-11 1-249-384-11		39 1.8	5% 5% 5%	1/4W 1/4W	F F	******	*****	*****	*****	*****	*****	**
R1409 R1410	1-249-384-11 1-260-311-11	CARBON	1.8 39	5% 5%	1/4W 1/2W	F		* A-1621-061-A	B BOARD, CO	MPLETE			
R1411 R1412	1-249-417-11 1-249-414-11		1 <b>K</b> 560	5% 5%	1/4W 1/4W	F							
R1413 R1414	1-249-432-11 1-249-432-11	CARBON CARBON	18K 18K	5% 5%	1/4W 1/4W	-	CI	1 164 222 11	<capacitor> CERAMIC CHIP</capacitor>	OUME	10%	50V	
R1415 R1416	1-249-414-11	METAL OXIDE	560 120	5% 5%	1/4W 2W	F	C1 C2 C3	1-126-933-11	ELECT CERAMIC CHIP	100MF	20% 10%	16V 50V	
R1417 R1418	1-216-475-11 1-249-377-11	METAL OXIDE CARBON	120 0.47	5% 5%	3W 1/4W	F F	C4 C5		CERAMIC CHIP		10% 10%	50V 50V	
R1419 R1420	1-249-409-11 1-216-475-11	CARBON METAL OXIDE	220 120	5% 5%	1/4W 3W	F	C6 C7		CERAMIC CHIP CERAMIC CHIP		10% 10%	25V 50V	
R1421	1-249-417-11	CARBON	1K	5%	1/4W		C8 C9	1-163-089-00 1-126-967-11	CERAMIC CHIP ELECT	6PF 47MF	0.5PF 20%	50V 16V	
		******	******	*****	*****	**	C10 C11		CERAMIC CHIP		10% 10%	50V 25V	
****	* A-1390-595-	A ZG BOARD, C	OMPLETE				C12 C13	1-163-231-11	CERAMIC CHIP	15PF 15PF	5% 5%	50V 50V	
		******	*******	•			C14 C15	1-164-182-11 1-164-004-11	CERAMIC CHIP CERAMIC CHIP	0.0033MF 0.1MF	10%	50V 25V	
		<capacitor></capacitor>					C16 C17	1-164-004-11	CERAMIC CHIP	0.1MF	10% 10%	25V 25V	
C1431 C1432	1-162-115-00 1-162-115-00	CERAMIC	330PF 330PF	10% 10%	2KV 2KV		C18 C19	1-126-967-11	CERAMIC CHIF ELECT CERAMIC CHIF	47 <b>MF</b>	10% 20%	25V 16V 16V	
C1433	1-102-973-00	CERAMIC	100PF	5%	50V		C20 C21	1-164-346-11	CERAMIC CHIE	1MF		16V	
		<connector:< td=""><td></td><td></td><td>-</td><td></td><td>C22 C23</td><td>1-126-959-11</td><td></td><td>0.47MF</td><td>10% 20% 10%</td><td>25V 50V 50V</td><td></td></connector:<>			-		C22 C23	1-126-959-11		0.47MF	10% 20% 10%	25V 50V 50V	
CN1442	* 1-564-507-11	PIN, CONNECTO PLUG, CONNECTO PLUG, CONNECTO	CTOR 4P	)ARD) 4	,P		C24 C25		CERAMIC CHIE CERAMIC CHIE		10%	50V	
		PLUG, CONNEC					C26 C27	1-164-004-11	CERAMIC CHI	0.1MF	10% 10%	50V 25V 50V	
		<resistor></resistor>					C28 C29 C30	1-126-963-11	CERAMIC CHII ELECT CERAMIC CHII	4.7MF	10% 20% 10%	50V 50V 25V	
R1431 R1432	1-249-414-11 1-249-414-11	CARBON	560 560	5% 5%	1/4W 1/4W		C31	1-126-935-11	ELECT	470MF	20%	16V	
R1433 R1434 R1435	1-202-822-00 1-202-822-00		2.2K 2.2K 120	20% 20% 5%	1/2W 1/2W 3W	F	C32 C33 C34	1-164-232-11	CERAMIC CHII CERAMIC CHII CERAMIC CHII	0.01 <b>MF</b>	10% 10%	25V 50V 25V	
R1435 R1436		METAL OXIDE		5%	3W	F	C35	1-126-964-11	ELECT	10MF	20%	50V	
R1437	1-249-417-1		1 <b>K</b>	5%	1/4W		C36	1-164-232-11	CERAMIC CHII	P 0.01MF	10%	50 <b>V</b>	

В

REF. NO.	PART NO.	DESCRIPTION		REMARK	REF. NO.	PART NO.	DESCRIPTION	٠	REMARK
C37 C38 C39 C40	1-164-004-11 1-164-004-11 1-164-232-11	CERAMIC CHIP 0.1M CERAMIC CHIP 0.1M CERAMIC CHIP 0.1M CERAMIC CHIP 0.0M	MF 10% MF 10% IMF 10%	25V 25V 50V	C114 C115 C116 C117 C118	1-126-960-11 1-163-133-00 1-164-004-11	CERAMIC CHIP 100PF ELECT 1MF CERAMIC CHIP 470PF CERAMIC CHIP 0.1MF CERAMIC CHIP 0.1MF	5% 20% 5% 10% 10%	50V 50V 50V 25V 25V
C41 C42 C43 C44 C45	1-164-232-11 1-126-964-11 1-126-967-11	CERAMIC CHIP 0.01 CERAMIC CHIP 0.01 ELECT 10M ELECT 47M CERAMIC CHIP 0.01	IMF 10% MF 20% MF 20%	50V 50V 16V	C119 C120 C121 C122 C123	1-163-235-11 1-163-235-11 1-163-009-11	CERAMIC CHIP 470PF CERAMIC CHIP 22PF CERAMIC CHIP 22PF CERAMIC CHIP 0.001MF CERAMIC CHIP 1MF	5% 5% 5% 10%	50V 50V 50V 50V 16V
C46 C47 C48 C49 C50	1-126-967-11 1-126-967-11 1-126-933-11 1-164-004-11 1-164-232-11	ELECT 47N	MF 20% MF 20% MF 10%	16V 16V 25V	C125 C126 C127 C128 C129	1-126-964-11	CERAMIC CHIP 0.0022MF CERAMIC CHIP 27PF	20%	50V 50V 50V 50V 50V
C51 C52 C53 C54 C55	1-164-004-11		MF 10% MF 10%	25V 25V 16V	C130 C201 C202 C203 C204	1-163-038-00 1-126-964-11 1-126-964-11		5% 20% 20%	50V 25V 50V 50V 25V
C56 C57 C58 C59 C60	1-164-232-11 1-126-964-11 1-163-251-11	CERAMIC CHIP 0.0 CERAMIC CHIP 0.0 ELECT 10N CERAMIC CHIP 10C CERAMIC CHIP 10F	1MF 10% MF 20% )PF 5%	50V 50V 50V	C205 C206 C207 C208 C209	1-163-235-11 1-163-259-91 1-163-989-11 1-163-038-00	CERAMIC CHIP 22PF CERAMIC CHIP 220PF CERAMIC CHIP 0.033MF CERAMIC CHIP 0.1MF CERAMIC CHIP 10PF	5% 5% 10% 0.5PF	50V 50V 25V 25V 50V
C61 C62 C63 C64 C65	1-164-004-11	CERAMIC CHIP 821	MF 10% OMF 20% PF 5%	5 25V 5 16V 50V	C210 C211 C212 C213 C214	1-163-227-11 1-163-259-91 1-163-038-00 1-163-031-11	CERAMIC CHIP 10PF CERAMIC CHIP 220PF CERAMIC CHIP 0.1MF CERAMIC CHIP 0.01MF CERAMIC CHIP 10PF	0.5PF 5%	50V 25V 50V
C66 C67 C68 C69 C70	1-164-004-1 1-126-933-1 1-126-933-1 1-126-967-1 1-126-933-1	ELECT 100 ELECT 471	MF 109 0MF 209 0MF 209 MF 209 0MF 209	6 16V 6 16V 6 16V	C215 C216 C217 C219 C220	1-163-259-91 1-163-227-11	CERAMIC CHIP 220PF CERAMIC CHIP 10PF CERAMIC CHIP 0.1MF ELECT 1MF	5% 0.5PF 20% 20%	50V 50V 25V 50V 50V
C71 C73 C75 C78 C80	1-126-935-1 1-163-251-1 1-164-004-1	1 CERAMIC CHIP 0.4 1 ELECT 470 1 CERAMIC CHIP 100 1 CERAMIC CHIP 0.1 1 CERAMIC CHIP 0.1	OMF 20% OPF 5% IMF 10%	50V 6 25V	C221 C223 C224 C225 C226	1-126-967-11 1-164-346-11 1-126-964-11 1-164-004-11	ELECT 47MF CERAMIC CHIP IMF	20% 20% 10% 10%	16V 16V 50V 25V 25V
C81 C82 C83 C84 C85	1-164-004-1 1-126-967-1 1-164-004-1	1 CERAMIC CHIP 0.1 1 CERAMIC CHIP 0.1 1 ELECT 47 1 CERAMIC CHIP 0.1 1 CERAMIC CHIP 0.1	MF 109 MF 209 IMF 109	% 25V % 16V % 25V	C227 C228 C229 C230 C231	1-163-229-1 1-163-231-1 1-163-031-1 1-126-967-1	CERAMIC CHIP 12PF CERAMIC CHIP 15PF CERAMIC CHIP 0.01MF	5% 5% 20% 5%	50V 50V 50V 16V 50V
C86 C87 C88 C89 C90	1-163-235-1 1-163-231-1 1-164-004-1	1 CERAMIC CHIP 15 1 CERAMIC CHIP 22 1 CERAMIC CHIP 15 1 CERAMIC CHIP 0.1 1 CERAMIC CHIP 0.1	PF 5% PF 5% 1MF 10°	50V 50V % 25V	C232 C233 C236 C237 C238	1-163-121-0 1-163-121-0 1-164-004-1	O CERAMIC CHIP 150PF O CERAMIC CHIP 150PF I CERAMIC CHIP 0.1MF	5% 5% 10% 20% 5%	50V 50V 25V 50V 50V
C91 C94 C95 C96 C97	1-163-809-1 1-164-004-1	O CERAMIC CHIP 0.0 1 CERAMIC CHIP 0.0 1 CERAMIC CHIP 0.1 1 CERAMIC CHIP 22 1 CERAMIC CHIP 0.0	047MF 10 1MF 10 2PF 5%	% 25V % 25V 5 50V	C239 C241 C242 C243 C245	1-163-127-0 1-163-243-1 1-126-956-9 1-126-963-1	0 CERAMIC CHIP 270PF 1 CERAMIC CHIP 47PF 1 ELECT 0.1MF	5% 5% 20% 20% 5%	50V 50V 50V 50V 50V
C99 C100 C101 C102 C103	1-164-004-1 1-164-004-1 1-164-004-1	OCERAMIC CHIP 0. CERAMIC CHIP 22	1MF 10 1MF 10 1MF 10	% 25V % 25V	C246 C247 C249 C250 C251	1-163-251-1 1-163-251-1 1-126-960-1	CERAMIC CHIP 100PF CERAMIC CHIP 100PF ELECT IMF CERAMIC CHIP 0.01MF	5% 5% 20% 20%	50V 50V 50V 50V 50V
C104 C105 C106 C107 C108	1-164-004- 1-164-005- 1-164-004-	11 CERAMIC CHIP 0. 11 CERAMIC CHIP 0. 11 CERAMIC CHIP 0. 11 CERAMIC CHIP 0. 11 CERAMIC CHIP 0.	.1MF 10 .47MF .1MF 10	25V	C253 C254 C255 C256 C257	1-163-035-0 1-163-035-0 1-163-035-0	0 CERAMIC CHIP 0.022MI 00 CERAMIC CHIP 0.047MI 00 CERAMIC CHIP 0.047MI 00 CERAMIC CHIP 0.047MI 11 CERAMIC CHIP 1MF	7	50V 50V 50V 50V 16V
C109 C110 C111 C112 C113	1-126-933- 1-164-005- 1-164-004-	11 CERAMIC CHIP 0. 11 ELECT 10 11 CERAMIC CHIP 0. 11 CERAMIC CHIP 0. 11 CERAMIC CHIP 0.	00MF 20 .47MF .1MF 10	25V % 25V	C258 C259 C260 C261	1-110-501-1 1-126-960-1	I CERAMIC CHIP 0.33MF I ELECT 1MF I CERAMIC CHIP 0.1MF	10% 20% 10% 20%	50V 25V



REF. NO.	PART NO.	DESCRIPTION			REMARK	REF. NO.	PART NO.	DESCRIPTION		REMARK
C262	1-163-038-00	CERAMIC CHIP	0.1 <b>MF</b>		25V	C335		CERAMIC CHIP 1MF CERAMIC CHIP 680PF	10%	16V 50V
C263		CERAMIC CHIP			25V	C336 C337		CERAMIC CHIP 680PF	10%	. 50V
C264 C266 C267 C268				5% 20% 20%	25V 50V 50V 50V	C338 C339 C340 C341	1-164-161-11 1-163-007-11	CERAMIC CHIP 100PF CERAMIC CHIP 0.0022MF CERAMIC CHIP 680PF CERAMIC CHIP 330PF	10% 10%	50V 50V 50V 50V
C269 C270 C271 C272		ELECT ELECT CERAMIC CHIP		20% 20% 20% 10%	50V 16V 16V 25V	C342 C343 C344	1-163-096-00	CERAMIC CHIP 330PF CERAMIC CHIP 13PF	20% 10% 5%	50V 50V 50V
C273		CERAMIC CHIP		5% 5%	50V 50V	C345 C347 C348	1-163-231-11	CERAMIC CHIP 0.0022MF CERAMIC CHIP 15PF CERAMIC CHIP 0.01MF	10% 5%	50V 50V 50V
C274 C275 C276 C277 C278	1-163-038-00 1-126-964-11 1-164-232-11	CERAMIC CHIP	0.1MF 10MF 0.01MF	20% 10%	25V 50V 50V 25V	C349 C350 C351 C352	1-163-007-11 1-164-005-11	CERAMIC CHIP 680PF CERAMIC CHIP 0.47MF CERAMIC CHIP 0.01MF	10% 20%	50V 25V 50V 50V
C279 C280		CERAMIC CHIP CERAMIC CHIP			16V 16V	C353	1-163-031-11	CERAMIC CHIP 0.01MF		50V
C281 C282 C283	1-164-005-11	CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	0.47MF		16V 25V 25V	C354 C355 C356 C358	1-164-004-11	ELECT 10MF CERAMIC CHIP 0.47MF CERAMIC CHIP 0.1MF CERAMIC CHIP 0.47MF	20% 10%	50V 25V 25V 25V
C284 C285	1-164-346-11	CERAMIC CHIP CERAMIC CHIP	1MF		25V 16V	C359		CERAMIC CHIP 470PF	10%	50V 50V
C286 C287 C288	1-164-346-11 1-164-004-11	CERAMIC CHIP CERAMIC CHIP	IMF 0.1MF	10%	16V 16V 25V	C360 C361 C362 C363	1-164-005-11 1-126-967-11 1-126-964-11	ELECT 10MF	10% 20% 20%	25V 16V 50V
C289 C290 C291	1-126-963-11 1-126-301-11 1-126-964-11	ELECT	4.7MF 1MF 10MF	20% 20% 20%	50V 50V 50V	C364 C365	1-164-004-11	CERAMIC CHIP 0.1MF ELECT 4.7MF	10%	25V 50V
C293 C294		CERAMIC CHIP		20%	25V 25V	C366 C367	1-164-161-11	CERAMIC CHIP 0.0022MF CERAMIC CHIP 0.47MF		50V 25V 16V
C296 C297	1-163-031-11 1-126-967-11	CERAMIC CHIP	0.01MF 47MF	20%	50V 16V	C368 C369		CERAMIC CHIP 0.22MF	20%	25V
C298 C299 C300	1-126-935-11	ELECT CERAMIC CHIP	470MF	20% 5% 20%	16V 50V 50V	C370 C371 C372 C374	1-126-964-11 1-164-004-11 1-126-964-11 1-126-964-11	CERAMIC CHIP 0.1MF ELECT 10MF	20% 10% 20% 20%	50V 25V 50V 50V
C301 C302	1-163-113-00	CERAMIC CHIP CERAMIC CHIP	68PF	5%	50V 50V	C375		CERAMIC CHIP 0.47MF		25V
C303 C304 C306	1-126-967-11	CERAMIC CHIP ELECT CERAMIC CHIP	47 <b>MF</b>	5% 20% 10%	50V 16V 25V	C376 C377 C378 C379			10% 20% 20%	25V 50V 50V 16V
C307 C308	1-163-241-11	CERAMIC CHIP CERAMIC CHIP	39PF	5%	25V 50V	C380		CERAMIC CHIP 0.001MF	10%	50V
C309 C310 C311		CERAMIC CHIP CERAMIC CHIP ELECT		5% 20%	50V 50V 16V	C382 C385 C387 C388	1-216-295-00 1-163-038-00	CONDUCTOR, CHIP CONDUCTOR, CHIP CERAMIC CHIP 0.1MF CERAMIC CHIP 0.001MF	10%	25V 50V
C312 C313	1-163-038-00	CERAMIC CHIP CERAMIC CHIP	0.1MF		50V 25V	C389		CERAMIC CHIP 0.001MF	10%	50V
C314 C315 C316	1-126-935-11 1-126-933-11 1-126-960-11	ELECT	470MF 100MF 1MF	20% 20% 20%	16V 16V 50V	C391 C416 C538 C539	1-163-038-00	CERAMIC CHIP 0.01MF CERAMIC CHIP 0.1MF CERAMIC CHIP 100PF ELECT 47MF	5% 20%	50V 25V 50V 16V
C317 C318	1-163-007-11	CERAMIC CHIP	680PF	10%	25V 50V	C540		CERAMIC CHIP 0.01MF	100	50V
C320 C321 C322	1-126-933-11	CERAMIC CHIP ELECT CERAMIC CHIP	100MF	20% 5%	25V 16V 50V	C541 C542 C543 C544	1-126-301-11	CERAMIC CHIP 220PF	20% 10% 20%	50V 50V 50V 16V
C323 C324	1-126-934-11 1-163-113-00	ELECT CERAMIC CHIP	220MF 68PF	20% 5%	16V 50V	C544 C545		CERAMIC CHIP 0.01MF	2070	50V
C325 C326 C327	1-164-005-11 1-163-251-11	CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	0.47MF 100PF	5%	25V 50V 50V	C546 C547 C548 C549	1-126-301-11 1-163-017-00	CERAMIC CHIP 220PF ELECT 1MF CERAMIC CHIP 0.0047MF CERAMIC CHIP 100PF	5% 20% 10% 5%	50V 50V 50V 50V
C328 C329		CERAMIC CHIP		20% 10%	50V 25V	C601	1-164-232-11	CERAMIC CHIP 0.01MF	10%	50V
C330 C331 C332	1-126-964-11 1-164-161-11 1-126-964-11	CERAMIC CHIP	10MF 0.0022MF 10MF	20% 10% 20%	50V 50V 50V	C602 C603 C604 C605	1-163-009-11 1-163-009-11	CERAMIC CHIP 0.001MF CERAMIC CHIP 0.001MF CERAMIC CHIP 0.001MF CERAMIC CHIP 0.0022MF	10% 10% 10%	50V 50V 50V 50V
C333 C334	1-126-964-11 1-164-346-11	ELECT CERAMIC CHIP	10MF 1MF	20%	50V 16V	C606		CERAMIC CHIP 0.1MF	10%	



nn= 110	DA DT NO	DESCRIPTION		REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
REF. NO.	PART NO. 1-110-501-11	CERAMIC CHIP 0.33MF	10%	16V	D223		DIODE DAN202K	
C608 C609	1-163-037-11	CERAMIC CHIP 0.022MF ELECT 47MF	10% 20%	50V 50V	D224 D225		DIODE DAN202K DIODE DAN202K	*
C610 C611	1-164-232-11 1-164-232-11	CERAMIC CHIP 0.01MF CERAMIC CHIP 0.01MF	10% 10%	50V 50V	D226 D227		DIODE DAN202K DIODE DAN202K	
C612 C613	1-164-161-11	CERAMIC CHIP 0.0022MF CERAMIC CHIP 0.0022MF	10% 10%	50V 50V	D602	8-719-914-43	DIODE DAN202K	
C614 C615	1-163-031-11 1-163-031-11	CERAMIC CHIP 0.01MF CERAMIC CHIP 0.01MF		50V 50V			<delay line=""></delay>	
C616	1-126-967-11		20%	50V 25V	DL201	1-415-810-11	DELAY LINE	
C617 C618 C620	1-164-222-11 1-164-161-11 1-126-960-11	CERAMIC CHIP 0.22MF CERAMIC CHIP 0.0022MF FLECT 1MF	10% 20%	50V 50V			<ferrite bead=""></ferrite>	
C621 C622	1-163-251-11	CERAMIC CHIP 100PF CERAMIC CHIP 0.0039MF	5% 5%	50V 25V	FB1 FB2	1-412-911-11	INDUCTOR, FERRITE BEAD INDUCTOR, FERRITE BEAD	
C623	1-126-960-11 1-126-934-11	ELECT 1MF FLECT 220MF	20% 20%	50V 16V	FB2	1-412-911-11	INDUCTOR, I BRRITE 32. 12	
C624 C625 C626	1-164-695-11	CERAMIC CHIP 0.0022MF CERAMIC CHIP 820PF		50V 50V			<filter></filter>	
C627	1-164-232-11	CERAMIC CHIP 0.01MF	10%	50V	FL1 FL2	1-236-620-11	FILTER, LOW PASS FILTER, LOW PASS FILTER, LOW PASS	
C628 C629	1-113-503-11	CERAMIC CHIP 0.0018MF CERAMIC CHIP 0.0039MF CERAMIC CHIP 0.0047MF	5%	50V 25V 50V	FL3 FL201		FILTER, EMI	
C630 C631 C632	1-163-127-00	CERAMIC CHIP 0.0047MI CERAMIC CHIP 270PF CERAMIC CHIP 100PF	5% 5%	50V 50V		•	<ic></ic>	
C032	1 100 201 11				IC1 IC2		IC CXD2024AQ IC NJM2240M	
GE101	1 400 227 00	<pre><filter> ) TRAP, CERAMIC (6.5MHZ)</filter></pre>	3		IC2 IC3 IC4	8-759-439-58	IC TDA9143/N2 IC NJM2235M	
CF401	1-409-327-00	TRAI, CERAMIC (C.S.M.E.	••		IC5		IC TDA4665T-T	
		<connector></connector>	CERT A	(CLE)	IC6 IC7 IC8	8-759-248-15	IC SDA9188-3XPGEG IC SDA9187-2XGEG IC TDA9160A	
CN1 CN2	* 1-566-367-11	CONNECTOR, HINGE (RE CONNECTOR, HINGE (RE PLUG, CONNECTOR 6P	CEPTA	ACLE)	IC10 IC201	8-759-288-85	IC TDA4665T-T IC TPU3040-TC20	
CN3 CN4 CN5	1-695-301-11	CONNECTOR, BOARD TO PLUG, CONNECTOR 8P	BOAF	RD 40P	IC202		IC NJM2234M(T1)	
CN201	* 1-564-512-11	PLUG, CONNECTOR 9P			IC203 IC204 IC205	8-759-277-89	IC MB814100A-70PJ-T6 IC ST24C16CM1-TR/A IC MN1382S	
CN202 CN203	1-564-511-11	PLUG, CONNECTOR 3P PLUG, CONNECTOR 8P PLUG, CONNECTOR 11P			IC206	8-759-275-36	IC TDA4780/V3	
CN204 CN205	* 1-564-507-11	PLUG, CONNECTOR 4P			IC207 IC208	8-752-012-52	IC CXP85460-033Q IC CX20125	
CN206 CN601	* 1-564-510-11 * 1-564-508-11	PLUG, CONNECTOR 7P PLUG, CONNECTOR 5P			IC209 IC210 IC211	8-759-008-67	IC TDA2822D IC MC14066BF IC MC74HC4053F	
		<diode></diode>			IC212	8-759-376-80	IC MSP3410B-PS-F7-T	
Dl -	8-719-914-4	4 DIODE DAP202K			IC213 IC214	8-759-037-79	B IC LM358D D IC MC74HC163AF D IC CXD2018Q	
D2 D3	8-719-914-4	4 DIODE DAP202K 3 DIODE DAN202K			IC601 IC602		B IC LM358D	
D4 D201		3 DIODE DAN202K 3 DIODE DAN202K			IC603	8-759-083-85	5 IC LA7856A	
D202 D203	8-719-914-4	3 DIODE DAN202K 3 DIODE DAN202K					<chip conductor=""></chip>	
D204 D205	8-719-914-4	3 DIODE DAN202K 3 DIODE DAN202K 3 DIODE DAN202K			JR202 JR203	1-216-295-00 1-216-295-00	CONDUCTOR, CHIP CONDUCTOR, CHIP	
D206 D207	8-719-106-2	3 DIODE RD7.5M-B2					COTT	
D208 D209	8-719-047-3	3 DIODE DAN202K 7 DIODE BAS16			Ll	1414.235.1	<coil> 1 INDUCTOR, FERRITE BEAD</coil>	
D210 D211		7 DIODE BAS16 3 DIODE DAN202K			L2 L3	1-414-235-1 1-414-235-1	I INDUCTOR, FERRITE BEAD I INDUCTOR, FERRITE BEAD	
D212 D215	8-719-914-4	3 DIODE DAN202K 3 DIODE DAN202K			L4 L5		I INDUCTOR, FERRITE BEAD I INDUCTOR, FERRITE BEAD	
D217 D218	8-719-914-4	JODE DAN202K JODE DAN202K JODE DAN202K			L6 L7		1 INDUCTOR, FERRITE BEAD 0 INDUCTOR 47UH	
D220	•	3 DIODE DAN202K 3 DIODE DAN202K			L8 L9	1-408-421-0	0 INDUCTOR 100UH 0 CONDUCTOR, CHIP	
D221 D222	8-719-914-4	3 DIODE DAN202K			L10	1-408-417-0	0 INDUCTOR 47UH	



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
L11 L12 L13 L14 L15	1-408-421-00 1-216-295-00 1-408-418-00	INDUCTOR, FERRITE BEAD INDUCTOR 100UH CONDUCTOR, CHIP INDUCTOR 56UH INDUCTOR 10UH		Q19 Q20 Q22 Q23	8-729-216-22 8-729-120-28 8-729-216-22	TRANSISTOR 2SC1623-L5L6 TRANSISTOR 2SA1162-G TRANSISTOR 2SC1623-L5L6 TRANSISTOR 2SA1162-G	
L16 L17 L18 L19	1-414-235-11 1-414-235-11 1-414-235-11 1-414-235-11	INDUCTOR, FERRITE BEAD INDUCTOR, FERRITE BEAD INDUCTOR, FERRITE BEAD INDUCTOR, FERRITE BEAD		Q24 Q25 Q26 Q27 Q28	8-729-216-22 8-729-216-22 8-729-120-28	TRANSISTOR 2SA1162-G TRANSISTOR 2SA1162-G TRANSISTOR 2SA1162-G TRANSISTOR 2SC1623-L5L6 TRANSISTOR 2SC1623-L5L6	
L20 L21 L22 L23 L24	1-408-417-00 1-414-235-11 1-216-295-00	INDUCTOR, FERRITE BEAD INDUCTOR 47UH INDUCTOR, FERRITE BEAD CONDUCTOR, CHIP INDUCTOR 47UH		Q29 Q30 Q32 Q33 Q34	8-729-216-22 8-729-216-22 8-729-216-22	TRANSISTOR DTC144EKA-T146 TRANSISTOR 2SA1162-G TRANSISTOR 2SA1162-G TRANSISTOR 2SA1162-G TRANSISTOR 2SA1162-G	i
L25 L26 L27 L28 L29	1-408-417-00 1-216-295-00 1-216-295-00 1-216-295-00 1-216-295-00	INDUCTOR 47UH  CONDUCTOR, CHIP CONDUCTOR, CHIP CONDUCTOR, CHIP CONDUCTOR, CHIP		Q35 Q36 Q37 Q38 Q41	8-729-120-28 8-729-120-28 8-729-120-28	TRANSISTOR 2SC1623-L5L6 TRANSISTOR 2SC1623-L5L6 TRANSISTOR 2SC1623-L5L6 TRANSISTOR 2SC1623-L5L6 TRANSISTOR DTC144EKA-T146	i
L30 L31 L32 L33 L34 L35	1-216-295-00 1-216-295-00 1-216-295-00 1-216-295-00	CONDUCTOR, CHIP CONDUCTOR, CHIP CONDUCTOR, CHIP CONDUCTOR, CHIP CONDUCTOR, CHIP CONDUCTOR, CHIP		Q42 Q43 Q44 Q45 Q46	8-729-120-28 8-729-216-22 8-729-216-22	TRANSISTOR 2SC1623-L5L6 TRANSISTOR 2SC1623-L5L6 TRANSISTOR 2SA1162-G TRANSISTOR 2SA1162-G TRANSISTOR 2SC1623-L5L6	
L36 L201 L202 L203 L204	1-216-295-00 1-414-234-11 1-408-417-00 1-408-409-00	CONDUCTOR, CHIP INDUCTOR, FERRITE BEAD INDUCTOR 47UH INDUCTOR 10UH INDUCTOR 47UH		Q47 Q48 Q49 Q52 Q201	8-729-120-28 8-729-120-28 8-729-120-28 8-729-216-22	TRANSISTOR 2SC1623-L5L6 TRANSISTOR 2SC1623-L5L6 TRANSISTOR 2SC1623-L5L6 TRANSISTOR 2SC1623-L5L6 TRANSISTOR 2SC1623-L5L6	
L205 L206 L207 L208 L209	1-408-409-00 1-408-405-00 1-408-417-00 1-408-409-00	INDUCTOR 10UH INDUCTOR 4.7UH INDUCTOR 47UH INDUCTOR 10UH INDUCTOR 10UH		Q202 Q203 Q204 Q205 Q206	8-729-120-28 8-729-216-22 8-729-216-22 8-729-120-28	TRANSISTOR 2SC1623-L5L6 TRANSISTOR 2SC1623-L5L6 TRANSISTOR 2SA1162-G TRANSISTOR 2SA1162-G TRANSISTOR 2SC1623-L5L6	
L210 L211 L212 L213 L214	1-408-417-00 1-408-417-00 1-408-417-00 1-408-417-00	INDUCTOR 47UH INDUCTOR 47UH INDUCTOR 47UH INDUCTOR 47UH INDUCTOR 47UH		Q207 Q208 Q209 Q210 Q211	8-729-120-28 8-729-120-28 8-729-216-22	TRANSISTOR 2SC1623-L5L6 TRANSISTOR 2SC1623-L5L6 TRANSISTOR 2SC1623-L5L6 TRANSISTOR 2SA1162-G TRANSISTOR 2SC1623-L5L6	
L215 L216 L217 L218	1-414-234-11 1-408-406-00 1-408-409-00 1-414-235-11	INDUCTOR, FERRITE BEAD ) INDUCTOR 5.6UH ) INDUCTOR 10UH INDUCTOR, FERRITE BEAD		Q212 Q213 Q214 Q215 Q216	8-729-120-28 8-729-216-22 8-729-120-28	TRANSISTOR 2SC1623-L5L6 TRANSISTOR 2SC1623-L5L6 TRANSISTOR 2SC1623-L5L6 TRANSISTOR 2SC1623-L5L6 TRANSISTOR 2SC1623-L5L6 TRANSISTOR 2SA1162-G	
L219 L220 L221 L601 L602 L603	1-408-417-00 1-408-397-00 1-408-417-00 1-408-417-00	O INDUCTOR 47UH O INDUCTOR 47UH O INDUCTOR 1UH O INDUCTOR 47UH O INDUCTOR 47UH O INDUCTOR 47UH O INDUCTOR 10UH		Q218 Q221 Q222 Q225 Q226	8-729-120-28 8-729-120-28 8-729-027-59 8-729-120-28	TRANSISTOR 2SC1623-L5L6 TRANSISTOR 2SC1623-L5L6 TRANSISTOR 2SC1623-L5L6 TRANSISTOR DTC144EKA-T14 TRANSISTOR 2SC1623-L5L6	6
		<pre><transistor> 8 TRANSISTOR 2SC1623-L5L6</transistor></pre>		Q227 Q228 Q229 Q230 Q231	8-729-120-28 8-729-120-28 8-729-120-28	R TRANSISTOR 2SC1623-L5L6 TRANSISTOR 2SC1623-L5L6 TRANSISTOR 2SC1623-L5L6 TRANSISTOR 2SC1623-L5L6 TRANSISTOR 2SC1623-L5L6	
Q1 Q2 Q3 Q6 Q7	8-729-216-2 8-729-120-2 8-729-216-2	2 TRANSISTOR 25A1162-G 8 TRANSISTOR 25A1162-G 2 TRANSISTOR 25A1162-G 8 TRANSISTOR 25A1162-G 8 TRANSISTOR 25C1623-L5L6		Q232 Q233 Q234 Q235	8-729-120-28 8-729-120-28 8-729-120-28	8 TRANSISTOR 2SC1623-L5L6 8 TRANSISTOR 2SC1623-L5L6 8 TRANSISTOR 2SC1623-L5L6 8 TRANSISTOR 2SC1623-L5L6	
Q8 Q9 Q10 Q11 Q12	8-729-120-2 8-729-216-2 8-729-120-2	8 TRANSISTOR 2SC1623-L5L6 8 TRANSISTOR 2SC1623-L5L6 2 TRANSISTOR 2SA1162-G 8 TRANSISTOR 2SC1623-L5L6 8 TRANSISTOR 2SC1623-L5L6		Q236 Q237 Q238 Q239 Q240	8-729-216-22 8-729-120-28 8-729-216-22 8-729-216-22	TRANSISTOR 2SA1162-G  TRANSISTOR 2SC1623-L5L6 TRANSISTOR 2SA1162-G TRANSISTOR 2SA1162-G TRANSISTOR 2SC1623-L5L6	
Q13 Q14 Q15 Q16 Q17	8-729-120-2 8-729-120-2 8-729-120-2	9 TRANSISTOR DTC144EKA-T14 8 TRANSISTOR 2SC1623-L5L6 8 TRANSISTOR 2SC1623-L5L6 8 TRANSISTOR 2SC1623-L5L6 9 TRANSISTOR DTC144EKA-T14		Q241 Q242 Q243 Q244	8-729-216-22 8-729-120-23 8-729-120-23 8-729-216-22	2 TRANSISTOR 2SA1162-G 8 TRANSISTOR 2SC1623-L5L6 8 TRANSISTOR 2SC1623-L5L6 2 TRANSISTOR 2SA1162-G	
Q18		2 TRANSISTOR 2SA1162-G		Q245 Q246	8-729-120-2 8-729-120-2	8 TRANSISTOR 2SC1623-L5L6 8 TRANSISTOR 2SC1623-L5L6	



DEE NO	PART NO.	DESCRIPTION	REMARK	: REF. NO.	PART NO.	DESCRIPTION	R	EMARK
REF. NO.				R25	1 216-025-00	METAL GLAZE 100	5%	1/10 <b>W</b>
Q247 Q248 Q249	8-729-120-28 8-729-120-28	TRANSISTOR 2SC1623-L5L6 TRANSISTOR 2SC1623-L5L6 TRANSISTOR 2SC1623-L5L6 TRANSISTOR 2SA1162-G		R25 R26 R27	1-216-025-00	METAL GLAZE 100 METAL GLAZE 4.7K	5% 5%	1/10W 1/10W
Q250 Q251	8-729-210-22 8-729-120-28	TRANSISTOR 2SC1623-L5L6		R28 R29	1-216-033-00	METAL GLAZE 1K METAL GLAZE 220	5% 5%	1/10W 1/10W
Q252	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R30	1-216-025-00	METAL GLAZE 100	5% 5%	1/10W 1/10W
O253	8-729-216-22	TRANSISTOR 2SA1162-G TRANSISTOR 2SA1162-G		R31 R32	1-216-065-00	METAL GLAZE 4.7K METAL GLAZE 330K	5%	1/10W
Q254 Q255 Q256	8-729-120-28	TRANSISTOR 2SC1623-L5L6 TRANSISTOR 2SA1162-G		R33 R34	1-216-047-91	METAL GLAZE 820 METAL GLAZE 1K	5% 5%	1/10W 1/10W
Q257	8-729-216-22	TRANSISTOR 2SA1162-G		R35	1-216-065-00	METAL GLAZE 4.7K	5% 5%	1/10W 1/10W
Q258	8-729-120-28	TRANSISTOR 2SC1623-L5L6 TRANSISTOR 2SC1623-L5L6		R36 R37	1-216-071-00	METAL GLAZE 8.2K METAL GLAZE 100	5%	1/10 <b>W</b>
Q259 Q260	8-729-216-22	TRANSISTOR 2SA1162-G				METAL GLAZE 4.7K	5%	1/10 <b>W</b>
Q261	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R38 R39	1-216-067-00	METAL GLAZE 5.6K	5%	1/10W
Q262	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R40 R41	1-216-025-00	METAL GLAZE 100 METAL GLAZE 100	5% 5%	1/10W 1/10W
Q263 Q264	8_729_216_22	TRANSISTOR 2SA1162-G TRANSISTOR 2SA1162-G		R42	1-216-073-00	METAL GLAZE 10K	5%	1/10W
Q265	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R43	1-216-049-00	METAL GLAZE 1K	5%	1/10W
Q266		TRANSISTOR 2SA1162-G		R44	1-216-097-00	METAL GLAZE 100K	5% 5%	1/10W 1/10W
Q267	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R45 R46	1-216-043-91	METAL GLAZE 560 METAL GLAZE 220	5%	1/10W
Q268 Q269	8-729-216-22	TRANSISTOR 2SA1162-G TRANSISTOR 2SA1162-G		R47	1-216-033-00	METAL GLAZE 220	5%	1/10W
Q270	8-729-120-28	TRANSISTOR 2SC1623-L5L6 TRANSISTOR 2SC1623-L5L6		R48	1-216-101-00	METAL GLAZE 150K	5%	1/10W
Q271				R49	1-216-666-11	METAL CHIP 4.3K METAL GLAZE 27K	0.50% 5%	1/10W 1/10W
Q272	8-729-216-22	TRANSISTOR 2SA1162-G TRANSISTOR 2SC1623-L5L6		R50 R51	1-216-051-00	METAL GLAZE 1.2K	5%	1/10W
Q273 Q274	8-729-216-22	TRANSISTOR 2SA1162-G		R52	1-216-049-00	METAL GLAZE 1K	5%	1/10W
Q275 Q276	8-729-120-28	TRANSISTOR 2SC1623-L5L6 TRANSISTOR 2SA1162-G		R53	1-216-025-00	METAL GLAZE 100	5%	1/10W
-				R54 R55	1-216-657-11	METAL CHIP 1.8K METAL GLAZE 220	0.50% 5%	1/10W 1/10W
Q277 Q278	8-729-216-22 8-729-027-59	TRANSISTOR 2SA1162-G TRANSISTOR DTC144EKA-T	146	R56	1-216-033-00	METAL GLAZE 220	5%	1/10W 1/10W
Q279	8-729-027-59	TRANSISTOR DTC144EKA-T	146	R57	1-216-103-00	METAL GLAZE 180K	5%	1/10W
Q280 Q281	8-729-027-59 8-729-027-59	TRANSISTOR DTC144EKA-T TRANSISTOR DTC144EKA-T	146	R58	1-216-653-11	METAL CHIP 1.2K METAL CHIP 3.3K	0.50% 0.50%	1/10W 1/10W
_		TRANSISTOR DTC144EKA-T		R59 R60	1-216-663-11	METAL CHIP 3.3K METAL GLAZE 47K	5%	1/10W
Q282 Q286	8-729-120-28	R TRANSISTOR 2SC1623-L5L6		R61	1-216-043-91	METAL GLAZE 560 METAL GLAZE 22K	5% 5%	1/10W 1/10W
Q287 Q301	8-729-120-28	TRANSISTOR 2SC1623-L5L6 TRANSISTOR 2SC1623-L5L6		R62			-	
Q302	8-729-120-2	TRANSISTOR 2SC1623-L5L6		R63 R64	1-216-041-00	METAL GLAZE 470 METAL GLAZE 560	5% 5%	1/10W 1/10W
Q303	8-729-120-2	TRANSISTOR 2SC1623-L5L6		R65	1-216-105-00	) METAL GLAZE 220K	5% 5%	1/10W 1/10W
. Q304	8-729-120-2	TRANSISTOR 2SC1623-L5L6 TRANSISTOR 2SC1623-L5L6		R66 R67	1-216-025-00	) METAL GLAZE 100 ) METAL GLAZE 100	5%	1/10W
Q601 Q603	8-729-120-2 8-729-120-2	8 TRANSISTOR 2SC1623-L5L6				METAL GLAZE 2.2K	5%	1/10W
•				R68 R69	1-216-057-0	) METAL GLAZE 2.2K	5%	1/10W
		<resistor></resistor>		R70 R71	1-216-057-0	METAL GLAZE 2.2K METAL CHIP 1.8K	5% 0.50%	1/10W 1/10W
RI	1-216-025-0	0 METAL GLAZE 100 5	% 1/10W	R72	1-216-105-0	METAL GLAZE 220K	5%	1/10W
R2	1-216-025-0	0 METAL GLAZE 100 3	% 1/10W % 1/10W	R73	1-216-025-0	0 METAL GLAZE 100	5%	1/10W
R3 R4	1-216-049-0	0 METAL GLAZE 1K 5	% 1/10W	R74	1-216-043-9	1 METAL GLAZE 560 0 METAL GLAZE 220	5% 5%	1/10W 1/10W
R6	1-216-295-0	0 CONDUCTOR, CHIP		R75 R76	1-216-025-0	0 METAL GLAZE 100	5%	1/10W
R7	1-216-295-0	0 CONDUCTOR, CHIP	% 1/10W	R77	1-216-295-0	0 CONDUCTOR, CHIP		
R9 R10	1-216-095-0 1-216-089-0		% 1/10W	R78	1-216-073-0	0 METAL GLAZE 10K	5% 0.50%	1/10W 1/10W
R11	1-216-033-0	0 METAL GLAZE 220 5	% 1/10W % 1/10W	R79 R80	1-216-635-1	I METAL CHIP 220 I METAL CHIP 220	0.50%	1/10W
R12				R83	1-216-067-0	0 METAL GLAZE 5.6K	5% 5%	1/10W 1/10W
R13	1-216-025-0		% 1/10W % 1/10W	R84	1-216-045-0	0 METAL GLAZE 680	370	.,
R14 R15	1-216-049-0	0 METAL GLAZE 1K 5	% 1/10W	R85	1-216-295-0	0 CONDUCTOR, CHIP 0 METAL GLAZE 330	5%	1/10W
R16 R17	1-216-025-0 1-216-041-0		5% 1/10 <b>W</b> 5% 1/10 <b>W</b>	R86 R87	1-216-031-0	0 METAL GLAZE 180	5%	1/10W 1/10W
			i% 1/10W	R88 R89	1-216-043-9 1-216-057-0	METAL GLAZE 560 METAL GLAZE 2.2K	5% 5%	1/10W
R18 R19	1-216-047-9	1 METAL GLAZE 820	5% 1/10W				5%	1/10W
R20	1-216-089-0	00 METAL GLAZE 47K	5% 1/10W 5% 1/10W	R90 R91	1-216-049-0	0 METAL GLAZE 5.6K 0 METAL GLAZE 1K	5%	1/10W
R21 R22	1-216-077-0	00 METAL GLAZE 13R	5% 1/10W	R92	1-216-057-0	00 METAL GLAZE 2.2K 00 CONDUCTOR, CHIP	5%	1/10W
R23	1-216-069-0		5% 1/10W	R93 R94	1-216-293-0	METAL GLAZE 560	5%	1/10W
R24	1-216-095-0		5% 1/10W					



REF. NO.	PART NO.	DESCRIPTION		REMARK	REF. NO.	PART NO.	DESCRIPTION		REMARK
R95 R96		METAL GLAZE 560 METAL GLAZE 100	5% 5%	1/10W 1/10W	R184	1-216-049-00	METAL GLAZE 1K	5%	1/10W
R97	1-216-025-00	METAL GLAZE 100	5%	1/10W	R185		METAL GLAZE 10K	5%	- 1/10W
R98		METAL GLAZE 47K METAL GLAZE 680	5% 5%	1/10W 1/10W	R186		METAL GLAZE 390 METAL GLAZE 560	5% 5%	1/10W 1/10W
R99	1-210-043-00	METAL GLAZE 000	370	1/10**	R189	1-216-049-00	METAL GLAZE 1K	5%	1/10 <b>W</b>
R100		CONDUCTOR, CHIP	5 <i>0</i> 7	1/10 <b>W</b>	R190	1-216-025-00	METAL GLAZE 100	5%	1/10W
R101 R102		METAL GLAZE 220 METAL GLAZE 47K	5% 5%	1/10 <b>W</b> 1/10 <b>W</b>	R191	1-216-065-00	METAL GLAZE 4.7K	5%	1/10W
R105	1-216-025-00	METAL GLAZE 100	5%	1/10 <b>W</b>	R192	1-216-049-00	METAL GLAZE 1K	5%	1/10W
R106	1-216-025-00	METAL GLAZE 100	5%	1/10 <b>W</b>	R193 R194		METAL GLAZE 22K METAL GLAZE 100	5% 5%	1/10W 1/10W
R107		METAL GLAZE 47K	5%	1/10W	R195		METAL GLAZE 2.2K	5%	1/10W
R108 R109		METAL GLAZE 4.7K METAL GLAZE 1K	5% 5%	1/10W 1/10W	R196	1-216-057-00	METAL GLAZE 2.2K	5%	1/10W
R110		METAL GLAZE 100	5%	1/10W	R197	1-216-025-00	METAL GLAZE 100	5%	1/10W
R111	1-216-049-00	METAL GLAZE 1K	5%	1/10 <b>W</b>	R198 R199		METAL GLAZE 100 METAL GLAZE 100	5% 5%	1/10W 1/10W
R113	1-216-073-00	METAL GLAZE 10K	5%	1/10W	R201		METAL GLAZE 1K	5%	1/10W
R114		METAL GLAZE 100	5% 5%	1/10 <b>W</b> 1/10 <b>W</b>	R202	1 216 065 00	METAL GLAZE 4.7K	5%	1/10W
R116 R117		METAL GLAZE 470 METAL GLAZE 750	5%	1/10 <b>W</b>	R202		METAL GLAZE 4.7K	5%	1/10W
R118		METAL GLAZE 100	5%	1/10 <b>W</b>	R204		METAL GLAZE 1K	5%	1/10W 1/10W
R119	1-216-049-00	METAL GLAZE 1K	5%	1/10 <b>W</b>	R205 R206		METAL GLAZE 2.7K METAL GLAZE 2.7K	5% 5%	1/10W
R120	1-216-295-00	CONDUCTOR, CHIP			ļ		METAL CLASE 100	F CT	1/1037
R121 R122		METAL GLAZE 470 METAL GLAZE 100	5% 5%	1/10 <b>W</b> 1/10 <b>W</b>	R207 R208		METAL GLAZE 100 METAL GLAZE 75	5% 5%	1/10W 1/10W
R123		CONDUCTOR, CHIP		*****	R209	1-216-073-00	METAL GLAZE 10K	5%	1/10W
R124	1-216-073-00	METAL GLAZE 10K	5%	1/10 <b>W</b>	R210 R211		METAL GLAZE 22K METAL GLAZE 3.9K	5% 5%	1/10W 1/10W
R125	1-216-295-91	CONDUCTOR, CHIP			•			<i>5.0</i> 7	1/1033/
R127 R128		METAL GLAZE 100 METAL GLAZE 100	5% 5%	1/10 <b>W</b> 1/10 <b>W</b>	R212 R213		METAL GLAZE 2.2K METAL GLAZE 2.7K	5% 5%	1/10W 1/10W
R130		METAL GLAZE 1K	5%	1/10 <b>W</b>	R214	1-216-033-00	METAL GLAZE 220	5%	1/10 <b>W</b>
D 1 2 1	1 216 040 01	METAL GLAZE 1K	5%	1/10W	R215 R216		METAL GLAZE 470 METAL GLAZE 4.7K	5% 5%	1/10W 1/10W
R131 R133		METAL GLAZE 100	5%	1/10 <b>W</b>	K210	1-210-003-00	METAL CLASE 4.7K		
R134		METAL GLAZE 100	5%	1/10W	R217		METAL GLAZE 2.7K	5% 5%	1/10W 1/10W
R136 R137		METAL GLAZE 100 METAL GLAZE 100	5% 5%	1/10 <b>W</b> 1/10 <b>W</b>	R218 R219		METAL GLAZE 2.7K METAL GLAZE 100	5%	1/10W
				1/1037	R220		METAL GLAZE 1K	5% 5%	1/10 <b>W</b> 1/10 <b>W</b>
R138 R140		METAL GLAZE 560 METAL GLAZE 33K	5% 5%	1/10W 1/10W	R221	1-210-033-00	METAL GLAZE 220	370	1/10 W
R142	1-216-075-00	METAL GLAZE 12K	5%	1/10 <b>W</b>	R222		METAL GLAZE 470	5%	1/10W
R143 R144		METAL GLAZE 100 METAL GLAZE 1K	5% 5%	1/10 <b>W</b> 1/10 <b>W</b>	R223 R224		METAL GLAZE 10K METAL GLAZE 22K	5% 5%	1/10W 1/10W
					R225		METAL GLAZE 2.7K	5%	1/10W
R146 R147		METAL GLAZE 560 METAL GLAZE 100	5% 5%	1/10W 1/10W	R226	1-216-063-91	METAL GLAZE 3.9K	5%	1/10 <b>W</b>
R148	1-216-047-91	METAL GLAZE 820	5%	1/10 <b>W</b>	R227		METAL GLAZE 2.2K	5%	1/10W
R154 R155		METAL GLAZE 47K CONDUCTOR, CHIP	5%	1/10W	R228 R229		METAL GLAZE 4.7K METAL GLAZE 47K	5% 5%	1/10W 1/10W
					R230	1-216-057-00	METAL GLAZE 2.2K	5%	1/10W
R156 R158		METAL GLAZE 1K METAL GLAZE 560	5% 5%	1/10W 1/10W	R231	1-216-033-00	METAL GLAZE 220	5%	1/10W
R159		METAL GLAZE 560	5%	1/10W	R232	1-216-041-00	METAL GLAZE 470	5%	1/10W
R162 R163		METAL GLAZE 4.7K METAL GLAZE 18K	5% 5%	1/10W 1/10W	R233 R234		METAL GLAZE 2.7K METAL GLAZE 2.7K	5% 5%	1/10W 1/10W
KIUS			370		R235	1-216-025-00	METAL GLAZE 100	5%	1/10W
R164 R165		METAL GLAZE 18K METAL GLAZE 10K	5% 5%	1/10W 1/10W	R236	1-216-033-00	METAL GLAZE 220	5%	1/10 <b>W</b>
R166	1-216-083-00	METAL GLAZE 27K	5%	1/10 <b>W</b>	R237		METAL GLAZE 10K	5%	1/10W
R167 R168		METAL GLAZE 680 CONDUCTOR, CHIP	5%	1/10W	R238 R239		METAL GLAZE 22K CONDUCTOR, CHIP	5%	1/10W
K100					R240	1-216-033-00	METAL GLAZE 220	5%	1/10W
R169 R170		METAL GLAZE 100 METAL GLAZE 100	5% 5%	1/10 <b>W</b> 1/10 <b>W</b>	R241	1-216-065-00	METAL GLAZE 4.7K	5%	1/10 <b>W</b>
R171	1-216-025-00	METAL GLAZE 100	5%	1/10W	R242		METAL GLAZE 2.7K	5%	1/10 <b>W</b>
R172 R173	1-216-039-00	METAL GLAZE 390 METAL GLAZE 1K	5% 5%	1/10W 1/10W	R243 R244		METAL GLAZE 10K METAL GLAZE 10K	5% 5%	1/10W 1/10W
					R245	1-216-049-00	METAL GLAZE 1K	5%	1/10W
R174 R175		METAL GLAZE 4.7K METAL GLAZE 22K	5% 5%	1/10 <b>W</b> 1/10 <b>W</b>	R247	1-216-063-91	METAL GLAZE 3.9K	5%	1/10W
R176	1-216-049-00	METAL GLAZE 1K	5%	1/10W	R248		METAL GLAZE 2.2K	5%	1/10W
R177 R179	1-216-025-00	METAL GLAZE 100	5% 5%	1/10 <b>W</b> 1/10 <b>W</b>	R249 R250		METAL GLAZE 100 METAL GLAZE 10K	5% 5%	1/10W 1/10W
	1-210-043-00	METAL GLAZE 680			R251	1-216-041-00	METAL GLAZE 470	5%	1/10 <b>W</b>
R180		METAL GLAZE 10K	5%	1/10 <b>W</b> 1/10 <b>W</b>	R252	1-216-057-00	METAL GLAZE 2.2K	5%	1/10 <b>W</b>
R181 R182	1-216-089-00	METAL GLAZE 100 METAL GLAZE 47K	5% 5%	1/10 <b>W</b>	R253		METAL GLAZE 100	5%	1/10W
R183		METAL GLAZE 56K	5%	1/10W	R254	1-216-295-00	CONDUCTOR, CHIP		



				DEMARK	REF. NO.	PART NO.	DESCRIPTION		REMARK
REF. NO.	PART NO.	DESCRIPTION		REMARK				5%	1/10W
R255		METAL GLAZE 18 METAL GLAZE 10		1/10W 1/10W	R340 R341	1-216-049-00	METAL GLAZE 390 METAL GLAZE 1K	- 5%	1/10W
R256 R257		METAL GLAZE 33		1/10W	R342	1-216-039-00	METAL GLAZE 390 METAL GLAZE 560	5% 5%	1/10W 1/10W
R258	1-216-025-00	METAL GLAZE 10	0 5%	1/10W	R343 R344	1-216-045-00	METAL GLAZE 680	5%	1/10W
R259	1-216-033-00	METAL GLAZE 22	0 5%	1/10W	R345	1 216 073.00	METAL GLAZE 10K	5%	1/10W
R260 R261	1-216-033-00	METAL GLAZE 22 METAL GLAZE 10	0 5% 0 5%	1/10W 1/10W	R346	1-216-057-00	METAL GLAZE 2.2K	5%	1/10W
R262	1-216-025-00	METAL GLAZE 10	5%	1/10W	R347 R348		METAL GLAZE 1M METAL CHIP 120K	5% 0.50%	1/10W 1/10W
R263	1-216-033-00	METAL GLAZE 22	.0 5%	1/10 <b>W</b>	R349	1-216-097-00	METAL GLAZE 100K	5%	1/10W
R264	1-216-033-00	METAL GLAZE 22 METAL GLAZE 10	20 5%	1/10 <b>W</b> 1/10 <b>W</b>	R350	1-216-065-00	METAL GLAZE 4.7K	5%	1/10W
R265 R266	1-216-033-00	METAL GLAZE 22	20 5%	1/1 <b>0W</b>	R351	1-216-065-00	METAL GLAZE 4.7K	5% 5%	1/10W 1/10W
R267	1-216-053-00	METAL GLAZE 1.5	5K 5%	1/10W	R352 R353	1-216-033-00	METAL GLAZE 10K METAL GLAZE 220	5%	1/10W
R268	1-216-043-91	METAL GLAZE 56	50 5%	1/10W	R354	1-216-073-00	METAL GLAZE 10K	5%	1/10W
R274 R275	1-216-049-00	METAL GLAZE 11 METAL GLAZE 4.	ζ 5% 7K 5%	1/10W 1/10W	R355		METAL GLAZE 1K	5%	1/10W
R277	1-216-065-00	METAL GLAZE 4.	7K 5%	1/10W	R356 R358	1-216-057-00	METAL GLAZE 2.2K METAL GLAZE 1K	5% 5%	1/10W 1/10W
R278	1-216-037-00	METAL GLAZE 33	30 5%	1/10 <b>W</b>	R359	1-216-073-00	METAL GLAZE 10K	5%	1/10W
R279	1-216-295-00	CONDUCTOR, CHI	IP 00 5%	1/10W	R360	1-216-049-00	METAL GLAZE 1K	5%	1/10W
R281 R282		METAL GLAZE 10 METAL GLAZE 10		1/10W	R361	1-216-041-00	METAL GLAZE 470	5%	1/10W 1/10W
R283	1-216-081-00	METAL GLAZE 22	2K 5%	1/10W 1/10W	R362 R363	1-216-041-00 1-216-049-00	METAL GLAZE 470 METAL GLAZE 1K	5% 5%	1/10W
R284		METAL GLAZE 22		1/10**	R364	1-216-049-00	METAL GLAZE 1K	5% 5%	1/10W 1/10W
R285	1-216-295-00	CONDUCTOR, CHI METAL GLAZE 33	IP 3K 5%	1/10 <b>W</b>	R365	1-216-073-00	METAL GLAZE 10K		
R287 R290	1-216-041-00	METAL GLAZE 47	70 5%	1/10W	R366		METAL GLAZE 39K METAL GLAZE 100	5% 5%	1/10W 1/10W
R291		METAL GLAZE 4. METAL CHIP 47	7K 5% 7K 0.50%	1/10W 1/10W	R367 R368	1-216-073-00	METAL GLAZE 10K	5%	1/10W
R292					R369 R370	1-216-057-00	METAL GLAZE 2.2K METAL GLAZE 1K	5% 5%	1/10W 1/10W
R293 R294	1-216-065-00	METAL GLAZE 4. METAL GLAZE 22	.7K 5% 20 5%	1/10W 1/10W	K370				1/1037
R295	1-216-073-00	METAL GLAZE 10	OK 5%	1/10 <b>W</b> 1/10 <b>W</b>	R371 R372	1-216-073-00	METAL GLAZE 10K METAL GLAZE 10K	5% 5%	1/10W 1/10W
R297 R298	1-216-037-00	METAL GLAZE 33 METAL GLAZE 4.		1/10 <b>W</b>	R373	1-216-057-00	METAL GLAZE 2.2K	5% 5%	1/10W 1/10W
	1 216 049 00	METAL GLAZE 11	K 5%	1/10W	R374 R375		METAL GLAZE 10K METAL GLAZE 100K		1/10W
R299 R300	1-216-085-00	METAL GLAZE 33	3K 5%	1/10 <b>W</b>		1 216 049 00	METAL GLAZE 1K	5%	1/10W
R302 R305	1-216-065-00	) METAL GLAZE 4. ) METAL GLAZE 2°	.7 <b>K</b> 5% 70 5%	1/10W 1/10W	R376 R377	1-216-049-91	METAL GLAZE 1K	5%	1/10W
R306	1-216-085-00	METAL GLAZE 3	3K 5%	1/10W	R378 R379	1-216-049-00	METAL GLAZE IK METAL GLAZE IK	5% 5%	1/10W 1/10W
R307	1-216-033-00	METAL GLAZE 2	20 5%	1/10 <b>W</b>	R380	1-216-041-00	METAL GLAZE 470	5%	1/10W
R308	1-216-073-00	) METAL GLAZE 10 ) METAL GLAZE 2:	0K 5%	1/10W 1/10W	R381	1-216-041-00	METAL GLAZE 470	5%	1/10W
R311 R312	1-216-037-00	) METAL GLAZE 3:	30 5%	1/10 <b>W</b>	R382	1-216-041-00	METAL GLAZE 470 METAL GLAZE 470	5% 5%	1/10W 1/10W
R313	1-216-025-00	) METAL GLAZE 10	00 5%	1/10W	R383 R384	1-216-041-00	METAL GLAZE 470	5%	1/10W
R314	1-216-025-00	METAL GLAZE	00 5%	1/10W	R385	1-216-061-00	METAL GLAZE 3.3K	5%	1/10W
R315 R316	1-216-025-00	) METAL GLAZE 10 ) METAL GLAZE 10	00 5% 00 5%	1/10W 1/10W	R386	1-216-073-00	METAL GLAZE 10K	5%	1/10W
R317	1-216-025-00	) METAL GLAZE 1	00 5%	1/10 <b>W</b> 1/10 <b>W</b>	R387 R388		) METAL GLAZE IK ) METAL GLAZE IK	5% 5%	1/10W 1/10W
R318	1-216-025-00	METAL GLAZE 1	00 3%	1	R389	1-216-049-00	METAL GLAZE 1K	5% 5%	1/10W 1/10W
R319	1-216-025-00	) METAL GLAZE 1 ) METAL GLAZE 4	00 5% .7K 5%	1/10W 1/10W	R390	1-216-049-00	METAL GLAZE 1K		
R320 R321	1-216-065-00	O METAL GLAZE 4	.7K 5%	1/10 <b>W</b>	R391		METAL GLAZE IK	5% 5%	1/10W 1/10W
R322 R323	1-216-065-06	0 METAL GLAZE 4 0 METAL GLAZE 1	.7K 5% 00 5%	1/10 <b>W</b> 1/10 <b>W</b>	R392 R393	1-216-049-00	) METAL GLAZE 1K ) METAL GLAZE 1K	5%	1/10W
				1/10W	R394 R395	1-216-025-00	METAL GLAZE 100 METAL GLAZE 820	5% 5%	1/10W 1/10W
R324 R325		0 METAL GLAZE 1 0 METAL GLAZE 1	K 5%	1/10 <b>W</b>				50%	1/10W
R327	1-216-685-1		27 <b>K</b> 0.50%	6 1/10W 1/10W	R396 R397		METAL GLAZE 820 METAL GLAZE 1K	5% 5%	1/10W
R328 R329	1-216-085-0	0 METAL GLAZE 3		1/10W	R398	1-216-049-00	) METAL GLAZE 1K	5% 5%	1/10W 1/10W
R330			50K 0.509	6 1/10W	R399 R400		) METAL GLAZE 1K ) METAL GLAZE 100	5%	1/10W
R331	1-216-031-0	0 METAL GLAZE 1	80 5%	1/10W	ļ		METAL GLAZE 100	5%	1/10W
R332 R333	1-216-057-0 1-216-067-0	0 METAL GLAZE 2 0 METAL GLAZE 5	2.2K 5% 5.6K 5%	1/10 <b>W</b> 1/10 <b>W</b>	R401 R402	1-216-025-0	METAL GLAZE 100	5%	1/10W
R334	1-216-049-0	0 METAL GLAZE 1		1/10 <b>W</b>	R403 R404	1-216-049-0	METAL GLAZE 1K METAL GLAZE 270	5% 5%	1/10W 1/10W
R335	1-216-039-0	0 METAL GLAZE 3	390 5%	1/10W	R406	1-216-057-0	METAL GLAZE 2.2k		1/10W
R336	1-216-033-0	O METAL GLAZE 2 O METAL GLAZE 1	220 5%	1/10W 1/10W	R407	1-216-065-0	0 METAL GLAZE 4.7k	5%	1/10W
R337 R338	1-216-025-0	O METAL GLAZE 1	100 5%	1/10 <b>W</b>	R408	1-216-065-0	0 METAL GLAZE 4.71 0 METAL GLAZE 1K	5% 5%	1/10W 1/10W
R339	1-216-039-0	METAL GLAZE	390 5%	1/10W	R409 R410	1-216-047-9	METAL GLAZE 1K 1 METAL GLAZE 820	5%	1/10W




								•	
REF. NO.	PART NO.	DESCRIPTION		REMARK	REF. NO.	PART NO.	DESCRIPTION		REMARK
R411	1-216-057-00	METAL GLAZE 2.2K	5%	1/10 <b>W</b>	R479 R480		METAL GLAZE 4.7K METAL GLAZE 4.7K	5% 5%	1/10 <b>W</b> 1/10 <b>W</b>
R412		CONDUCTOR, CHIP METAL GLAZE 100	5%	1/10 <b>W</b>	R481		METAL GLAZE 4.7K	5%	1/10 <b>W</b>
R413 R414		METAL GLAZE 100	5%	1/10W	R482		METAL GLAZE 10K	5%	1/10W
R415	1-216-047-91	METAL GLAZE 820	5%	1/10 <b>W</b>	R483		METAL GLAZE 10K	5%	1/10W 1/10W
R416	1-216-043-91	METAL GLAZE 560	5%	1/10W	R484 R485		METAL GLAZE 680 METAL GLAZE 4.7K	5% 5%	1/10 <b>W</b> 1/10 <b>W</b>
R417	1-216-045-00	METAL GLAZE 680	5%	1/10 <b>W</b>	R486		METAL GLAZE 220	5%	1/10 <b>W</b>
R418		METAL GLAZE 22K	5%	1/10W	D 407	1 216 065 00	METAL GLAZE 4.7K	5%	1/10W
R419 R420		METAL GLAZE 10 METAL GLAZE 100	5% 5%	1/10W 1/10W	R487 R488		METAL GLAZE 4.7K	5%	1/10W
R421		CONDUCTOR, CHIP			R489	1-216-049-00	METAL GLAZE 1K	5%	1/10W
D 422	1 216 041 00	METAL GLAZE 470	5%	1/10W	R490 R492		METAL GLAZE 1.8K CONDUCTOR, CHIP	5%	1/10W
R422 R423	1-216-041-00	METAL GLAZE 470	5%	1/10W	1(1)2				
R424	1-216-037-00	METAL GLAZE 330	5%	1/10W	R493		METAL GLAZE 220 METAL GLAZE 5.6K	5% 5%	1/10W 1/10W
R425 R426	1-216-073-00	METAL GLAZE 10K METAL GLAZE 330	5% 5%	1/10W 1/10W	R494 R495		METAL GLAZE 3.0K	5%	1/10W
N420	1-210-037-00	METTE CETTE 350			R496	1-216-065-00	METAL GLAZE 4.7K	5%	1/10W
R427		METAL GLAZE 100 METAL GLAZE 100K	5% 5%	1/10W 1/10W	R497	1-216-079-00	METAL GLAZE 18K	5%	1/10W
R428 R429		METAL GLAZE 100K	5%	1/10W	R498		METAL GLAZE 470K	5%	1/10W
R430	1-216-045-00	METAL GLAZE 680	5%	1/10W	R499		METAL GLAZE 4.7K	5% 5%	1/10W 1/10W
R431	1-216-041-00	METAL GLAZE 470	5%	1/10W	R500 R501		METAL GLAZE 4.7K METAL GLAZE 56K	5%	1/10W
R432		METAL GLAZE 1K	5%	1/10W	R502		METAL GLAZE 1K	5%	1/10 <b>W</b>
R433	1-249-399-11		5% 5%	1/4W F 1/10W	R503	1 216.089 00	METAL GLAZE 47K	5%	1/10W
R434 R435	1-216-073-00	METAL GLAZE 10K METAL GLAZE 3.9K	5%	1/10 <b>W</b>	R504		METAL GLAZE 18K	5%	1/10W
R436		METAL GLAZE 330	5%	1/10 <b>W</b>	R505		METAL GLAZE 56K	5%	1/10W
R437	1 216 020 00	METAL GLAZE 390	5%	1/10W	R506 R507		METAL GLAZE 4.7K METAL GLAZE 4.7K	5% 5%	1/10 <b>W</b> 1/10 <b>W</b>
R437 R438		METAL GLAZE 10K	5%	1/10W	K307				
R439		METAL GLAZE 4.7K	5%	1/10W	R508		METAL GLAZE 4.7K METAL GLAZE 5.6K	5% 5%	1/10W 1/10W
R440 R441	1-216-031-00	METAL GLAZE 180 METAL GLAZE 1K	5% 5%	1/10W 1/10W	R509 R510		METAL GLAZE 33K	5%	1/10W
14-11					R511		METAL GLAZE 10K	5%	1/10W
R442		METAL GLAZE 4.7K METAL GLAZE 220	5% 5%	1/10W 1/10W	R512	1-216-073-00	METAL GLAZE 10K	5%	1/10W
R443 R444	1-216-033-00	METAL GLAZE 220	5%	1/10W	R513		METAL GLAZE 4.7K	5%	1/10W
R445	1-216-061-00	METAL GLAZE 3.3K	5%	1/10W	R514		METAL GLAZE 4.7K	5% 5%	1/10W 1/10W
R446	1-216-049-00	METAL GLAZE 1K	5%	1/10W	R515 R516		METAL GLAZE 1K METAL GLAZE 470K	5%	1/10 <b>W</b>
R447	1-249-389-11		5%	1/4W F	R517		CONDUCTOR, CHIP		
		METAL GLAZE 33 METAL GLAZE 8.2K	5% 5%	1/10W 1/10W	R519	1-216-113-00	METAL GLAZE 470K	5%	1/10W
R449 R450		METAL GLAZE 3.2K	5%	1/10W	R520	1-216-089-00	METAL GLAZE 47K	5%	1/10W
R451	1-216-041-00	METAL GLAZE 470	5%	1/10 <b>W</b>	R521		METAL GLAZE 4.7K METAL GLAZE 4.7K	5% 5%	1/10 <b>W</b> 1/10 <b>W</b>
R452	1-216-025-00	METAL GLAZE 100	5%	1/10W	R522 R527		METAL GLAZE 1K	5%	1/10W
R453	1-216-073-00	METAL GLAZE 10K	5%	1/10W					1/1037/
R454		METAL GLAZE 1K METAL GLAZE 4.7K	5% 5%	1/10W 1/10W	R528 R530		METAL GLAZE 1K METAL GLAZE 2.4K	5% 5%	1/10W 1/10W
R455 R456		METAL GLAZE 3.3K	5%	1/10W	R531	1-216-058-00	METAL GLAZE 2.4K	5%	1/ <b>10W</b>
			5%	1/10W	R532		METAL GLAZE 100K METAL GLAZE 680	5% 5%	1/10 <b>W</b> 1/10 <b>W</b>
R457 R458	1-216-025-00	METAL GLAZE 100 METAL GLAZE 4.7K	5%	1/10W 1/10W	R533	1-210-045-00	METAL GLAZIL 000	370	1/10/
R459	1-216-049-00	METAL GLAZE 1K	5%	1/10W	R534		METAL GLAZE 10K	5%	1/10W
R460 R461		METAL GLAZE 8.2K METAL GLAZE 470	5% 5%	1/10W 1/10W	R535 R536		METAL GLAZE 10K METAL GLAZE 10K	5% 5%	1/10W 1/10W
1401	1-210-041-00	WEIRE GERZE 470	370	1,1011	R537	1-216-121-91	METAL GLAZE 1M	5%	1/10 <b>W</b>
R462		METAL GLAZE 4.7K	5%	1/10W	R538	1-216-079-00	METAL GLAZE 18K	5%	1/10 <b>W</b>
R463 R464	1-216-097-00	METAL GLAZE 100K METAL GLAZE 100K	5% 5%	1/10 <b>W</b> 1/10 <b>W</b>	R539	1-216-079-00	METAL GLAZE 18K	5%	1/10W
R465	1-216-065-00	METAL GLAZE 4.7K	5%	1/10W	R540	1-216-073-00	METAL GLAZE 10K	5%	1/10W
R466	1-216-041-00	METAL GLAZE 470	5%	1/10W	R541 R542		METAL GLAZE 100K METAL GLAZE 1M	5% 5%	1/10W 1/10W
R467		METAL GLAZE 820	5%	1/10W	R543		METAL GLAZE 680	5%	1/10W
R468	1-216-047-91	METAL GLAZE 820	5%	1/10W	D545	1 216,040 01	METAL GLAZE 1K	5%	1/10W
R469 R470	1-249-389-11	) METAL GLAZE 4.7K CARBON 4.7	5% 5%	1/10W 1/4W F	R545 R546		METAL GLAZE 1K METAL GLAZE 220	5%	1/10W
R471	1-216-113-00	METAL GLAZE 470K	5%	1/10W	R547		METAL GLAZE 10	5%	1/10W
R472	1 216 065 00	METAL GLAZE 4.7K	5%	1/10W	R548 R551		METAL GLAZE 15K METAL GLAZE 15K	5% 5%	1/10W 1/10W
R472 R473		) METAL GLAZE 4.7K	5%	1/10W					
R474	1-216-045-00	METAL GLAZE 680	5%	1/10W	R553		METAL GLAZE 15K METAL GLAZE 2.2K	5% 5%	1/10W 1/10W
R475 R476		) METAL GLAZE 470 ) METAL GLAZE 1K	5% 5%	1/10 <b>W</b> 1/10 <b>W</b>	R555 R556		METAL GLAZE 2.2K METAL GLAZE 4.7K	5%	1/10 <b>W</b>
					R558	1-216-049-00	METAL GLAZE 1K	5%	1/10W
R477 R478		) METAL GLAZE 4.7K ) METAL GLAZE 4.7K	5% 5%	1/10 <b>W</b> 1/10 <b>W</b>	R559	1-216-065-00	METAL GLAZE 4.7K	5%	1/10W
N-7/0	1-210-003-00	MILIAL GLAZIE 4./K	370	1/10**	i				

#### KP-E61MH11/E61MN11/E61SN11

RM-901 RM-901



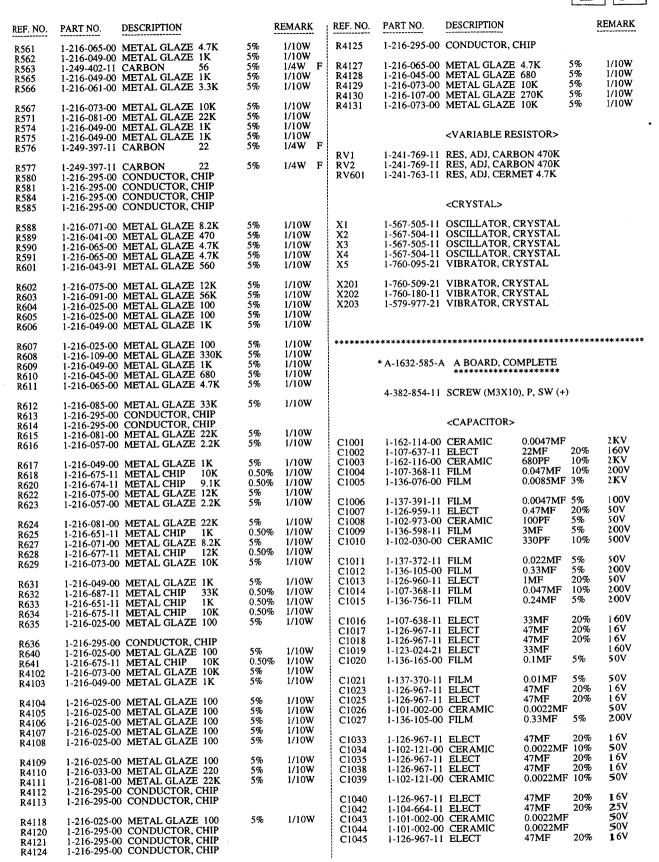



REF. NO.	PART NO.	DESCRIPTION			REMARK	REF. NO.	PART NO.	DESCRIPTION	REMARK
C1047 C1048 C1049 C1050 C1051	1-101-002-00 1-126-967-11 1-104-664-11 1-101-002-00 1-104-664-11	ELECT ELECT CERAMIC	0.0022MF 47MF 47MF 0.0022MF 47MF	20% 20% 20%	50V 16V 25V 50V 25V			PIN, CONNECTOR (5mm PITCH) PLUG, CONNECTOR 4P <diode></diode>	4 <b>P</b>
C1052 C1053 C1054 C1055 C1056	1-126-967-11 1-101-004-00 1-126-967-11 1-126-964-11 1-128-551-11	CERAMIC ELECT ELECT	47MF 0.01MF 47MF 10MF 22MF	20% 20% 20% 20%	16V 50V 50V 50V 25V	D1001 D1002 D1004 D1005 D1006	8-719-300-80 8-719-911-19 8-719-911-19	DIODE RGP02-20EL-6394 DIODE RU-1C DIODE 1SS119-25 DIODE 1SS119-25 DIODE 1SS119-25	
C1057 C1058 C1059 C1060 C1061	1-102-114-00 1-126-967-11 1-126-967-11 1-102-114-00 1-126-967-11	ELECT ELECT CERAMIC	470PF 47MF 47MF 470PF 47MF	10% 20% 20% 10% 20%	50V 50V 50V 50V 16V	D1007 D1008 D1009 D1012 D1013	8-719-911-19 8-719-911-19 8-719-150-92	DIODE ISS119-25 DIODE ISS119-25 DIODE ISS119-25 DIODE RD33EB3T DIODE ISS119-25	
C1064 C1065 C1066 C1067 C1068	1-126-967-11 1-102-114-00 1-102-114-00 1-126-967-11 1-102-114-00	CERAMIC CERAMIC ELECT	47MF 470PF 470PF 47MF 470PF	20% 10% 10% 20% 10%	16V 50V 50V 16V 50V	D1014 D1015 D1016 D1017 D1018	8-719-911-19 8-719-911-19 8-719-510-48	DIODE 1SS119-25 DIODE 1SS119-25 DIODE 1SS119-25 DIODE D1N20R DIODE D1N20R	
C1069 C1070 C1071 C1072 C1073	1-126-967-11 1-126-965-11 1-102-114-00 1-126-967-11 1-102-114-00	ELECT CERAMIC ELECT	47MF 22MF 470PF 47MF 470PF	20% 20% 10% 20% 10%	16V 50V 50V 16V 50V	D3201 D3202 D3203 D3204 D3206	8-719-914-43 8-719-911-19 8-719-914-43	DIODE DAP202K DIODE DAN202K DIODE 1SS119-25 DIODE DAN202K DIODE DAN202K	
C1074 C1075 C1076 C1077 C1078	1-126-967-11 1-126-967-11 1-102-114-00 1-126-964-11 1-101-004-00	ELECT CERAMIC ELECT	47MF 47MF 470PF 10MF 0.01MF	20% 20% 10% 20%	16V 16V 50V 50V 50V	D3207 D3209 D3210 D3211 D3212	8-719-914-43 8-719-911-19 8-719-988-72	DIODE DAN202K DIODE DAN202K DIODE 1SS119-25 DIODE SC802-06 DIODE 1SS119-25	
C1079 C1080 C1081 C1082 C1090		ELECT		5% 10% 20% 20% 10%	50V 50V 16V 16V 2KV	IC1001 IC1002 IC1003	8-759-457-44	<ic> IC KA78R05TU IC KA78R05TU IC PQ12RE11</ic>	
C1091 C3201 C3202 C3204 C3205	1-137-380-11 1-126-964-11 1-126-964-11 1-126-967-11 1-126-301-11	ELECT ELECT ELECT	0.47MF 10MF 10MF 47MF 1MF	5% 20% 20% 20% 20%	50V 50V 50V 16V 50V	IC1004 IC1005 IC1006 IC3201	8-759-095-63 8-759-701-88	IC PQ09RF2 IC NJM7912FA IC LM78L05ACZ	
C3206 C3207 C3208 C3209 C3210	1-126-967-11 1-128-550-11 1-128-550-11 1-136-165-00 1-136-165-00	ELECT ELECT FILM	47MF 2200MF 2200MF 0.1MF 0.1MF	20% 20% 20% 5% 5%	16V 50V 50V 50V 50V	IF1002 IF1003		<if block=""> IF BLOCK (IFF-380) IF BLOCK (IFD-380A)</if>	
C3211 C3212 C3213 C3214 C3215	1-136-165-00 1-136-165-00 1-107-715-11 1-126-969-11 1-126-965-11	FILM ELECT ELECT	0.1MF 0.1MF 22MF 220MF 22MF	5% 5% 20% 20% 20%	50V 50V 50V 50V 50V	L1001 L1002 L1003	1-459-769-13	<coil> COIL, CHOKE 15mH COIL, HORIZONTAL LINEARITY INDUCTOR 47UH</coil>	
C3216	1-126-961-11	ELECT	2.2MF	20%	50V	L1005 L1006	1-408-421-00	INDUCTOR 100UH INDUCTOR 47UH	
CN1002 CN1003	*1-580-689-11 *1-580-689-11	CONNECTOR: PIN, CONNECTOR PIN, CONNE	OR (PC BO. OR (PC BO. OR (PC BO.	ARD) 4 ARD) 4	4P 4 <b>P</b>	L1007 L1008 L1009 L1010 L1012	1-408-417-00 1-408-417-00 1-412-533-21	INDUCTOR 47UH INDUCTOR 47UH INDUCTOR 47UH INDUCTOR 47UH INDUCTOR 47UH	
		PIN, CONNECTO TAB (CONTACT		ARD) 4	4P	L1013	1-408-417-00	INDUCTOR 47UH	
CN1007 CN1008 CN1009 CN1010 CN1011 CN1012	1-695-915-11 *1-508-765-00 *1-508-768-00 *1-564-509-11 *1-564-509-11	PLUG, CONNECT PIN, CONNECT PIN, CONNECT PLUG	F) OR (5mm P OR (5mm P CTOR 6P CTOR 3P	ITCH) ITCH)	3P 6P	Q1001 Q1002 Q1003 Q1004 Q1005	8-729-119-80 8-729-119-76 8-729-119-76	<transistor> TRANSISTOR 2SD2348LBSONY TRANSISTOR 2SC2688-LK TRANSISTOR 2SA1175-HFE TRANSISTOR 2SA1175-HFE TRANSISTOR 2SC2785-HFE</transistor>	
CN1016	1-695-298-11	PLUG, CONNEC CONNECTOR, I PLUG, CONNEC	BOARD TO	BOAR	RD 40P	Q1006 Q1007		TRANSISTOR 2SA1013-O TRANSISTOR 2SA1013-O	



REF. NO.	PART NO.	DESCRIPTION		R	EMARK	.	REF. NO.	PART NO.	DESCRIPTION			REMARK
Q1008 Q1009 Q1010	8-729-010-98	TRANSISTOR 2S TRANSISTOR 2S TRANSISTOR 2S	A 1492M-OF	; PY			R1049 R1052 R1064 R1075	1-249-419-11	CARBON METAL OXIDE CARBON	1.5K	5% 5% 5%	1/4W 1/4W 3W F 1/4W
Q1011 Q1012 Q1013 Q1014 Q1015	8-729-119-78 8-729-119-78 8-729-119-78 8-729-119-76	TRANSISTOR D' TRANSISTOR 2S TRANSISTOR 2S TRANSISTOR 2S TRANSISTOR 2S	C2785-HFE C2785-HFE C2785-HFE GA1175-HFE				R1084 R1086 R1087 R1088 R1089	1-249-427-11 1-249-428-11 1-249-432-11 1-249-433-11	CARBON CARBON CARBON	33K 6.8K 8.2K 18K 22K 220	5% 5% 5% 5% 5%	2W F 1/4W 1/4W 1/4W 1/4W 1/4W
Q1016 Q1017 Q1024 Q1025 Q1026	8-729-119-78 8-729-119-76 8-729-216-22	TRANSISTOR 25 TRANSISTOR 25 TRANSISTOR 25 TRANSISTOR 25 TRANSISTOR 25	SC2785-HFE SA1175-HFE SA1162-G				R1093 R1094 R1095 R1096 R1097	1-249-409-11 1-249-409-11 1-249-409-11 1-249-433-11	CARBON CARBON CARBON	220 220 220 220 22K	5% 5% 5% 5%	1/4W 1/4W 1/4W 1/4W
Q3201 Q3204 Q3205 Q3206 Q3207	8-729-120-28 8-729-120-28 8-729-216-22	TRANSISTOR 25 TRANSISTOR 25 TRANSISTOR 25 TRANSISTOR 25 TRANSISTOR 25	SC1623-L5L6 SC1623-L5L6 SA1162-G	6			R1098 R1099 R1100 R1101 R1102	1-247-881-00 1-249-441-11 1-249-429-11 1-249-437-11 1-249-422-11	CARBON CARBON CARBON	120K 100K 10K 47K 2.7K	5% 5% 5% 5%	1/4W 1/4W 1/4W 1/4W 1/4W
Q3208 Q3209	8-729-120-28	TRANSISTOR 25 TRANSISTOR 25 TRANSISTOR 25	SC1623-L5L6	6			R1103 R1104	1-249-429-11	CARBON	10K 47K	5% 5%	1/4W 1/4W
Q3210	8-729-120-26	<resistor></resistor>	,01023 232	•			R1105 R1106 R1107	1-216-065-00 1-216-065-00 1-216-089-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	4.7 <b>K</b> 47 <b>K</b>	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W
R1001 R1002 R1003 R1004 R1005	1-247-735-11 1-216-478-11 1-215-925-11	METAL OXIDE SOLID METAL OXIDE METAL OXIDE METAL OXIDE	47 390 22K	5% 20% 5% 5% 5%	1W 1/2W 3W 3W 3W	F F F	R1108 R1109 R3201 R3202 R3203 R3204	1-216-077-00 1-216-049-00 1-216-073-00 1-216-089-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	15K 1K 10K 47K	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W
R1006 R1007 R1009 R1010 R1011	1-216-373-11 1-249-437-11 1-249-427-11 1-249-417-11 1-247-843-11	CARBON CARBON	47K 6.8K 1K	5% 5% 5% 5% 5%	2W 1/4W 1/4W 1/4W 1/4W	F F	R3205 R3206 R3207 R3208 R3209	1-216-089-00 1-216-049-00 1-216-073-00 1-216-041-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	47K 1K 10K 470	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W
R1012 R1015 R1016 R1017 R1018	1-249-417-11 1-215-429-00 1-215-433-00 1-249-425-11 1-247-895-00	METAL METAL CARBON	2.2K 3.3K 4.7K	5% 1% 1% 5% 5%	1/4W 1/4W 1/4W 1/4W 1/4W		R3210 R3211 R3212 R3213 R3214	1-216-039-00 1-216-089-00 1-216-099-00 1-216-039-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	390 47K 120K 390	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W
R1019 R1020 R1021 R1022 R1023	1-249-421-11 1-249-423-11 1-249-425-11 1-215-443-00 1-249-421-11	CARBON CARBON METAL	3.3K 4.7K 8.2K	5% 5% 5% 1% 5%	1/4W 1/4W 1/4W 1/4W 1/4W	F F	R3215 R3216 R3217 R3218 R3219	1-216-079-00 1-216-025-00 1-216-089-00 1-216-089-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL OXIDE	18K 100 47K 47K	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W 1W F
R1024 R1025 R1026 R1027 R1028	1-249-417-11 1-215-425-00 1-215-925-11 1-215-437-00 1-249-417-11	METAL METAL-OXIDE METAL	1.5K 22K 4.7K	5% 1% 5% 1% 5%	1/4W 1/4W 3W 1/4W 1/4W	F	R3220	1-216-357-00 1-216-081-00 1-216-081-00 1-216-079-00	METAL OXIDE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	4.7 22K 22K 18K	5% 5% 5% 5% 5%	1W F 1/10W 1/10W 1/10W 1/10W
R1029 R1030 R1031 R1032 R1033	1-249-429-11 1-249-417-11 1-215-877-11 1-249-430-11 1-249-437-11	CARBON METAL OXIDE CARBON	1K 22K 12K	5% 5% 5% 5% 5%	1/4W 1/4W 1W 1/4W 1/4W	F F		1-216-049-00 1-216-073-00 1-216-049-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	1K 10K 1K	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W
R1034 R1035 R1036 R1037 R1038	1-247-807-31 1-249-418-11 1-249-425-11 1-249-429-11 1-249-429-11	CARBON CARBON CARBON	1.2K 4.7K 10K	5% 5% 5% 5% 5%	1/4W 1/4W 1/4W 1/4W 1/4W		R3230 R3231 R3232 R3233 R3234	1-216-089-00 1-216-063-91 1-216-099-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	47K 3.9K 120K	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W
R1039 R1040 R1041 R1042 R1043	1-247-843-1 1-249-437-1 1-249-417-1 1-249-429-1 1-249-425-1	I CARBON I CARBON I CARBON	47K 1K 10K	5% 5% 5% 5% 5%	1/4W 1/4W 1/4W 1/4W 1/4W		R3235 R3236 R3237	1-216-073-00	METAL GLAZE METAL GLAZE	10 <b>K</b>	5% 5% 5%	1/10W 1/10W 1/4W
R1044 R1045 R1046 R1047 R1048	1-247-807-3 1-249-417-1 1-247-807-3 1-249-429-1 1-247-807-3	I CARBON I CARBON I CARBON	1 <b>K</b> 100	5% 5% 5% 5% 5%	1/4W 1/4W 1/4W 1/4W 1/4W		RY3201	1-515-833-11	<relay></relay>			



Les composants identifies par une trame et une marque £ sont critiques pour la securite. Ne les remplacer que par une piece portant le numero specifie.

The componants identified by shading and mark  $\Delta$  are critical for safety.

Replace only with part number specified.

	<u> </u>						piece portant le n		specified.		95.65
REF. NO.	PART NO.	DESCRIPTION		F	REMARK	REF. NO.	PART NO.	DESCRIPTION			REMARK
T1001	1-437-078-00	<transforme <test="" pin="" transformer=""></transforme>		NTAL D	RIVE	C6048 C6049 C6050 C6051 C6052	1-126-960-11 1-136-165-00 1-109-954-11 1-126-935-11 1-164-625-11	FILM ELECT ELECT	1MF 0.1MF 0.47MF 470MF 680PF	20% 5% 20% 20% 10%	50V 50V 160V 6.3V 500V
TP1001 TP1002		PIN, TERMINAL PIN, TERMINAL				C6053 C6054 C6055 C6056 C6057	1-164-625-11 1-107-639-11 1-107-641-11 1-137-370-11 1-102-030-00	ELECT ELECT FILM	680PF 47MF 220MF 0.01MF 330PF	10% 20% 20% 5% 10%	500V 160V 160V 50V 500V
TU1002 TU1003		<tuner, btp-<br="" et="">TUNER, ET BTP-</tuner,>				C6058 C6059 C6060 C6061 C6064	1-102-114-00 1-102-114-00 1-102-114-00 1-102-114-00 1-162-599-12	CERAMIC CERAMIC CERAMIC	470PF 470PF 470PF 470PF 0.0047MF	10% 10% 10% 10%	50V 50V 50V 50V 250V
******	*****	******	*****	******	******	C6065	1-162-599-12	CERAMIC	0.0047MF		250V
	* A-1637-007-A	G BOARD, CO!						<connector:< td=""><td>&gt;</td><td></td><td></td></connector:<>	>		
		SCREW (M3X10) RUBBER, SILICO <capacitor></capacitor>			ı	CN6005 CN6006	1-695-915-11 * 1-580-843-11 * 1-580-689-11	TAB (CONTACTAB (CONTACTAB), CONNECTABIN, CON	r) Or (POWE Or (PC BO	ARD) 4	
C6001 2 C6002 C6003 C6004 C6006	1-113-890-51 1-104-708-11 1-126-944-11 1-104-665-11 1-104-706-11	CERAMIC FILM ELECT ELECT	0.0022MF 0.47MF 3300MF 100MF 0.22MF	20% 20% 20% 20% 20%	250V 250V 25V 25V 25V	CN6009 CN6010 CN6011	* 1-564-507-11 * 1-508-768-00 * 1-573-986-11	PLUG, CONNECT PLUG, CONNECT PIN, CONNECT PIN, CONNECT PIN, CONNECT	CTOR 4P OR (5mm P OR (PC BO	ARD) 5	5P
			0.0022MF 0.22MF	20% 20%	250V 250V	CN6013	* 1-508-765-00	PIN, CONNECT	OR (5mm P	ITCH)	3P
C6008 C6009 C6010	1-104-706-11 1-102-114-00 1-102-112-00	CERAMIC CERAMIC	470PF 330PF	10% 10%	50V 50V			<diode></diode>			
C6011 C6012 C6013 C6014 C6016 C6017	1-107-678-91 1-102-112-00 1-137-479-11 1-126-968-11 1-126-964-11 1-164-346-11	CERAMIC FILM ELECT	4.7MF 330PF 1MF 100MF 10MF 1MF	20% 10% 10% 20% 20%	450V 50V 400V 50V 50V 16V	D6001 D6002 D6003 D6005 D6006	8-719-979-58 8-719-022-99 8-719-110-36 8-719-911-19	DIODE EGP10D DIODE EGP10D DIODE D6SB60 DIODE RD13ES DIODE ISS119-	L B2		
C6018 C6019 C6020 C6021 C6022	1-117-195-11 1-104-664-11 1-104-665-11 1-126-961-11 1-137-370-11	ELECT ELECT ELECT	820MF 47MF 100MF 2.2MF 0.01MF	20% 20% 20% 20% 5%	400V 25V 25V 50V 50V	D6007 D6008 D6009 D6010 D6011	8-719-979-64 8-719-059-23 8-719-028-72 8-719-150-92	DIODE U05G DIODE UF4005I DIODE P6KE20 DIODE RGP02- DIODE RD33EB	0AG23 17EL-6433 33T		
C6023 C6024 C6025 C6026 C6027	1-102-112-00 1-126-960-11 1-136-165-00 1-104-665-11 1-104-665-11	ELECT FILM ELECT	330PF 1MF 0.1MF 100MF 100MF	10% 20% 5% 20% 20%	50V 50V 50V 25V 25V	D6012 D6013 D6014 D6015 D6016	8-719-110-12 8-719-911-19 8-719-911-19 8-719-911-19	DIODE ISS119- DIODE RD9.1ES DIODE ISS119- DIODE ISS119- DIODE ISS119-	SB1 25 25 25 25		
C6028 C6029 C6030 C6031 C6032	1-164-625-11 1-164-625-11 1-115-405-11 1-126-964-11 1-126-964-11	CERAMIC FILM ELECT	680PF 680PF 0.039MF 10MF 10MF	10% 10% 3% 20% 20%	500V 500V 1KV 50V 50V	D6017 D6018 D6019 D6020 D6021	8-719-911-19 8-719-911-19 8-719-911-19 8-719-979-64	DIODE S2LA20 DIODE ISS119- DIODE ISS119- DIODE ISS119- DIODE UF4005	25 25 25 PKG23		
C6033 C6034 C6035 C6036 C6037	1-130-471-00 1-101-810-00 1-101-810-00 1-126-768-11 1-126-943-11	CERAMIC CERAMIC ELECT	0.001MF 100PF 100PF 2200MF 2200MF	2% 5% 5% 20% 20%	50V 500V 500V 16V 25V	D6022 D6023 D6024 D6025 D6026	8-719-979-64 8-719-110-52 8-719-510-64 8-719-110-52	DIODE RD20ES DIODE UF4005 DIODE RD20ES DIODE S2LA20 DIODE RD20ES	PKG23 BB1 F BB1		
C6038 C6039 C6040 C6041 C6042	1-126-946-11 1-126-972-11 1-126-972-11 1-126-960-11 1-104-665-11	ELECT ELECT ELECT	6800MF 1000MF 1000MF 1MF 100MF	20% 20% 20% 20% 20%	25V 50V 50V 50V 25V	D6027 D6032 D6033 D6035 D6036	8-719-911-19 8-719-911-19 8-719-018-83 8-719-018-83	DIODE RD20ES DIODE ISS119- DIODE ISS119- DIODE D2S4M DIODE D2S4M	25		
C6043 C6044 C6045 C6046 C6047	1-107-639-11 1-107-641-11 1-104-665-11 1-104-665-11 1-102-112-00	ELECT ELECT ELECT ELECT	47MF 220MF 100MF 100MF 330PF	20% 20% 20% 20% 10%	160V 160V 25V 25V 50V	D6037 D6038 D6039 D6040 D6041	8-719-312-47 8-719-510-12 8-719-027-20	DIODE S2L40F DIODE RBA-40 DIODE D10SC4 DIODE D3S4M- DIODE D3S4M-	·M ·F		

The componants identified by shading and mark  $\triangle$  are critical for safety. Replace only with part number specified.

4

Les composants identifies par une trame et une marque \( \Lambda \) sont critiques pour la securite. Ne les remplacer que par une piece portant le numero specifie.



specified.		piece portant le numer							
REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION		RI	EMARK
D6042 D6043 D6044 D6045 D6046	8-719-110-52 8-719-979-64 8-719-110-52	DIODE UF4005PKG23 DIODE RD20ESB1 DIODE UF4005PKG23 DIODE RD20ESB1 DIODE RD20ESB1		R6000 R6001 R6002 A	1-202-719-00 1-249-417-11 1-218-265-91 1-216-683-11	CARBON	22K	5% <b>5%</b> 0.50%	1/2W 1/4W 1W 1/10W
D6047 D6048 A D6049 D6050 D6051	8-719-947-57 8-719-031-78 8-719-911-19 8-719-911-19	DIODE RD20ESB1 DIODE MTZI-T-72-13B DIODE S2L40F DIODE 1SS119-25 DIODE 1SS119-25		R6004 R6005 R6008 R6009 R6010 R6011	1-247-889-00 1-247-889-00	METAL METAL GLAZE CARBON	510K 510K 120K 270K 270K 10K	1% 5% 5% 5%	1/4W 1/10W 1/10W 1/4W 1/4W 1/10W
D6052 D6053	8-719-027-20 8-719-027-20	DIODE D3S4M-F DIODE D3S4M-F <fuse></fuse>		R6012 R6013 R6014 R6015	1-216-657-11 1-202-962-11 1-216-089-00 1-247-895-00	METAL CHIP WIREWOUND METAL GLAZE CARBON	1.8K 3.3 47K 470K	0.50% 5% 5% 5%	1/10W 10W 1/10W 1/4W
F6001 ∆	1-576-232-11 * 1-533-725-11	FUSE (H.B.C.) 5A/250V HOLDER, FUSE; F6001		R6016 R6018 R6019	1-216-089-91 1-216-089-00 1-216-089-00	METAL GLAZE METAL GLAZE	47K	5% 5%	1/10W 1/10W 1/10W 1/10W
FB6008 FB6009	1-410-397-21	<pre><ferrite bead="" fer<="" ferrite="" induct(="" td=""><td>OR 1.1UH OR 1.1UH</td><td>R6020 R6021 R6022</td><td>1-216-081-00 1-249-397-11</td><td></td><td>22K 22</td><td>5% 5%</td><td>1/10W 1/4W</td></ferrite></pre>	OR 1.1UH OR 1.1UH	R6020 R6021 R6022	1-216-081-00 1-249-397-11		22K 22	5% 5%	1/10W 1/4W
IC6001	8-759-426-45	<ic></ic>		R6023 R6025 R6027 R6028 R6029	1-249-402-11 1-216-065-00 1-249-437-11	METAL GLAZE	56 4.7K 47K	5% 5% 5% 5% 5%	1/10W 1/4W 1/10W 1/4W 1/10W
	8-759-185-47 8-759-077-25 8-749-010-65	IC uPC393C IC IR2112 IC IR3M02A PHOTO COUPLER PC123 PHOTO COUPLER PC123		R6030 R6031 R6032 R6033 R6034	1-216-073-00 1-202-933-61 1-202-933-61		10K 0.1 0.1	5% 5% 10% 10% 5%	1/10W 1/10W 1/2W F 1/2W F 1/10W
IC6007	2-750-185-47	IC IR2112 IC SE-135N-LF12 <coil></coil>		R6035 R6036 R6037 R6038	1-216-049-91 1-216-073-00 1-216-065-00 1-216-295-91	METAL GLAZE METAL GLAZE METAL GLAZE CONDUCTOR, O	1K 10K 4.7K CHIP	5% 5% 5%	1/10W 1/10W 1/10W
L6001 L6002 L6003 L6004 L6005	1-412-525-31 1-412-525-31 1-412-525-31	INDUCTOR 47UH INDUCTOR 10UH INDUCTOR 10UH INDUCTOR 10UH INDUCTOR 10UH		R6039 R6040 R6041 R6042 R6043 R6044		CARBON CARBON		5% 5% 5% 5% 5%	1/10W 1/4W F 1/4W F 1/4W F 1/4W F
L6006 L6007 L6008 L6009 L6010	1-412-533-21 1-412-533-21 1-412-522-41 1-412-522-41	COIL, CHOKE 10UH INDUCTOR 47UH INDUCTOR 47UH INDUCTOR 5.6UH INDUCTOR 5.6UH		R6045 R6046 R6047 R6048 R6049	1-216-081-00 1-249-437-11 1-216-065-00	METAL CHIP METAL GLAZE CARBON METAL GLAZE METAL GLAZE	47K 4.7K	0.50% 5% 5% 5% 5%	1/10W 1/10W 1/4W 1/10W 1/10W
L6011 L6012	1-412-525-31 1-406-971-21	INDUCTOR 10UH COIL, CHOKE 10UH <transistor></transistor>		R6050 R6051 R6052 R6053 R6054	1-216-674-11		9.1K	5% 0.50% 5% 5% 5%	1/10W 1/10W 1/10W 1/4W 1/4W
Q6001 Q6002 Q6003 Q6004 Q6005	8-729-120-28 8-729-216-22 8-729-119-78	TRANSISTOR 2SC1623-L TRANSISTOR 2SC1623-L TRANSISTOR 2SA1162-C TRANSISTOR 2SC2785-F TRANSISTOR 2SA1162-C	.SL6 ; ife	R6055 R6056 R6057 R6058 R6059	1-249-422-11 1-249-427-11 1-249-429-11 1-249-429-11 1-247-843-11	CARBON CARBON CARBON CARBON	2.7K 6.8K 10K 10K 3.3K	5% 5% 5% 5% 5%	1/4W 1/4W 1/4W 1/4W 1/4W
Q6006 Q6007 Q6008 Q6009 Q6010	8-729-028-10 8-729-028-10 8-729-140-9	TRANSISTOR 2SC1623-L TRANSISTOR IRFI744G- TRANSISTOR IRFI744G- TRANSISTOR 2SB734-34 TRANSISTOR 2SC2785-L	LF LF	R6060 R6061 R6062 R6063 R6064	1-249-405-11 1-215-473-00 1-249-417-11 1-249-397-11 1-249-397-11	METAL CARBON CARBON	100 150K 1K 22 22	5% 1% 5% 5% 5%	1/4W F 1/4W F 1/4W F 1/4W F
Q6011 Q6012 Q6013 Q6014 Q6015	8-729-119-76 8-729-820-83 8-729-028-1	8 TRANSISTOR 2SC2785-F 6 TRANSISTOR 2SA1175-F 2 TRANSISTOR 2SA1208-T 0 TRANSISTOR IRF1744G- 0 TRANSISTOR IRF1744G-	HFE [ LF	R6065 R6066 R6067 R6068 R6069	1-249-441-11 1-216-366-00 1-249-425-11 1-249-425-11 1-215-473-00	) METAL OXIDE   CARBON   CARBON	100K 0.56 4.7K 4.7K 150K	5% 5% 5% 5% 1%	1/4W 2W F 1/4W F 1/4W F 1/4W
				R6070 R6071	1-249-417-1 1-215-449-00		1K 15K	5% 1%	1/4W F 1/4W





Les composants identifiés par une trame et une marque \(\Delta\) sont critiques pour la securite. Ne les remplacer que par une piece portant le numero specifie.

The componants identified by shading and mark  $\triangle$  are critical for safety.

Replace only with part number specified.

G							piece portant le n	urnero specifie.	specified.		
REF. NO.	PART NO.	DESCRIPTION			REMARK	REF. NO.	PART NO.	DESCRIPTION			REMARK
R6072 A R6073 R6075 R6076 R6077 R6078	1-247-823-81	METAL OXIDE CARBON CARBON	470	1% 5% 5% 5% 5%	1/4W 1/4W 1W 1 1/4W 1 1/4W 1	C908 C909 C911 C912	1-104-665-11 1-137-361-11 1-126-960-11 1-163-251-11 1-126-960-11	FILM ELECT CERAMIC CHIP ELECT	100MF 330PF 1MF 100PF 1MF	20% 5% 20% 5% 20% 20%	25V 50V 50V 50V 50V
R6081 R6082 R6083	1-249-377-11 1-249-377-11 1-249-377-11	CARBON CARBON	0.47 0.47 0.47	5% 5% 5%	1/4W 1 1/4W 1	C915 C916 C917		CERAMIC CHIP ELECT ELECT	33PF 4.7MF 10MF 0.001MF	5% 20% 20% 5%	50V 50V 50V 50V
R6084 R6085 R6086	1-249-377-11 1-212-849-00 1-249-429-11	CARBON FUSIBLE	0.47 4.7 10K	5% 5% 5%	1/4W 1 1/4W 1 1/4W		1-126-959-11 1-126-964-11 1-164-232-11 1-126-964-11 1-126-933-11	ELECT CERAMIC CHIP ELECT	0.47MF 10MF 0.01MF 10MF 100MF	20% 20% 10% 20% 20%	50V 50V 50V 50V 16V
RY6003	1-515-999-11	RELAY, POWER				C925 C926 C927 C928 C929	1-137-372-11 1-126-942-61 1-137-364-11 1-126-940-11 1-137-416-11	ELECT FILM ELECT	0.022MF 1000MF 0.001MF 330MF 0.01MF	5% 20% 5% 20% 10%	50V 25V 50V 25V 100V
T6004 A	∆1-429-808-21 ∆1-429-807-11	TRANSFORMER TRANSFORMER TRANSFORMER	L CONVER L CONVER	TER TER (P		C930 C931 C932 C934 C935	1-137-364-11 1-126-967-11 1-126-960-11 1-137-399-11 1-137-399-11	FILM ELECT ELECT FILM	0.001MF 47MF 1MF 0.1MF	5% 20% 20% 5% 10%	50V 50V 50V 50V 100V
	* A-1642-192-A	E BOARD, COM ************************************	MPLETE ********	)		C936 C937 C938 C939 C940	1-126-964-11 1-126-964-11 1-126-933-11 1-126-964-11 1-104-664-11	ELECT ELECT ELECT	10MF 10MF 100MF 10MF 47MF	20% 20% 20% 20% 20%	50V 50V 16V 50V 25V
C801	1-110-626-11	RUBBER, SILICO <capacitor> ELECT</capacitor>	330MF	20%	160V	C941 C942 C943 C944 C945	1-126-964-11 1-104-664-11 1-126-965-11 1-126-964-11 1-126-964-11	ELECT ELECT ELECT	10MF 47MF 22MF 10MF 10MF	20% 20% 20% 20% 20%	50V 25V 50V 50V 50V
C802 C803 C804 C805	1-163-251-11 1-110-626-11 1-137-364-11 1-136-173-00 1-102-030-00	FILM FILM	100PF 330MF 0.001MF 0.47MF	5% 20% 5% 5%	50V 160V 50V 50V	C946 C947 C948 C949 C950	1-126-961-11 1-126-942-61 1-104-666-11 1-126-964-11 1-126-964-11	ELECT ELECT ELECT	2.2MF 1000MF 220MF 10MF 10MF	20% 20% 20% 20% 20%	50V 25V 25V 50V 50V
C807 C808 C809 C810	1-106-363-00 1-107-636-11 1-126-967-11 1-130-481-00	MYLAR ELECT ELECT FILM	0.0068MF 10MF 47MF 0.0068MF	20% 20% 5%	200V 160V 50V 50V	C951 C952 C955 C956 C957	1-126-964-11 1-164-232-11	CERAMIC CHIP	10MF 0.01MF	20% 10% 20% 10%	50V 50V 50V 50V 50V
C811 C812 C813 C814 C815	1-137-475-11 1-126-965-11 1-164-232-11 1-126-968-11 1-162-114-00	ELECT CERAMIC CHIP ELECT	2.2MF 22MF 0.01MF 100MF 0.0047MF	10% 20% 10% 20%	50V 50V 50V 50V 2KV	C957 C958 C959 C980	1-164-232-11	CERAMIC CHIP CERAMIC CHIP	0.01MF	10% 10%	50V 50V 50V
C816 C817 C818 2 C819 C820		FILM		10% 10% 3% 10% 20%	50V 50V 2.5KV 100V 50V	CJ901 CJ902	1-216-295-00	<chip conductor,="" oconductor,="" oconductor<="" td=""><td>CHIP CHIP</td><td></td><td></td></chip>	CHIP CHIP		
C821 C823 C824 C825 C826	1-164-232-11 1-136-601-11 1-126-964-11 1-162-318-11 1-130-467-00	ELECT CERAMIC	0.01MF 0.01MF 10MF 0.001MF 470PF	10% 5% 20% 10% 5%	50V 630V 50V 500V 50V	CJ903 CJ904	1-216-295-00	CONDUCTOR, CONDUCTOR, CONDUCTOR, CONNECTOR	CHIP		
C828 C830 C831 C832 C901	1-111-036-11 1-137-420-11 1-126-934-11 1-126-967-11 1-163-251-11	FILM ELECT	470MF 0.047MF 220MF 47MF 100PF	20% 10% 20% 20% 5%	16V 100V 16V 50V 50V	CN802 CN827 CN851 CN881 CN882	* 1-573-963-11 * 1-564-509-11 * 1-573-986-11 * 1-691-135-11	PLUG, CONNECT PIN, CONNECT PLUG, CONNECT PIN, CONNECT PIN, CONNECT	OR (PC BO CTOR 6P OR (PC BO OR (PC BO	ARD) :	5P 4P
C902 C903 C904 C905 C906	1-137-370-11 1-137-431-11 1-137-358-11 1-104-665-11 1-137-370-11	FILM FILM FILM ELECT	0.01MF 560PF 0.0001MF 100MF 0.01MF	5% 5%	50V 50V 50V 25V 50V	CN884 CN885 CN886 CN904	* 1-506-371-00 * 1-506-371-00	PIN, CONNECTO PIN, CONNECTO PIN, CONNECTO PLUG, CONNECTO	OR 2P OR 2P	ARD) (	

The componants identified by shading and mark  $\triangle$  are critical for safety. Replace only with part number specified.

specified.

8

Les composants identifies par une trame et une marque A sont critiques pour la securite. Ne les remplacer que par une piece portant le numero specifie.

\*\*KP-E61MH11/E61MN11/E61SN11
RM-901
RM-901
RM-901
RM-901
RM-901
RM-901
RM-901

RM-901

RM-901

RM-901

RM-901

RM-901

RM-901

RM-901

RM-901

RM-901

RM-901

RM-901

RM-901

RM-901

RM-901



specified.			ally used.	PART NO.	DESCRIPTION		RI	EMARK
REF. NO.		DESCRIPTION REMARK	REF. NO.	FART NO.	<transistor></transistor>			
D801 D802 D803 D804 D805 4	8-719-109-85 8-719-404-49 8-719-971-20 8-719-908-03	<pre><diode> DIODE RD5.1ESB2 DIODE MA111 DIODE ERC38-06 DIODE GP08D DIODE ERC06-15STP11</diode></pre>	Q801 Q802 Q803 Q806 Q807	8-729-119-80 8-729-122-12 4 8-729-805-07	TRANSISTOR 2S TRANSISTOR 2S TRANSISTOR 2S TRANSISTOR 2S TRANSISTOR 2S TRANSISTOR 2S	C2688-LK A1221-L D1887-CA		
D806	8-719-911-19 8-719-979-40 8-719-500-71 8-719-911-19	DIODE ISS119-25 DIODE ERCO6-15STP11 DIODE D8LC40 DIODE ISS119-25 DIODE ERCO6-15S	Q808 Q809 Q810 Q811 Q813	8-729-823-81 8-729-231-55 8-729-823-81 8-729-216-22	TRANSISTOR IR TRANSISTOR 2S TRANSISTOR 2S TRANSISTOR 2S TRANSISTOR 2S	C4632LS-Ci C2878-AB C4632LS-Ci A1162-G		
D812 D814 D816 D817 D818	8-719-920-67 8-719-404-49 8-719-404-49	DIODE MA111 DIODE ERC91-02 DIODE MA111 DIODE MA111 DIODE MA111	Q901 Q902 Q903 Q904 Q905	8-729-140-93 8-729-140-96 8-729-422-27	TRANSISTOR 2S TRANSISTOR 2S TRANSISTOR 2S TRANSISTOR 2S TRANSISTOR 2S	B733-34 D774-34 D601A-Q		
D819 D901 D904 D905 D907	8-719-404-49 8-719-404-49 8-719-404-49	DIODE RD5.1M-B2 DIODE MA111 DIODE MA111 DIODE MA111 DIODE MA111	Q906 Q907 Q908 Q909 Q910	8-729-231-55 8-729-422-27 8-729-422-27	TRANSISTOR 2S TRANSISTOR 2S TRANSISTOR 2S TRANSISTOR 2S TRANSISTOR 2S	C2878-AB D601A-Q D601A-Q		
D908 D909 D910 D911 D912	8-719-302-43 8-719-911-19 8-719-105-82	DIODE RD5.1M-B2 DIODE EL1Z DIODE 1SS119-25 DIODE RD5.1M-B2 DIODE RD5.1M-B2	Q911 Q912 Q914 Q915 Q916	8-729-216-22 8-729-422-27 8-729-422-27 8-729-027-59	TRANSISTOR 2S TRANSISTOR 2S TRANSISTOR 2S TRANSISTOR 2S TRANSISTOR D	A1162-G D601A-Q D601A-Q FC144EKA-		
D913 D914 D915 D916	8-719-404-49 8-719-404-49 8-719-105-57	DIODE MA111 DIODE MA111 DIODE MA111 DIODE RD3.9M-B1	Q917	8-729-027-38	TRANSISTOR D'	ГА144ЕКА-	T146	
D917 D918 D919 D920 D921	8-719-404-49 8-719-106-81 8-759-157-40 8-719-106-81	DIODE RD13M-B3	R800 R801 R802 R804 R805	1-216-041-00 1-249-421-11 1-249-425-11		470 2.2K 4.7K	0.50% 5% 5% 5% 5%	1/10W 1/10W 1/4W 1/4W F 1W F
D924 D926 D927 D929	8-719-404-49 8-719-049-61	DIODE MA111 DIODE MA3043-M-(TX) DIODE MA3100H-TX	R806 R807 ■R808 ■R809 R810	1-249-431-11 1-260-325-11 众 九 1-249-427-11	CARBON CARBON CARBON	560	5% 5% 5%	1/4W F 1/2W 1/4W 1/4W F
FB002	1-410-396-41	<pre><ferrite bead=""> FERRITE BEAD INDUCTOR 0.45UH</ferrite></pre>	R811 R812 R813 R814 R816	1-216-395-00 1-216-484-00 1-215-919-11	METAL GLAZE METAL OXIDE METAL OXIDE METAL OXIDE METAL GLAZE	3.3 3.9 <b>K</b> 2.2 <b>K</b>	5% 5% 5% 5% 5%	1/10W 3W F 3W F 3W F 1/10W
IC901 IC902 IC903 IC904	8-759-133-90 8-759-711-28 8-759-634-51	<ic> IC uPC339C IC uPC339C IC uPC339C IC NJM2058D IC M5218AP</ic>	R817 R818 R819 R820 R821	1-249-405-11 1-216-083-00 1-215-905-11	METAL OXIDE CARBON METAL GLAZE METAL OXIDE METAL GLAZE	100 27K 10	5% 5% 5% 5% 5%	3W F 1/4W F 1/10W 3W F 1/10W
IC905 IC906		G IC LM7912CT  G IC TA7812S <coil></coil>	R822 R823 R825 R826 R830	1-216-047-91 1-215-928-11 1-216-033-00	METAL OXIDE METAL GLAZE METAL OXIDE METAL GLAZE METAL OXIDE	820 68K 220	5% 5% 5% 5% 5%	3W F 1/10W 3W F 1/10W 3W F
L801 L802 L803 L804 L901	1-406-665-11 1-422-613-11 1-411-286-11	COIL. CHOKE 100UH COIL, CHOKE 100UH COIL, AIR CORE COIL, CHOKE 220UH INDUCTOR 39UH	R831 R832 R835 R836 R837	1-215-919-11 1-216-049-00 1-249-474-11 1-202-818-00	METAL OXIDE METAL GLAZE CARBON	2.2K 1K 1	5% 5% 5% 20% 5%	3W F 1/10W 1/2W F 1/2W 1W F
L902	1-408-416-00	NEON LAMP>	R838 R839 R843 R846 R847	1-247-807-31 1-249-427-11 1-202-549-00 1-202-838-00	CARBON SOLID	100 6.8K 100 100K 10K	5% 5% 20% 20% 5%	1/4W 1/4W F 1/2W 1/2W 1/10W
NL802	1-519-108-99	9 LAMP, NEON	R849 R850 R851	1-249-433-1 1-216-081-0		22K	5% 5%	1/4W 1/10W 1/10W

#### KP-E61MH11/E61MN11/E61SN11



RM-901 RM-901

• The components identified by ☑ in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.

Les composants identifies par une trame et une marque £ sont critiques pour la securite. Ne les remplacer que par une piece portant le numero specifie.

The componants identified by shading and mark \(\Delta\) are critical for safety.

Replace only with part number specified.

.

Oliginally used.		TMADE		DART NO			D	EMARK
REF. NO. PART NO. DESCRIPTION	K.	EMARK	REF. NO.	PART NO.	DESCRIPTION			EWAKK
	10K 0.50% 1 5%	1/10W 1/4W F	R964 R965 R966	1-214-757-00 1-216-091-00 1-214-757-00	METAL GLAZE	15K 56K 15K	1% 5% 1%	1/4W 1/10W 1/4W
R856 1-216-691-11 METAL CHIP 4	47K 0.50% 47K 0.50% 130K 0.50%	1/10W 1/10W 1/10W	R967 R968	1-216-025-00 1-214-751-00	METAL GLAZE METAL	100 8.2K	5% 1%	1/10W 1/4W
R858 1-216-676-11 METAL CHIP	11K 0.50% 1 5%	1/10W 1/4W F	R969 R970 R971	1-215-423-00 1-214-757-00	METAL	1.2K 15K 1M	1% 1% 5%	1/4W 1/4W 1/10W
R883 1-216-091-00 METAL GLAZE 3 R888 1-216-067-00 METAL GLAZE 3 R901 1-216-065-00 METAL GLAZE 4	5.6K 5%	1/10W 1/10W 1/10W	R972 R973	1-216-699-11	METAL CHIP METAL GLAZE	100 <b>K</b>	0.50%	1/10W 1/10W
R902 1-216-065-00 METAL GLAZE 4 R903 1-216-085-00 METAL GLAZE 3	4.7 <b>K</b> 5%	1/10W 1/10W	R974 R975 R976	1-216-699-11 1-216-043-91	METAL CHIP METAL GLAZE METAL GLAZE	100K 560	0.50% 5% 5%	1/10W 1/10W 1/10W
	2.2K 5% 100 5% 100 5%	1/10W 1/2W F 1/2W F	R977 R978	1-216-075-00	METAL GLAZE METAL GLAZE	12K	5% 5%	1/10W 1/10W
R907 1-216-091-00 METAL GLAZE 3 R908 1-216-085-00 METAL GLAZE 3	56K 5%	1/10W 1/10W	R979	1-216-075-00 1-216-081-00	METAL GLAZE METAL GLAZE METAL GLAZE	12K 22K	5% 5% 5%	1/10W 1/10W 1/10W
R909 1-216-113-00 METAL GLAZE 4 R910 1-216-059-00 METAL GLAZE 2 R911 1-216-059-00 METAL GLAZE 2	2.7 <b>K</b> 5%	1/10W 1/10W 1/10W	R982	1-216-671-11		6.8K	0.50%	1/10W 1/4W
R912 1-216-073-00 METAL GLAZE 1 R913 1-216-077-00 METAL GLAZE 1	10K 5%	1/10W 1/10W	R984 R985	1-216-083-00	METAL GLAZE	27K 18K	5% 0.50%	1/10W 1/10W
R914 1-216-049-00 METAL GLAZE 1 R915 1-216-091-00 METAL GLAZE 2	1K 5%	1/10W 1/10W	R986 R987	1-216-049-00	METAL GLAZE METAL GLAZE	1K	5% 5%	1/10W 1/10W
R916 1-216-065-00 METAL GLAZE 4	4.7K 5%	1/10W	<b>R988</b>		METAL METAL OXIDE	0 <b>2</b> V	5%	1/4W 2W F
R917 1-216-057-00 METAL GLAZE 2 R918 1-216-073-00 METAL GLAZE 1		1/10W 1/10W	R990	1-215-897-11	METAL OXIDE	6.8 <b>K</b>	5%	2W F
R919 1-216-077-00 METAL GLAZE	15K 5%	1/10W		1-216-672-11 1-247-807-31	METAL CHIP CARBON	7.5 <b>K</b> 100	0.50% 5%	1/10W 1/4W
R920 1-216-113-00 METAL GLAZE 4 R921 1-216-059-00 METAL GLAZE 2		1/10W 1/10W	R995	1-216-677-11	METAL CHIP	12K	0.50%	1/10W
R922 1-216-073-00 METAL GLAZE 1 R923 1-216-077-00 METAL GLAZE 1	10K 5%	1/10W 1/10W	R996 R997	1-216-683-11 1-216-065-00	METAL CHIP METAL GLAZE METAL GLAZE	22K 4.7K	0.50% 5% 5%	1/10W 1/10W 1/10W
R924 I-216-067-00 METAL GLAZE £ R926 I-216-049-00 METAL GLAZE £ R927 I-249-377-11 CARBON		1/10W 1/10W 1/4W F	Roso	1 210 073 00	<spark gap=""></spark>		2.0	
R928 1-216-067-00 METAL GLAZE 3 R930 1-216-081-00 METAL GLAZE 3	5.6K 5%	1/10W 1/10W	SG801	1-519-422-11				
R931 1-216-059-00 METAL GLAZE 2 R932 1-216-059-00 METAL GLAZE 2 R933 1-216-081-00 METAL GLAZE 2	2.7K 5%	1/10W 1/10W 1/10W			<transforme< td=""><td>R&gt;</td><td></td><td></td></transforme<>	R>		
R934 1-216-085-00 METAL GLAZE 3 R935 1-216-049-00 METAL GLAZE 3	33K 5%	1/10W 1/10W			TRANSFORMER		(NX-	2631//A4S)
R936 1-216-065-00 METAL GLAZE 4 R937 1-216-049-00 METAL GLAZE 1	1K 5%	1/10W 1/10W	T802 T803 Δ		TRANSFORMER TRANSFORMER			
R938 1-216-679-11 METAL CHIP R939 1-216-073-00 METAL GLAZE R940 1-216-083-00 METAL GLAZE	10K 5%	1/10W 1/10W 1/10W	*****	******	*******	******	*****	*****
R941 1-216-091-00 METAL GLAZE 1 R942 1-216-049-00 METAL GLAZE	1K 5%	1/10W 1/10W	*	A-1642-215-A	D BOARD, CO!	MPLETE ******		
R943 1-249-377-11 CARBON ( R944 1-216-689-11 METAL GLAZE 1 R945 1-216-077-00 METAL GLAZE 1		1/4W F 1/10W 1/10W			SCREW (M3X10) SCREW +PSW 32			
R946 1-216-073-00 METAL GLAZE R947 1-216-025-00 METAL GLAZE R948 1-216-051-00 METAL GLAZE	100 5%	1/10W 1/10W 1/10W			<capacitor></capacitor>			
	22K 0.50%	1/10W 1/10W	C1502 C1503 C1504	1-126-943-11 1-164-232-11 1-126-943-11	CERAMIC CHIP	2200MF 0.01MF 2200MF	20% 10% 20%	25V 50V 25V
	1K 5% 100K 1% 47K 1%	1/10W 1/4W 1/4W	C1505 C1506	1-136-177-00 1-102-228-00	FILM	1MF 470PF	5% 10%	50V 500V
R956 1-216-675-11 METAL CHIP	10K 0.50% 120K 0.50%	1/10W 1/10W	C1507 C1508 C1509		CERAMIC CHIP CERAMIC CHIP ELECT		10% 5% 20%	50V 50V 50V
R959 1-214-757-00 METAL	150K 0.50% 15K 1% 15K 5%	1/10W 1/4W 1/10W	C1510 C1511	1-137-401-11 1-137-423-11		0.22MF 0.15MF	10% 10%	100V 100V
R961 1-216-025-00 METAL GLAZE		1/10W 1/10W 1/10W	C1512 C1513 C1514		FILM CERAMIC CHIP CERAMIC CHIP		10% 5%	100V 50V 50V
R963 1-214-749-00 METAL	6.8K 1%	1/4W	C1515		CERAMIC CHIP		•	50V



		PECCULATION			DEMARY	REF. NO.	PART NO.	DESCRIPTION		٠	REMARK
REF. NO.	PART NO.	DESCRIPTION		<i>5.01</i>	REMARK			CERAMIC CHIP	0.047ME	10%	25V
C1516	1-136-177-00		1MF	5%	50V	C1845 C1846	1-163-809-11	CERAMIC CHIP	0.047MF	10%	25V
C1517 C1518 C1551 C1603 C1604	1-164-232-11 1-126-964-11 1-163-251-11	CERAMIC CHIP CERAMIC CHIP ELECT CERAMIC CHIP CERAMIC CHIP	0.01MF 10MF 100PF	5% 10% 20% 5% 5%	50V 50V 50V 50V 50V	C1847 C1848 C1849 C1850 C1851	1-163-809-11 1-126-968-11 1-126-968-11 1-137-399-11	ELECT FILM	0.047MF 100MF 100MF 0.1MF	10% 10% 20% 20% 5%	25V 25V 50V 50V 50V
C1605 C1606 C1607 C1608 C1611	1-163-251-11 1-163-251-11	CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP ELECT	100PF 100PF 100PF 100MF	5% 5% 5% 5% 20%	50V 50V 50V 50V 50V	C1852 C1853 C1854 C1855 C1856	1-126-968-11 1-137-378-11 1-126-963-11 1-126-960-11 1-104-665-11	FILM ELECT ELECT ELECT	100MF 0.22MF 4.7MF 1MF 100MF	20% 5% 20% 20% 20%	50V 50V 50V 50V 25V
C1612 C1613 C1615 C1617 C1619	1-104-665-11 1-126-968-11 1-104-665-11 1-126-941-11 1-104-665-11	ELECT ELECT ELECT	100MF 100MF 100MF 470MF 100MF	20% 20% 20% 20% 20%	25V 50V 25V 25V 25V	C1857 C1858 C1859 C1860 C1861	1-163-809-11 1-163-809-11 1-126-968-11	CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP ELECT	0.047MF 0.047MF 100MF	20% 10% 10% 20%	50V 25V 25V 25V 50V
C1620 C1622 C1701 C1702 C1703	1-126-941-11 1-104-665-11 1-126-935-11 1-163-809-11 1-163-099-00	ELECT	470MF 100MF 470MF 0.047MF 18PF	20% 20% 20% 10% 5%	25V 25V 16V 25V 50V	C1862 C1863 C1864 C1865 C1866	1-126-960-11 1-136-173-00 1-126-960-11 1-126-967-11	FILM ELECT ELECT	1MF 0.47MF 1MF 1MF 47MF	20% 5% 20% 20% 20%	50V 50V 50V 50V 50V
C1704 C1705 C1709 C1723 C1724	1-163-099-00 1-163-031-11 1-163-251-11	CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	18PF 0.01MF 100PF	5% 5% 5% 5%	50V 50V 50V 50V 50V	CJI		<chip condu<="" conductor,="" td=""><td>CHIP</td><td></td><td></td></chip>	CHIP		
C1801 C1802 C1803 C1805	1-126-960-11 1-126-964-11 1-163-809-11 1-163-809-11	ELECT ELECT CERAMIC CHIP CERAMIC CHIP	1MF 10MF 0.047MF 0.047MF	20% 20% 10% 10%	50V 50V 25V 25V	CJ2 CJ3 CJ4 CJ5	1-216-295-00 1-216-295-00 1-216-295-00	CONDUCTOR, C CONDUCTOR, C CONDUCTOR, C	CHIP CHIP CHIP		
C1806 C1807 C1808 C1809 C1810	1-163-809-11 1-163-809-11 1-104-661-91 1-104-661-91	ELECT	0.047MF 0.047MF 330MF 330MF	10% 10% 20% 20%	25V 25V 16V 16V 25V	CJ6 CJ7 CJ8 CJ9 CJ10	1-216-295-00 1-216-295-00 1-216-295-00 1-216-295-00	CONDUCTOR, C CONDUCTOR, C CONDUCTOR, C CONDUCTOR, C CONDUCTOR, C	CHIP CHIP CHIP CHIP		
C1811 C1812 C1813 C1814 C1816	1-163-809-11 1-163-275-11 1-163-809-11 1-163-251-11	CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	0.047MF 1000PF 0.047MF 100PF	10% 10% 5% 10% 5% 5%	25V 50V 25V 50V 50V	CJ12 CJ13 CJ14 CJ15	1-216-295-00 1-216-295-00 1-216-295-00 1-216-295-00	CONDUCTOR, C CONDUCTOR, C CONDUCTOR, C CONDUCTOR, C	CHIP CHIP CHIP CHIP		
C1817 C1818 C1819 C1820 C1821	1-163-809-11 1-126-933-11 1-163-005-11 1-126-959-11	CERAMIC CHIP ELECT CERAMIC CHIP ELECT	0.047MF 100MF 470PF 0.47MF	10% 20% 10% 20%	25V 16V 50V 50V	CJ17 CJ18 CJ19 CJ20	1-216-295-00 1-216-295-00 1-216-295-00 1-216-295-00	CONDUCTOR, C CONDUCTOR, C CONDUCTOR, C CONDUCTOR, C	CHIP CHIP CHIP CHIP		
C1822 C1823 C1824 C1825 C1826	1-126-960-11 1-126-960-11 1-126-967-11	ELECT ELECT ELECT	1MF 1MF 47MF 47MF	10% 20% 20% 20% 20%	50V 50V 50V 50V 50V	CJ21 CJ22 CJ23 CJ24 CJ25	1-216-295-00 1-216-295-00 1-216-295-00 1-216-295-00	CONDUCTOR, C CONDUCTOR, C CONDUCTOR, C CONDUCTOR, C	CHIP CHIP CHIP CHIP		
C1827 C1828 C1829 C1830 C1831	1-163-809-11 1-163-809-11	CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP ELECT	0.047MF 0.047MF	10% 10% 10% 10% 20%	25V 25V 25V 25V 16V	CJ26 CJ27 CJ28 CJ29 CJ30	1-216-295-00 1-216-295-00 1-216-295-00 1-216-295-00	CONDUCTOR, CONDUCTOR,	CHIP CHIP CHIP CHIP		
C1832 C1833 C1834 C1835 C1836	1-163-809-11 1-163-809-11	CERAMIC CHIR CERAMIC CHIR CERAMIC CHIR CERAMIC CHIR CERAMIC CHIR	0.047MF 0.047MF	20% 10% 10% 10% 10%	25V 25V 25V 25V 25V	CJ31 CJ32 CJ33 CJ34 CJ35	1-216-295-00 1-216-295-00 1-216-295-00 1-216-295-00	CONDUCTOR, (CONDUCTOR, CONDUCTOR,	CHIP CHIP CHIP CHIP		
C1837 C1838 C1839 C1840 C1841	1-164-489-11 1-126-968-11 1-126-960-11 1-126-967-11	CERAMIC CHIF ELECT ELECT ELECT ELECT ELECT	100MF 100MF 100MF 1MF 47MF	20% 20% 20% 20%	50V 50V 50V 50V	CJ36 CJ37 CJ39 CJ40 CJ42	1-216-295-00 1-216-295-00 1-216-295-00 1-216-295-00	CONDUCTOR, (CONDUCTOR, CONDUCTOR,	CHIP CHIP CHIP CHIP		
C1842 C1843 C1844		CERAMIC CHIE CERAMIC CHIE ELECT		5% 5% 20%	50V 50V 50V	CJ43 CJ44 CJ45 CJ46	1-216-295-00 1-216-295-00	CONDUCTOR, ( CONDUCTOR, ( CONDUCTOR, ( CONDUCTOR, (	CHIP CHIP		



Les composants identifies par une trame et une marque \(\Lambda\) sont critiques pour la securite. Ne les remplacer que par une piece portant le numero specifie.

The componants identified by shading and mark  $\triangle$  are critical for safety. Replace only with part number specified.

U					piece portant le nu	mero specifie.	specified.	.,	
REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION		RE 	MARK
	1-216-295-00	CONDUCTOR, CHIP		IC1601 IC1602		IC STK392-010 IC STK392-010			
		CONDUCTOR, CHIP		IC1701 IC1702	8-752-861-57 8-759-041-54	IC CXP85112B-6	13S	•	
CJ50	1-216-295-00	CONDUCTOR, CHIP CONDUCTOR, CHIP		IC1702	8-759-327-52				
CJ51 CJ52	1-216-295-00	CONDUCTOR, CHIP CONDUCTOR, CHIP	; ; ; ;	IC1802 IC1803	8-759-327-51				
CJ53 CJ54	1-216-295-00	CONDUCTOR, CHIP CONDUCTOR, CHIP		IC1804 IC1805	8-759-231-53 8-759-327-52	IC TA7805S			
CJ56	1-216-295-00	CONDUCTOR, CHIP CONDUCTOR, CHIP		IC1806	8-759-327-51				
		CONDUCTOR, CHIP		IC1807 IC1808	8-759-231-58				
CJ60	1-216-295-00	CONDUCTOR, CHIP CONDUCTOR, CHIP	1	IC1809 IC1931	8-759-327-52 8-759-711-28	IC PM0002B IC NJM2058D			
CJ63	1-216-295-00	CONDUCTOR, CHIP CONDUCTOR, CHIP	1	IC1932	8-759-711-28	IC NJM2058D			
CJ64	1-216-295-00	CONDUCTOR, CHIP	1			<coil></coil>			
		<connector></connector>		L1501	1-412-533-21	INDUCTOR 47U	н		
CN1509 *	1-564-506-11	PLUG, CONNECTOR 3P PLUG, CONNECTOR 3P		L1502 L1503	1-412-533-21	INDUCTOR 47U INDUCTOR 8.2U	H		
CN1612 *	1-564-507-11	PLUG, CONNECTOR 4P PLUG, CONNECTOR 4P		L1515 L1516	1-410-470-11	INDUCTOR 10U INDUCTOR 100	H		
CN1672 *	1-564-507-11	PLUG, CONNECTOR 4P		L1701	1-410-470-11	INDUCTOR 10U	H		
CN1716 *	1-564-507-11	PLUG, CONNECTOR 4P PLUG, CONNECTOR 5P		L1801 L1802		COIL, CHOKE 4'			
CN1757 *	1-564-515-11	PLUG, CONNECTOR 12P							
		<diode></diode>		0.1501	0.000.400.07	<transistor></transistor>	_		
D1501		DIODE GP08D		Q1501 Q1502	8-729-422-27	TRANSISTOR 25 TRANSISTOR 25 TRANSISTOR 25	SD601A-Q		
D1502 D1503	8-719-971-20	DIODE RD5.6ESB2 DIODE ERC38-06		Q1551 Q1552 Q1701	8-729-422-27	TRANSISTOR 25 TRANSISTOR 25	SD601A-Q		
D1505 D1551		DIODE RD3.9ESB1		Q1701 Q1801		TRANSISTOR 2	_		
D1552	8-719-991-33	DIODE 1SS133T-77 DIODE 1SS133T-77		Q1802 Q1804	8-729-216-22	TRANSISTOR 25	SA1162-G		
D1553 D1601 D1602	8-719-908-03	DIODE GP08D DIODE GP08D							
D1603	8-719-908-03	DIODE GP08D		† } } !		<resistor></resistor>			1/1037
D1604 D1803	8-719-908-03 8-719-991-33	DIODE GP08D DIODE 1SS133T-77		R1501 R1502	1-216-681-11	METAL GLAZE METAL CHIP	18K	5% 0.50% 0.50%	1/10W 1/10W 1/10W
D1827 D1931	8-719-982-03 8-719-924-16	DIODE MTZJ-3.6A DIODE MTZJ-T-77-24		R1503 R1504	1-216-081-00	METAL CHIP METAL GLAZE METAL GLAZE	1.2K 22K	5% 5%	1/10W 1/10W 1/10W
D1932		DIODE MTZJ-T-77-24		R1505		METAL GLAZE		5%	1/10W
D1934 D1935	8-719-924-16	DIODE MTZJ-T-77-24 DIODE MTZJ-T-77-24		R1506 R1507 R1508	1-216-683-11	METAL CHIP METAL GLAZE	22K	0.50% 5%	
D1936 D1937	8-719-924-16	DIODE MTZJ-T-77-24 DIODE MTZJ-T-77-24 DIODE MTZJ-T-77-24		R1509 R1510	1-249-383-11 1-214-661-21	CARBON	1.5	5% 1%	1/4W F 1/4W
D1942		DIODE MTZJ-T-77-24		R1512		METAL OXIDE		5%	3W F
D1945 D1946 D1947	8-719-924-16	DIODE MTZJ-T-77-24 DIODE MTZJ-T-77-24 DIODE MTZJ-T-77-24		R1514 R1515	1-216-635-11 1-216-645-11	METAL CHIP METAL CHIP	220 560	0.50% 0.50%	1/10W 1/10W
D1948	8-719-921-86	5 DIODE MTZJ-13 5 DIODE MTZJ-T-77-24		R1516 R1517	1-214-661-21 1-216-647-11	METAL METAL CHIP	1.5 680	1% 0.50%	1/4W 1/10W
D1951		5 DIODE MTZJ-13		R1518		METAL CHIP	2.7K	0.50%	1/10W
D1953 D1954	8-719-921-86	5 DIODE MTZJ-13 5 DIODE MTZJ-13		R1519 R1520	1-249-377-11 1-249-377-11	CARBON	0.47 0.47	5% 5%	1/4W F 1/4W F 1/10W
				R1521 R1522		METAL GLAZE METAL GLAZE		5% 5%	1/10W 1/10W
0,000		<fuse></fuse>		R1523	1-216-033-00	METAL GLAZE METAL GLAZE	220 22K	5% 5%	1/10W 1/10W
	1-533-223-11	FUSE, GLASS TUBE 3 15A/1251 CLIP, FUSE; F1601		R1551 R1552 R1553	1-216-063-91	METAL GLAZE METAL GLAZE	3.9 <b>K</b>	5% 5%	1/10W 1/10W
F1602 /	№ 1-532-745-1 1-533-223-1	FUSE, GLASS TUBE 3.15A/125 CLIP, FUSE; F1602	•	R1554	1-216-049-00	METAL GLAZE	iK	5%	1/10W
		<ic></ic>		R1559 R1562		METAL GLAZE		5% 5%	1/10W 1/10W
IC1501	8.750 102 T	1 IC STV9379		R1603 R1604	1-216-663-11	METAL CHIP METAL CHIP	3.3K 3.3K	0.50% 0.50%	1/10 <b>W</b> 1/10 <b>W</b>
.01301	U-137-174-1			1					



REF. NO.	PART NO.	DESCRIPTION		R.	EMARK	REF. NO.	PART NO.	DESCRIPTION			EMARK
R1605	1-216-663-11	METAL CHIP	3.3K	0.50%	1/10W	R1829 R1830	1-216-685-11	METAL CHIP METAL GLAZE	27K 100	0.50% 5%	1/10W 1/10W
R1606	1-216-663-11	METAL CHIP	3.3K		1/10W	R1831	1-216-049-00	METAL GLAZE	1 <b>K</b>	5%	1/10W
R1607	1-216-663-11	METAL CHIP METAL CHIP	3.3K 3.3K	0.50% 0.50%	1/10W 1/10W	R1832			12 <b>K</b>		1/10W
R1608 R1610	1-214-729-00	METAL	1K	1%	1/4W	R1833	1-216-049-00	METAL GLAZE METAL GLAZE	IK	5% 5%	1/10W 1/10W
R1612	1-214-729-00	METAL	1 K	1%	1/4W	R1834 R1835	1-216-025-00	METAL GLAZE	100	5%	1/10W
R1613	1-214-673-00		4.7	1%	1/4W	R1836	1-216-081-00	METAL GLAZE	22 <b>K</b>	5%	1/10W
R1615	1-214-673-00 1-214-673-00	METAL	4.7 4.7	1% 1%	1/4W 1/4W	R1837	1-216-675-11		10 <b>K</b>		1/10W
R1616 R1618	1-214-673-00	METAL	4.7	1%	1/4W	R1838	1-216-667-11	METAL CHIP METAL GLAZE	4.7 <b>K</b>	0.50% 5%	1/10W 1/10W
R1619	1-214-673-00	METAL	4.7	1%	1/4 <b>W</b>	R1839 R1840	1-216-631-00	METAL CHIP	10 <b>K</b>	0.50%	1/10W
R1620	1-214-673-00		4.7	1%	1/4W	R1841	1-216-675-11	METAL CHIP	10 <b>K</b>	0.50%	1/10W
R1621	1-214-673-00 1-214-673-00		4.7 4.7	1% 1%	1/4W 1/4W	R1842	1-216-025-00	METAL GLAZE	100	5%	1/10W
R1622 R1623	1-214-729-00		1K	1%	1/4W	R1843	1-216-667-11	METAL CHIP METAL GLAZE	4.7K	0.50% 5%	1/10W 1/10W
R1624	1-214-729-00	METAL	1 <b>K</b>	1%	1/4W	R1844 R1846	1-216-125-00	METAL GLAZE	1.5M	5%	1/10W
R1625	1-214-673-00	METAL	4.7	1%	1/4W	R1847	1-216-675-11	METAL CHIP	10 <b>K</b>	0.50%	1/10W
R1626	1-214-673-00 1-214-673-00	METAL	4.7 4.7	1% 1%	1/4 <b>W</b> 1/4 <b>W</b>	R1849	1-216-067-00	METAL GLAZE	5.6K	5%	1/10W
R1627 R1628	1-214-673-00		4.7	1%	1/4W	R1850	1-216-097-00	METAL GLAZE METAL GLAZE	100K	5% 5%	1/10W 1/10W
R1629	1-214-673-00	METAL	4.7	1%	1/4 <b>W</b>	R1851 R1852	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R1630	1-214-673-00	METAL	4.7	1%	1/4W	R1853	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W
R1631	1-214-729-00 1-214-673-00	METAL	1K 4.7	1% 1%	1/4W 1/4W	R1854	1-216-025-00	METAL GLAZE	100	5%	1/10W
R1632 R1633	1-214-673-00	METAL	4.7	1%	1/4W	R1855	1-216-097-00	METAL GLAZE METAL GLAZE	100K	5% 5%	1/10W 1/10W
R1634	1-214-729-00	METAL	1K	1%	1/4W	R1856 R1857	1-216-033-00	METAL GLAZE	220	5%	1/10W
R1635	1-214-673-00		4.7	1%	1/4W	R1858	1-216-097-00	METAL GLAZE	100K	5%	1/10W
R1636	1-214-673-00 1-214-673-00		4.7 4.7	1% 1%	1/4W 1/4W	R1859	1-216-025-00	METAL GLAZE	100	5%	1/10W
R1637 R1638	1-214-673-00		4.7	1%	1/4W	R1860	1-216-025-00	METAL GLAZE METAL OXIDE	100	5% 5%	1/10W 3W F
R1639	1-214-673-00	) METAL	4.7	1%	1/4W	R1861 R1862	1-216-473-11	METAL OXIDE	56	5%	3W F
R1640	1-214-673-00	METAL	4.7	1%	1/4W	R1863	1-216-025-00	METAL GLAZE	100	5%	1/10W
R1641	1-214-673-00 1-214-673-00	) METAL ) METAI	4.7 4.7	1% 1%	1/4W 1/4W	R1864		METAL GLAZE		5%	1/10W
R1642 R1717	1-216-033-00	) METAL GLAZE	E 220	5%	1/10W	R1865	1-216-473-11	METAL OXIDE METAL OXIDE	56 56	5% 5%	3W F 3W F
R1721	1-216-033-00	METAL GLAZE	220	5%	1/10 <b>W</b>	R1866 R1867	1-218-761-11	METAL CHIP	240K	0.50%	1/10W
R1737	1-216-033-00	METAL GLAZE	220	5%	1/10W	R1868	1-216-025-00	METAL GLAZE	100	5%	1/10W
R1740 R1748	1-216-025-00	METAL GLAZE METAL GLAZE	E 220	5% 5%	1/10 <b>W</b> 1/10 <b>W</b>	R1869		METAL CHIP	27K	0.50%	1/10W
R1749	1-216-295-00	CONDUCTOR,	CHIP	<i>E 01</i>	1/10W	R1870 R1871	1-216-685-11	METAL CHIP METAL CHIP	27K 27K	0.50% 0.50%	1/10W 1/10W
R1751	1-216-081-0	) METAL GLAZE	22K	5%	1/10 W	R1872	1-216-685-11	METAL CHIP	27K	0.50%	1/10W
R1752	1-216-073-0	METAL GLAZE	E 10K	5%	1/10W 1/10W	R1873	1-216-685-11	METAL CHIP	27K	0.50%	1/10W
R1753 R1760	1-216-073-0	) METAL GLAZE ) CONDUCTOR,	CHIP	5%	1/10**	R1874		METAL CHIP	27K	0.50%	1/10W 1/10W
R1788	1-216-675-1	1 METAL CHIP	10K	0.50% 5%	1/10W 1/10W	R1875 R1876	1-216-687-11	METAL CHIP METAL GLAZE	33 <b>K</b> 100	0.50% 5%	1/10W
R1801		METAL GLAZI				R1877	1-216-695-11	METAL CHIP	68K	0.50% 0.50%	1/10W 1/10W
R1802	1-216-049-0	0 METAL GLAZI	E IK	5%	1/10W	R1878	1-216-675-11	METAL CHIP	10K		
R1804 R1806	1-216-081-0	0 CONDUCTOR, 0 METAL GLAZI	E 22K	5%	1/10 <b>W</b>	R1879	1-216-685-11	METAL CHIP	27K 13K	0.50% 0.50%	1/10W 1/10W
R1807	1-216-077-0	0 METAL GLAZI 0 METAL GLAZI	E 15K	5% 5%	1/10 <b>W</b> 1/10 <b>W</b>	R1880 R1881	1-216-678-11	METAL CHIP METAL CHIP	1K	0.50%	1/10W
R1808						R1883	1-216-677-11	METAL CHIP	12K 10K	0.50% 0.50%	1/10W 1/10W
R1809	1-216-081-0	0 METAL GLAZI 0 METAL GLAZI	E 22K E 100K	5% 5%	1/10W 1/10W	R1884		METAL CHIP			
R1810 R1811	1-216-081-0	0 METAL GLAZ	E 22K	5%	1/10W	R1885	1-216-049-00	) METAL GLAZE ) METAL GLAZE	1 <b>K</b>	5% 5%	1/10W 1/10W
R1812	1-216-097-0	0 METAL GLAZI 0 METAL GLAZI	E 100K E 2.2K	5% 5%	1/10W 1/10W	R1886 R1887	1-216-675-1	METAL CHIP	10K	0.50%	1/10W
R1813						R1888	1-216-667-1	METAL CHIP METAL CHIP	4.7K 4.7K	0.50% 0.50%	1/10W 1/10W
R1815 R1816	1-218-762-1	1 METAL CHIP 0 METAL GLAZ	270K E 100K	0.50% 5%	1/10W 1/10W	R1889					
R1817	1-216-033-0	0 METAL GLAZ	E 220	5%	1/10W 1/10W	R1890 R1891	1-216-125-0	) METAL GLAZE I METAL CHIP	1.5M 10K	5% 0.50%	1/10W 1/10W
R1818 R1819	1-216-025-0 1-216-025-0	0 METAL GLAZ 0 METAL GLAZ	E 100 E 100	5% 5%	1/10W	R1892	1-216-061-0	METAL GLAZE	3.3K	5%	1/10W 1/10W
_				5%	1/10 <b>W</b>	R1893 R1894		0 METAL GLAZE 1 CARBON	4.7	5% 5%	1/4W F
R1820 R1821	1-216-025-0 1-216-097-0	00 METAL GLAZ 00 METAL GLAZ	E 100K	5%	1/10W	į				5%	1/10W
R1824	1-216-685-1	1 METAL CHIP	27K 27K	0.50% 0.50%	1/10 <b>W</b> 1/10 <b>W</b>	R1895 R1896	1-249-389-1	1 METAL GLAZE 1 CARBON	4.7	5%	1/4W F
R1825 R1826		1 METAL CHIP 11 METAL CHIP	27K 27K	0.50%		R1897	1-216-097-0	0 METAL GLAZE	100K	5% 5%	1/10W 1/10W
			27K	0.50%	1/10 <b>W</b>	R1898 R1899	1-216-057-0 1-216-097-0	0 METAL GLAZE 0 METAL GLAZE	2.2K E 100K	5%	1/10W
R1827 R1828		II METAL CHIP II METAL CHIP	27K	0.50%							



R1900   1-216-03-00 METAL GLAZE 200   5%   1/10W   1-216-03-00 METAL GLAZE 100   5%   1/10W   1/10W   1-216-03-00 METAL GLAZE 100   5%   1/10W   1/10W   1-216-03-00 METAL GLAZE 100   5%   1/10W   1/10W   1-216-03-00 METAL GLAZE 100   5%   1/10W   1-216-03-00 METAL GLAZE 100   5%   1/10W   1-216-03-00 METAL GLAZE 100   5%   1/10W   1-216-03-00 METAL GLAZE 100   1/10W   1/10	REF. NO.	PART NO.	DESCRIPTION		F	REMARK	REF. NO.	PART NO.	DESCRIPTION		F	REMARK
R1906 1-216-685-11 METAL CHIP 300K	R 1901 R 1902 R 1903	1-216-025-00 1-216-025-00 1-216-025-00	METAL GLAZE METAL GLAZE METAL GLAZE	100 100 100	5% 5% 5%	1/10W 1/10W 1/10W	*****		HA BOARD, C	OMPLETE	*****	*****
R1913   1-216-685-11 METAL CHIP   27K   0.50%   1/10W   1/10	R 1906 R 1908 R 1909	1-218-764-11 1-216-685-11 1-216-025-00	METAL CHIP METAL CHIP METAL GLAZE	330K 27K 100	0.50% 0.50% 5%	1/10W 1/10W 1/10W	C3034	1-101-005-00	CERAMIC CERAMIC	0.022MF	20%	50V
R1916   12-16-667-11   METAL CHIP   10K   0.50%   1/10W   1900   1-76-64-73-11   TERMINAL BLOCK, S 4P   1910   12-16-668-11   METAL CHIP   27K   0.50%   1/10W   1900   1-76-64-73-11   TERMINAL BLOCK, S 4P   1900   1-76-73-11   T	R1912 R1913 R1914	1-216-685-11 1-216-685-11 1-216-685-11	METAL CHIP METAL CHIP METAL CHIP	27K 27K 27K	0.50% 0.50% 0.50%	1/10W 1/10W 1/10W			PLUG, CONNEC	TOR 11P		
R1923   1-216-677-11 METAL CHIP   12K   0.50%   1/10W   1.200   1.2408-421-00   INDUCTOR 100UH   1.3001   1.408-421-00    R1917 R1918 R1919	1-216-675-11 1-216-667-11 1-216-685-11	METAL CHIP METAL CHIP METAL CHIP	10K 4.7K 27K	0.50% 0.50% 0.50%	1/10W 1/10W 1/10W			TERMINAL BLO	OCK, \$ 4P			
R1930 1 -216-689-11 METAL CHIP 39K 0.50% 1/10W R1931 1-216-679-11 METAL CHIP 39K 0.50% 1/10W R1935 1-218-766-11 METAL CHIP 10K 0.50% 1/10W R1935 1-218-766-11 METAL CHIP 10K 0.50% 1/10W R1930 1-216-679-11 METAL CHIP 10K 0.50% 1/10W R1940 1-216-679-11 METAL CHIP 10K 0.50% 1/10W R1940 1-216-679-11 METAL CHIP 10K 0.50% 1/10W R1941 1-216-675-11 METAL CHIP 10K 0.50% 1/10W R1942 1-216-675-11 METAL CHIP 10K 0.50% 1/10W R1942 1-216-675-11 METAL CHIP 10K 0.50% 1/10W R1942 1-216-675-11 METAL CHIP 10K 0.50% 1/10W R1942 1-216-675-11 METAL CHIP 10K 0.50% 1/10W R1941 1-216-699-10 METAL CHIP 22K 0.50% 1/10W R1949 1-216-659-11 METAL CHIP 10K 0.50% 1/10W R1950 1-216-659-11 METAL CHIP 10K 0.50% 1/10W R1950 1-216-675-11 METAL CHIP 10K 0.50% 1/10W R1950 1-216-659-11 METAL CHIP 10K 0.50% 1/10W R1950 1-216-675-11 METAL CHIP 10K 0.50% 1/10W R1950 1-216-675-11 METAL CHIP 10K 0.50% 1/10W R1950 1-216-675-11 METAL CHIP 10K 0.50% 1/10W R1950 1-216-675-11 METAL CHIP 10K 0.50% 1/10W R1950 1-216-675-11 METAL CHIP 10K 0.50% 1/10W R1950 1-216-675-11 METAL CHIP 10K 0.50% 1/10W R1950 1-216-675-11 METAL CHIP 10K 0.50% 1/10W R1950 1-216-675-11 METAL CHIP 10K 0.50% 1/10W R1950 1-216-699-11 METAL CHIP 56K 0.50% 1/10W R1950 1-216-699-11 METAL CHIP 56K 0.50% 1/10W R1950 1-216-699-11 METAL CHIP 56K 0.50% 1/10W R1950 1-216-699-11 METAL CHIP 56K 0.50% 1/10W R1950 1-216-699-11 METAL CHIP 56K 0.50% 1/10W R1950 1-216-699-11 METAL CHIP 56K 0.50% 1/10W R1950 1-216-699-11 METAL CHIP 56K 0.50% 1/10W R1950 1-216-699-11 METAL CHIP 56K 0.50% 1/10W R1950 1-216-699-11 METAL CHIP 56K 0.50% 1/10W R1950 1-216-699-11 METAL CHIP 56K 0.50% 1/10W R1950 1-216-699-11 METAL CHIP 56K 0.50% 1/10W R1950 1-216-699-11 METAL CHIP 56K 0.50% 1/10W R1950 1-216-699-11 METAL CHIP 56K 0.50% 1/10W R1950 1-216-699-11 METAL CHIP 56K 0.50% 1/10W R1950 1-216-699-11 METAL CHIP 56K 0.50% 1/10W R1950 1-216-699-11 METAL CHIP 56K 0.50% 1/10W R1950 1-216-699-11 METAL CHIP 56K 0.50% 1/10W R1950 1-216-699-11 METAL CHIP 56K 0.50% 1/10W R1950 1-216-699-11 METAL CHIP 56K 0.50% 1/10W R1950 1-216-699-11 ME	R 1923 R 1925 R 1926	1-216-677-11 1-216-031-00 1-216-675-11	METAL CHIP METAL GLAZE METAL CHIP	12K 180 10K	0.50% 5% 0.50%	1/10W 1/10W 1/10W			INDUCTOR 100			
R1938 1-216-679-11 METAL CHIP 15K 0.50% 1/10W R1940 1-216-677-11 METAL CHIP 10K 0.50% 1/10W R1941 1-216-675-11 METAL CHIP 10K 0.50% 1/10W R3011 1-249-415-11 CARBON 1K 5% 1/4W R1942 1-216-675-11 METAL CHIP 10K 0.50% 1/10W R3011 1-249-415-11 CARBON 680 5% 1/4W R1942 1-216-675-11 METAL CHIP 10K 0.50% 1/10W R3013 1-249-419-11 CARBON 1.5K 5% 1/4W R1942 1-216-675-11 METAL CHIP 10K 0.50% 1/10W R3013 1-249-419-11 CARBON 1.5K 5% 1/4W R1942 1-216-605-00 METAL GLAZE 15K 5% 1/10W R3036 1-249-409-11 CARBON 220 5% 1/4W R1950 1-216-655-11 METAL CHIP 2.2K 0.50% 1/10W R1950 1-216-655-11 METAL CHIP 10K 0.50% 1/10W R1951 1-216-675-11 METAL CHIP 10K 0.50% 1/10W R1954 1-216-675-11 METAL CHIP 10K 0.50% 1/10W R1955 1-216-675-11 METAL CHIP 10K 0.50% 1/10W R1955 1-216-605-11 METAL CHIP 56K 0.50% 1/10W R1956 1-216-675-11 METAL CHIP 56K 0.50% 1/10W R1950 1-216-675-11 METAL CHIP 56K 0.50% 1/10W R1950 1-216-675-11 METAL CHIP 10K 0.50% 1/10W R1950 1-216-675-11 METAL CHIP 56K 0.50% 1/10W R1950 1-216-675-11 METAL CHIP 10K 0.50% 1/10W R1950 1-216-675-	R 1929 R 1931 R 1935	1-216-685-11 1-216-689-11 1-218-766-11	METAL CHIP METAL CHIP METAL CHIP	27K 39K 390K	0.50% 0.50% 0.50%	1/10W 1/10W 1/10W	R3008	1-249-422-11	CARBON CARBON	2.7K	5%	1/4 <b>W</b>
R1947 1-216-073-10 METAL CHIZ 10K	R1940 R1941	1-216-677-11 1-216-675-11 1-216-675-11	METAL CHIP METAL CHIP METAL CHIP	12K 10K 10K	0.50% 0.50% 0.50%	1/10W 1/10W 1/10W	R3010 R3011 R3012	1-249-417-11 1-249-415-11 1-249-419-11	CARBON CARBON	1K 680 1.5K	5% 5% 5%	1/4W 1/4W 1/4W
R1950   1-216-635-11   METAL CHIP   10K   0.50%   1/10W   1/10W   1-216-675-11   METAL CHIP   10K   0.50%   1/10W	R1947 R1948 R1949	1-216-077-00 1-216-095-00 1-216-659-11	METAL GLAZE METAL GLAZE METAL CHIP	15K 82K 2.2K	5% 5% 0.50%	1/10W 1/10W 1/10W	R3036 R3037 R3038	1-249-409-11 1-249-409-11 1-249-409-11	CARBON CARBON CARBON	220 220 220	5% 5% 5%	1/4W 1/4W 1/4W
R1956 1-216-669-11 METAL CHIP 56K 0.50% 1/10W S3010 1-571-731-11 SWITCH, TACTIL S3011 1-571-731-11 SWITCH, TACTIL S3012 1-571-731-11 SWITCH, T	R1951 R1952 R1954	1-216-675-11 1-216-675-11 1-216-675-11	METAL CHIP METAL CHIP METAL CHIP	10K 10K 10K	0.50% 0.50% 0.50%	1/10W 1/10W 1/10W			<switch></switch>		3 70	
R1960 1-216-675-11 METAL CHIP 10K 0.50% 1/10W R1961 1-216-675-11 METAL CHIP 10K 0.50% 1/10W R1962 1-216-077-00 METAL GLAZE 15K 5% 1/10W R1963 1-216-073-00 METAL GLAZE 10K 5% 1/10W R1965 1-216-073-00 METAL GLAZE 10K 5% 1/10W R1966 1-216-073-00 METAL GLAZE 10K 5% 1/10W R1966 1-216-073-00 METAL GLAZE 10K 5% 1/10W R1967 1-216-073-00 METAL GLAZE 10K 5% 1/10W R1967 1-216-073-00 METAL GLAZE 10K 5% 1/10W R1981 1-216-651-11 METAL CHIP 1K 0.50% 1/10W R1981 1-216-473-11 METAL OXIDE 56 5% 3W F R1982 1-216-473-11 METAL OXIDE 56 5% 3W F R1982 1-216-473-11 METAL OXIDE 56 5% 3W F R1985 1-216-025-00 METAL GLAZE 100 5% 1/10W R1981 1-216-025-00 METAL GLAZE 100 5% 1/10W CONNECTOR>  TH1501 1-800-193-00 THERMISTOR TH1801 8-719-991-33 DIODE 1SS133T-77 CDIODE	R1956 R1957 R1958	1-216-669-11 1-216-693-11 1-216-669-11	METAL CHIP METAL CHIP METAL CHIP	5.6K 56K 5.6K	0.50% 0.50% 0.50%	1/10W 1/10W 1/10W	S3010 S3011 S3012	1-571-731-11 1-571-731-11 1-571-731-11	SWITCH, TACT SWITCH, TACT SWITCH, TACT	TIL TIL TIL		
R1964 1-216-049-00 METAL GLAZE 1K 5% 1/10W R1965 1-216-073-00 METAL GLAZE 10K 5% 1/10W R1966 1-216-073-00 METAL GLAZE 10K 5% 1/10W R1967 1-216-071-00 METAL GLAZE 8.2K 5% 1/10W R1967 1-216-651-11 METAL CHIP 1K 0.50% 1/10W R1981 1-216-473-11 METAL OXIDE 56 5% 3W F R1982 1-216-473-11 METAL OXIDE 56 5% 3W F R1985 1-216-025-00 METAL GLAZE 100 5% 1/10W R1985 1-216-025-00 METAL GLAZE 100 5% 1/10W  CONNECTOR>  TH1501 1-800-193-00 THERMISTOR TH1801 8-719-991-33 DIODE 1SS133T-77  CN3002 *1-564-523-11 PLUG, CONNECTOR 8P  D3002 8-719-812-41 DIODE TLR124 D3003 8-719-812-41 DIODE TLR124 D3003 8-719-812-41 DIODE TLR124	R1960 R1961 R1962	1-216-675-11 1-216-675-11 1-216-077-00	METAL CHIP METAL CHIP METAL GLAZE	10K 10K 15K	0.50% 0.50% 5%	1/10W 1/10W 1/10W	******					*****
R1981 1-216-473-11 METAL OXIDE 56 5% 3W F R1982 1-216-473-11 METAL OXIDE 56 5% 3W F R1985 1-216-025-00 METAL GLAZE 100 5% 1/10W   CONNECTORS  TH1501 1-800-193-00 THERMISTOR TH1801 8-719-991-33 DIODE ISS133T-77  CRYSTALS  D3002 8-719-812-41 DIODE TLR124 D3003 8-719-812-41 DIODE TLR124 D3003 8-719-812-41 DIODE TLR124	R1964 R1965 R1966	1-216-049-00 1-216-073-00 1-216-073-00	) METAL GLAZE ) METAL GLAZE ) METAL GLAZE	1K 10K 10K	5% 5% 5%	1/10W 1/10W 1/10W			********			
<thermistor>         TH1501 1-800-193-00 THERMISTOR TH1801 8-719-991-33 DIODE 1SS133T-77       CN3002 *1-564-523-11 PLUG, CONNECTOR 8P         CN3002 *1-564-523-11 PLUG, CONNECTOR 8P       **OIODE&gt;         CN3002 *1-564-523-11 PLUG, CONNECTOR 8P       **DIODE&gt;         CN3002 *1-564-523-11 PLUG, CONNECTOR 8P       **DIODE TLR124         CN3002 *1-564-523-11 PLUG, CONNECTOR 8P       **DIODE TLR1</thermistor>	R1981 R1982	1-216-473-11 1-216-473-11	METAL OXIDE  METAL OXIDE	56 56	5% 5%	3W F 3W F	C3012	1-126-157-11			20%	16V
TH1501 1-800-193-00 THERMISTOR TH1801 8-719-991-33 DIODE ISS133T-77  CRYSTAL>  CN3002 *1-564-523-11 PLUG, CONNECTOR 8P  CN3002 *1-564-523-11 PLUG, CONNECTOR 8P  CN3002 *1-564-523-11 PLUG, CONNECTOR 8P  CN3002 *1-564-523-11 PLUG, CONNECTOR 8P  CN3002 *1-764-523-11 PLUG, CONNECTOR 8P			THERMISTOR						<connector:< td=""><td>&gt;</td><td></td><td></td></connector:<>	>		
<pre></pre>			THERMISTOR				CN3002	* 1-564-523-11	PLUG, CONNEC	CTOR 8P		
D3003 8-719-812-41 DIODE TLR124	TH1801	8-719-991-33	3 DIODE ISS133T	-11					<diode></diode>			
	X1701	1-579-917-1		YSTAL			D3003	8-719-812-41	DIODE TLR124			

The componants identified by shading and mark A are critical for safety. Replace only with part number specified.

Les composants identifies par une trame et une marque 🛆 sont critiques pour la securite. Ne les remplacer que par une piece portant le numero specifie.



REF. NO.	PART NO.	DESCRIPTION			REMARK	REF. NO.	PART NO.	DESCRIPTION			REMARK
IC3001	8-741-780-51	<ic> IC SBX1780-51</ic>				C2041 C2042 C2044 C2045	1-126-965-11 1-126-967-11 1-164-005-11 1-164-005-11 1-126-960-11	ELECT CERAMIC CHIP CERAMIC CHIP	22MF 47MF 0.47MF 0.47MF 1MF	20% 20% 20%	50V 16V 25V 25V 50V
		<resistor></resistor>				C2048 C2049		CERAMIC CHIP		20%	25V
R3001 R3002 R3003 R3004	1-249-413-11 1-249-425-11 1-249-422-11 1-249-419-11	CARBON CARBON CARBON	470 4.7K 2.7K 1.5K	5% 5% 5%	1/4W 1/4W 1/4W 1/4W	C2051 C2062 C2067 C2070	1-126-960-11 1-126-933-11 1-101-004-00 1-126-933-11	ELECT ELECT CERAMIC	1MF 100MF 0.01MF 100MF	20% 20% 20%	50V 16V 50V 16V
R3005	1-249-417-11		1K	5% 5%	1/4W 1/4W	C2071 C2073	1-126-960-11 1-126-960-11		IMF IMF	20% 20%	50V 50V
R3006	1-249-415-11	<switch></switch>	680	370	1/4 W	C2074 C2075 C2076	1-126-935-11 1-126-960-11 1-126-935-11	ELECT ELECT	470MF 1MF 470MF	20% 20% 20%	16V 50V 16V
\$3004 \$3005 \$3006 \$3007 \$3008	1-571-731-11 1-571-731-11 1-571-731-11	SWITCH, TACT SWITCH, TACT SWITCH, TACT SWITCH, TACT SWITCH, TACT	IL IL IL			C2077 C2078 C2079 C2081 C2082	1-126-967-11 1-163-031-11 1-126-960-11 1-126-967-11 1-126-967-11	CERAMIC CHIP ELECT ELECT	47MF 0.01MF 1MF 47MF 47MF	20% 20% 20% 20%	16V 50V 50V 16V 16V
		**************			****	C2083 C2084 C2085 C2086 C2100	1-163-031-11 1-126-960-11 1-126-933-11 1-126-967-11 1-126-959-11	ELECT ELECT	0.01MF 1MF 100MF 47MF 0.47MF	20% 20% 20% 20%	50V 50V 16V 16V 50V
	11 10 10 157 2	********	******	•		C2102	1-126-959-11	ELECT	0.47 <b>M</b> F	20%	50V
		<connector></connector>	•					<connector></connector>			
CN3061 *1-580-689-11 PIN, CONNECTOR (PC BOARD) 4P CN3062 *1-691-291-11 PIN, CONNECTOR (PC BOARD) 5P				P P	CN2001 *1-566-641-11 CONNECTOR, HINGE (TAB) 18P CN2002 *1-566-641-11 CONNECTOR, HINGE (TAB) 18P CN2003 *1-564-526-11 PLUG, CONNECTOR 11P CN2004 *1-564-519-11 PLUG, CONNECTOR 4P						
<switch> \$3061</switch>				CN2004 CN2008	* 1-564-519-11 * 1-564-519-11	PLUG, CONNEC	TOR 4P				
53001 2	V 1-697-732-11	SWIICH, FUSH	(ACION	DK)(1 Ki	<i>-1</i>			<diode></diode>			
		**************************************	MPLETE	*****	*****	D2001 D2002 D2003 D2004 D2005	8-719-110-12 8-719-110-12 8-719-110-12	DIODE RD9.1ES DIODE RD9.1ES DIODE RD9.1ES DIODE RD9.1ES DIODE RD9.1ES	3B1 3B1 3B1		
		<capacitor></capacitor>				D2006 D2007	8-719-110-12 8-719-110-12	DIODE RD9.1ES	SB 1 SB 1		
C2001 C2002 C2007 C2008	1-126-935-11 1-164-005-11 1-126-967-11 1-126-965-11	CERAMIC CHIF ELECT	470MF 0.47MF 47MF 22MF	20% 20% 20%	16V 25V 16V 50V	D2008 D2009 D2010	8-719-110-12 8-719-110-12	DIODE RD9.1ES DIODE RD9.1ES DIODE RD9.1ES	SB I SB I		
C2009	1-164-005-11	CERAMIC CHIE	0.47MF		25V	D2011 D2012	8-719-110-12	DIODE RD9.1ES	SBI		
C2010 C2011 C2012 C2013	1-126-960-11 1-126-960-11 1-126-933-11 1-126-933-11	ELECT ELECT	1MF 1MF 100MF 100MF	20% 20% 20% 20%	50V 50V 16V 16V	D2013 D2014 D2015	8-719-110-12	DIODE RD9.1ES DIODE RD9.1ES	SB 1		
C2014	1-101-004-00	CERAMIC	0.01MF		50V	D2016 D2017	8-719-110-12	DIODE RD9.1ES	SBI		
C2015 C2016 C2019 C2020	1-126-967-11 1-163-031-11 1-126-967-11	CERAMIC CHII ELECT	47MF P 0.01MF 47MF	20%	50V 16V 50V 16V	D2018 D2019 D2020	8-719-110-12 8-719-110-12	DIODE RD9.1ES DIODE RD9.1ES DIODE RD9.1ES	SB1 SB1		
C2021 C2022	1-126-965-1		22MF 1MF	20% 20%	50V 50V	D2021 D2022 D2023	8-719-110-12	DIODE RD9.1ES DIODE RD9.1ES	SB1		
C2023 C2027 C2029	1-101-004-00 1-126-960-1 1-163-243-1	) CERAMIC   ELECT   CERAMIC CHII	0.01MF 1MF P 47PF	20% 5%	50V 50V 50V 50V	D2024 D2027 D2028	8-719-110-12	DIODE 1SS226 DIODE RD9.1ES DIODE RD9.1ES			
C2030 C2031	1-126-965-1		22MF 47MF 0.01MF	20% 20%	16V 50V	D2028 D2030 D2031 D2032	8-719-110-12 8-719-110-12	DIODE RD9.1ES DIODE RD9.1ES DIODE RD9.1ES	SB1 SB1		
C2032 C2033 C2034 C2036	1-163-031-1	I CERAMIC CHI	P 0.01MF	20%	50V 50V 16V	D2033 D2034	8-719-110-12 8-719-110-12	DIODE RD9.1ES  DIODE RD9.1ES	SB1 SB1		
						D2035	0-/17-110-12	DIODE RD9.1E	וענ		



REF. NO.	PART NO.	DESCRIPTION	REMARK	REF. NO.	PART NO.	DESCRIPTION		REMARK
D2036 D2037 D2038	8-719-403-00	DIODE MA3240-TX DIODE MA3240-TX DIODE RD9.1ESB1		R2024 R2025 R2028	1-216-025-91	METAL GLAZE 75 METAL GLAZE 100 METAL GLAZE 1.5K	5% 5% 5%	1/10W 1/10W 1/10W
D2039	8-719-110-12	DIODE RD9.1ESB1		R2029 R2030 R2032 R2033	1-216-069-00 1-216-073-00 1-216-025-91	METAL GLAZE 2.7K METAL GLAZE 6.8K METAL GLAZE 10K METAL GLAZE 100	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W
IC2001	8-752-068-46	IC CXA1855S		R2035		METAL GLAZE 75		
		<jack></jack>		R2036 R2037 R2038 R2039 R2041	1-216-025-91 1-216-101-00 1-216-065-00	METAL GLAZE 100 METAL GLAZE 100 METAL GLAZE 150K METAL GLAZE 4.7K METAL GLAZE 100	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W
J2001 J2002 J2003	1-573-968-11	BLOCK, (S) TERMINAL BLOCK, (S) TERMINAL JACK BLOCK, PIN 2P		R2044 R2045 R2046	1-216-025-91 1-216-025-91 1-216-059-00	METAL GLAZE 100 METAL GLAZE 100 METAL GLAZE 2.7K	5% 5% 5%	1/10W 1/10W 1/10W 1/10W
		<chip conductor=""></chip>		R2047 R2049	1-216-033-00 1-216-101-00	METAL GLAZE 220 METAL GLAZE 150K	5% 5%	1/10W 1/10W
JR001 JR002	1-216-295-91 1-216-295-91	CONDUCTOR, CHIP CONDUCTOR, CHIP <coil></coil>		R2050 R2051 R2052 R2053	1-216-025-91 1-216-025-91 1-216-049-91	METAL GLAZE 4.7K METAL GLAZE 100 METAL GLAZE 100 METAL GLAZE 1K	5% 5% 5%	1/10W 1/10W 1/10W 1/10W
				R2056	1-216-049-91	METAL GLAZE 1K	5%	1/10W
L2001		INDUCTOR 100UH <transistor></transistor>		R2057 R2058 R2060 R2061	1-216-022-00 1-216-059-00 1-216-069-00	METAL GLAZE 220 METAL GLAZE 75 METAL GLAZE 2.7K METAL GLAZE 6.8K	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W
Q2006 Q2007 Q2009 Q2011 Q2014	8-729-230-49 8-729-230-49 8-729-216-22 8-729-230-49	TRANSISTOR 2SC2712-YG-TE85 TRANSISTOR 2SC2712-YG-TE85 TRANSISTOR 2SC2712-YG-TE85 TRANSISTOR 2SA1162-G TRANSISTOR 2SC2712-YG-TE85	iL iL	R2064 R2066 R2073 R2074 R2078	1-216-073-00 1-216-022-00 1-216-065-00 1-216-101-00	METAL GLAZE 75  METAL GLAZE 10K  METAL GLAZE 75  METAL GLAZE 4.7K  METAL GLAZE 150K  METAL GLAZE 4.7K	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W
Q2016 Q2022 Q2027 Q2028 Q2029	8-729-230-49 8-729-230-49 8-729-230-49 8-729-230-49	TRANSISTOR 2SA1162-G TRANSISTOR 2SC2712-YG-TE85 TRANSISTOR 2SC2712-YG-TE85 TRANSISTOR 2SC2712-YG-TE85 TRANSISTOR 2SC2712-YG-TE85	SL SL SL	R2079 R2080 R2083 R2087 R2088	1-216-069-00 1-216-051-00 1-216-101-00 1-216-065-00	METAL GLAZE 6.8K METAL GLAZE 1.2K METAL GLAZE 150K METAL GLAZE 4.7K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W
Q2030 Q2031 Q2032 Q2033 Q2034	8-729-230-49 8-729-216-23	TRANSISTOR 2SC2712-YG-TE8: TRANSISTOR 2SC2712-YG-TE8: TRANSISTOR 2SA1162-G TRANSISTOR 2SC2712-YG-TE8: TRANSISTOR 2SC2712-YG-TE8:	SL SL	R2089 R2090 R2092 R2096 R2097	1-216-025-9 1-216-025-9 1-216-022-0 1-216-067-0	METAL GLAZE 1.2K  METAL GLAZE 100  METAL GLAZE 100  METAL GLAZE 75  METAL GLAZE 5.6K	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W
Q2035 Q2036 Q2038 Q2039 Q2040	8-729-230-4 8-729-216-2 8-729-027-2	9 TRANSISTOR 2SC2712-YG-TE8: 9 TRANSISTOR 2SC2712-YG-TE8: 2 TRANSISTOR 2SA1162-G 3 TRANSISTOR DTA114EKA-T14: 9 TRANSISTOR 2SC2712-YG-TE8:	5L 6	R2104 R2114 R2116 R2119 R2122	1-216-067-0 1-216-059-0 1-216-073-0 1-216-022-0 1-216-113-0	0 METAL GLAZE 5.6K 0 METAL GLAZE 2.7K 0 METAL GLAZE 10K 0 METAL GLAZE 75 0 METAL GLAZE 470K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W
Q2041 Q2043	8-729-027-2 8-729-230-4	3 TRANSISTOR DTA114EKA-T14 9 TRANSISTOR 2SC2712-YG-TE8	6 5L	R2123 R2125 R2126	1-216-113-0	1 METAL GLAZE 1K 0 METAL GLAZE 470K 1 METAL GLAZE 1K	5% 5% 5%	1/10W 1/10W 1/10W
		<resistor></resistor>		R2127 R2128	1-216-025-9 1-216-049-9	1 METAL GLAZE 100 1 METAL GLAZE 1K	5% 5%	1/10W 1/10W
R2001 R2002 R2003 R2004 R2005	1-216-113-0 1-216-022-0 1-216-022-0	0 METAL GLAZE 470K 5% 0 METAL GLAZE 470K 5% 0 METAL GLAZE 75 5% 0 METAL GLAZE 75 5% 1 METAL GLAZE 100 5%	1/10W 1/10W 1/10W 1/10W 1/10W	R2129 R2130 R2131 R2132 R2133	1-216-021-0 1-216-025-9 1-216-021-0	1 METAL GLAZE 100 0 METAL GLAZE 68 1 METAL GLAZE 100 0 METAL GLAZE 68 0 METAL GLAZE 470K	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W
R2006 R2007 R2009 R2010 R2012	1-216-067-0 1-247-807-3 1-216-025-9	1 METAL GLAZE 100 5% 0 METAL GLAZE 5.6K 5% 1 CARBON 100 5% 1 METAL GLAZE 100 5% 1 METAL GLAZE 100 5%	1/10W 1/10W 1/4W 1/10W 1/10W	R2134 R2135 R2136 R2137 R2138	1-216-113-0 1-216-025-9 1-216-033-0 1-216-025-9 1-216-049-9	0 METAL GLAZE 470K 01 METAL GLAZE 100 10 METAL GLAZE 220 11 METAL GLAZE 100 11 METAL GLAZE 1K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W
R2013 R2014 R2015 R2016 R2019	1-216-025-9 1-216-067-0 1-216-295-9 1-216-025-9	0 METAL GLAZE 75 5% 1 METAL GLAZE 100 5% 10 METAL GLAZE 5.6K 5% 11 CONDUCTOR, CHIP 11 METAL GLAZE 100 5% 12 METAL GLAZE 100 5%	1/10W 1/10W 1/10W 1/10W	R2139 R2140 R2141 R2142 R2143 R2144	1-216-174-0 1-216-184-0 1-216-033-0 1-216-021-0	METAL GLAZE 1K  METAL GLAZE 100  METAL GLAZE 270  METAL GLAZE 220  METAL GLAZE 68  METAL GLAZE 470K	5% 5% 5% 5% 5% 5%	1/10W 1/8W 1/8W 1/10W 1/10W
R2023	1-216-049-9	1 METAL GLAZE 1K 5%	1/10W	1				

Les composants identifies par une trame et une marque 🛦

DEMADE

The componants identified by shading and mark  $\triangle$  are critical for safety. sont critiques pour la securite. Ne les remplacer que par une cai for safety. Replace only with part number piece portant le numero specifie

DESCRIPTION RE specified. REF. NO. PART NO. DESC

REF. NO.	PART NO.	DESCRIPTION		REMARK
R2145	1_216_049-91	METAL GLAZE 1K	5%	1/10W
R2146		METAL GLAZE 10K	5%	1/10W
		METAL GLAZE 120	5%	1/8W
R2147			370	1/0 **
R2148	1-216-295-91		5%	1/1/0337
R2149	1-216-113-00	METAL GLAZE 470K	376	1/10W
R2150	1-216-049-91	METAL GLAZE 1K	5%	1/10 <b>W</b>
R2151	1-216-049-91	METAL GLAZE 1K	5%	1/10W
R2152		METAL GLAZE 2.2K	5%	1/10W
R2152	1-216-049-91		5%	1/10W
		METAL GLAZE 1R	5%	1/10W
R2154	1-210-041-00	METAL GLAZE 4/0	370	1/10W
R2155	1-216-065-00	METAL GLAZE 4.7K	5%	1/10W
R2156	1-216-113-00	METAL GLAZE 470K	5%	1/10W
R2157	1-216-049-91	METAL GLAZE 1K	5%	1/10W
R2158		METAL GLAZE 1K	5%	1/10W
R2159		METAL GLAZE 1K	5%	1/10W
K2139	1-210-045-51	WEIAE GEAZE IK	370	171011
R2162	1-216-083-00	METAL GLAZE 27K	5%	1/10W
R2164		METAL GLAZE 100K	5%	1/10W
R2165		METAL GLAZE 2.2K	5%	1/10W
R2166	1-216-049-91		5%	1/10W
		METAL GLAZE 1R METAL GLAZE 470	5%	1/10W
R2167	1-216-041-00	METAL GLAZE 4/0	370	1/10W
R2173	1-216-023-00	METAL GLAZE 82	5%	1/10W
R2179	1-216-057-00	METAL GLAZE 2.2K	5%	1/10W
R2180		METAL GLAZE 75	5%	1/10W
R2181		METAL GLAZE 470	5%	1/10W
R2189		METAL GLAZE 470K	5%	1/10W
K2107	1-210-113-00	WETAE GEAZE 470K	370	171011
R2190	1-216-049-91	METAL GLAZE 1K	5%	1/10W
R2195		METAL GLAZE 470K	5%	1/10W
R2196	1-216-049-91		5%	1/10W
R2218	1-216-049-91		5%	1/10W
		METAL GLAZE 1K	5%	1/10W
R2219	1-210-049-91	METAL GLAZE IK	370	1710W
R2220	1-216-049-91		5%	1/10W
R2221	1-216-049-91	METAL GLAZE 1K	5%	1/10 <b>W</b>
R2222	1-216-022-00	METAL GLAZE 75	5%	1/10W
		<switch></switch>		
S2001	1-572-084-11	SWITCH, SLIDE		
		<terminal board=""></terminal>		
TB2001	1-537-712-11	TERMINAL, PUSH		
*****	*****	*******	*****	*****

### MISCELLANEOUS

<u> ∆ 1-223-925-11</u> RESISTOR ASSY (HIGH-VOLTAGE)	1
1-251-249-11 DISTRIBUTOR, RF	į
Δ 1-452-790-11 NECK ASSY Δ 1-452-790-21 NECK ASSY	i
1-505-703-11 SPEAKER (5CM)	



				DEMARK
	REF. NO.	PART NO.	DESCRIPTION	REMARK
			SPEAKER (16CM)	
	'	* 1-555-400-00	ADARTOD CONSTERS	SION 2P
			/KP_F6IM	HITCHENE PERMITTI
	1	1-574-358-11	CORD DOUGED (IJTT)	I CONNECTURI
	Action Company and Company			
	4	1-690-270-21	CORD, POWER (WITH	H ( I(ME)/KP-E61MNI I)
	, A	1-769-609-21	CORD, POWER (WIT)	(KP-E61MH11(HK))
		1 000 000 EB	CONNECTOR ASSY	
		1-900-902-38	KP-F61MH11(ME)/KP-	E61MN11/KP-E61SN11)
		1 000 000 67	CONINTECTOD A CCY	
			KP-E61MH11(ME)/KP-	E61MN11/KP-E61SN11)
		1-900-902-68	CONNECTOR ASSY	E61MN11/KP-E61SN11)
		1 000 000 60	CONTRECTOR A CCY	
		(	KP-E61MH11(ME)/KP	E61MN11/KP-E61SN11)
		0 /F1 //2 1A	DEFLECTION YOKE	VR29PA2N (R) (G)
		9_451_463_99		TOTAL (PA)
į	CHICAGO CONTRACTOR CONTRACTOR	0.400.045.11	BLOCK ASSY HIGH	VULIAUD
		<b>18.733.507.05</b>	PICTURE TUBE 07M	SLAKD)
	Δ	8-733-509-05	PICTURE TUBE 07M	AC2 (G)
	*******	******	*******	*******
		A COTTOO DI	ES AND PACKING MA	TERIALS
		*********	**************************************	*****
			. n. nmon. co. 13/ED	SION 2P
		1-569-008-11	ADAPTOR, CONVER	1H11(ME)/KP-E61MN11)
		3-858-447-11	MANUAL, INSTRUC	TION
		* 4-030-895-01	JOINT	
		* 4-055-673-01 4-058-951-01	SHEET, PROTECTIO	ASSY) (KP-E61MH11(HK))
		4-036-931-01		
		4-058-952-01	CUSHION (LOWER)	(ASSY) (KP-E61MH11(HK))
		4-058-953-01	CUSHION (LEFT UP) CUSHION (RIGHT U	PPER) (KP-E0!MITH(IIK))
		4-058-955-01		
		4-058-956-01	CUSHION (RIGHT L	OWER) (KP-E61MH11(HK))
		4-058-957-01 4-058-958-01	TRAY (KP-E61MH11	ON (KP-E61MH11(HK)) (HK))
		4-058-959-01	DOADD TOD/KP_FA	IMHII(HK))
		4-058-960-01	BOARD, BOTTOM (	<pre><p-e61mh11(hk))< pre=""></p-e61mh11(hk))<></pre>
ŧ		* 4-059-461-01	BAG, PROTECTION	
	!			

#### REMOTE COMMANDER

1-473-841-11 REMOTE COMMANDER (RM-901) 9-905-614-01 POCKET, COVER (FOR RM-901)

#### KP-E61MH11/E61MN11/E61SN11

RM-901

RM-901

RM-9

Sony Corporation
Display Company
Quality Assurance Department
Service Promotion Section

English 97FR70199-1 Printed in Belgium © 1997. 6

9-965-156-01